



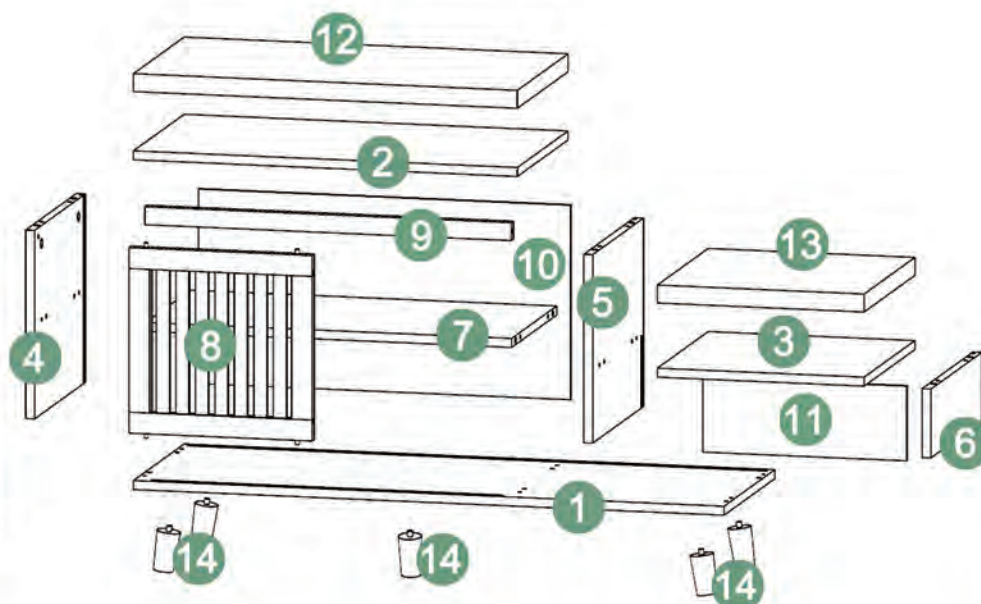

2021-01

FSR125

SoBuy®

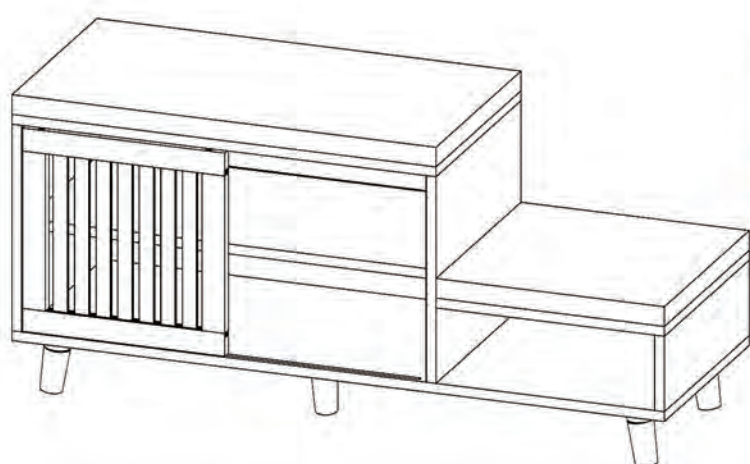

TOOLS:



UNIT:MM

1



1000×350×15

2



650×350×15

3



350×350×15

4




350×315×15

5



350×315×15

6

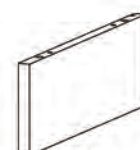

350×115×15


7



620×310×15

UNIT:MM

8

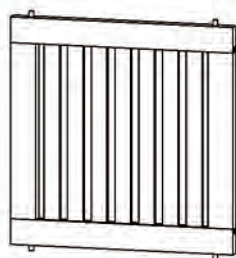


310×310×15

9



620×30×15

10

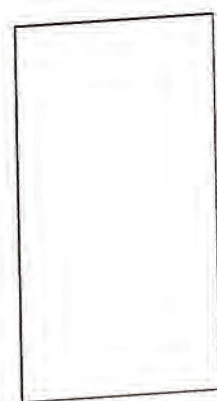

630×325×5

11



347×125×5

12



650×350×30

13



350×350×30

14

×5




φ 38× φ 32× 66

UNIT:MM

A

×5

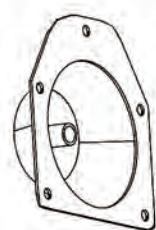

B

×12



M6×35

C

×12



φ 15×12

D

×20



φ 6×30

E

×9



M4×35

F

×25



M3.5×12

G

×4



H

×4





M3×14



Pour en savoir plus:
www.quefairedemesdechets.fr

Stand:11.2021

BOLT INSTALLATION AS BELOW:

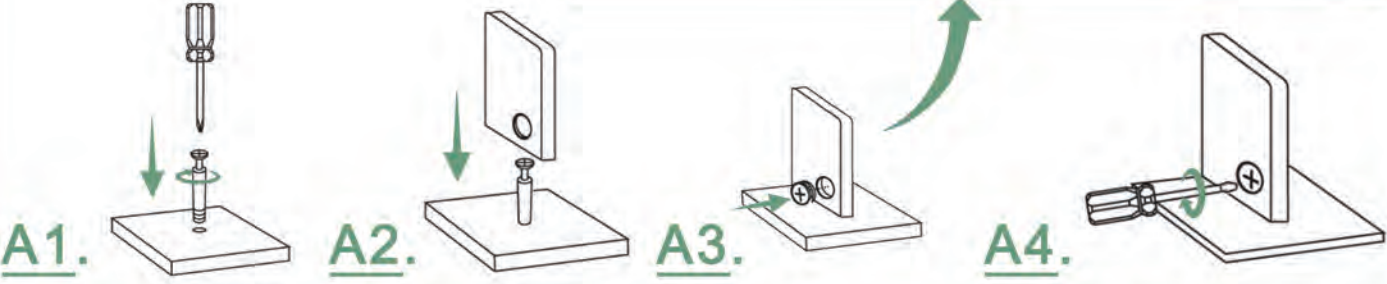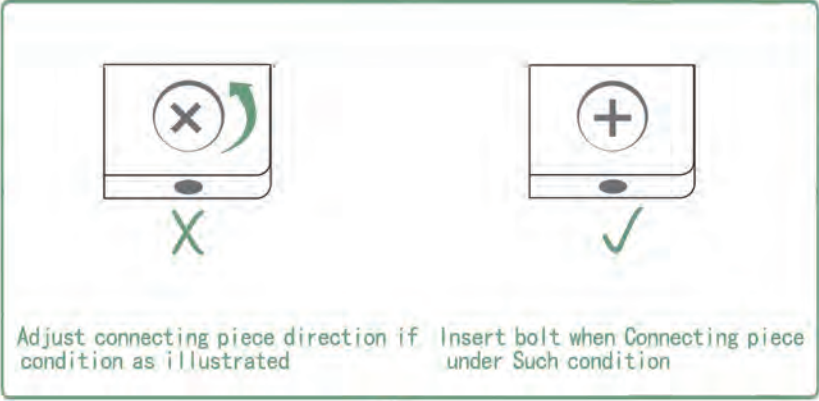


1.

2.



BACKPLATE BUCKLE INSTALLATION AS BELOW:




B1.

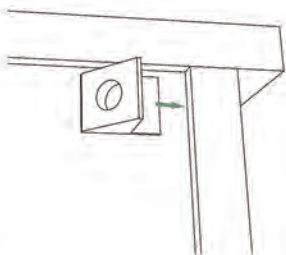



B2.

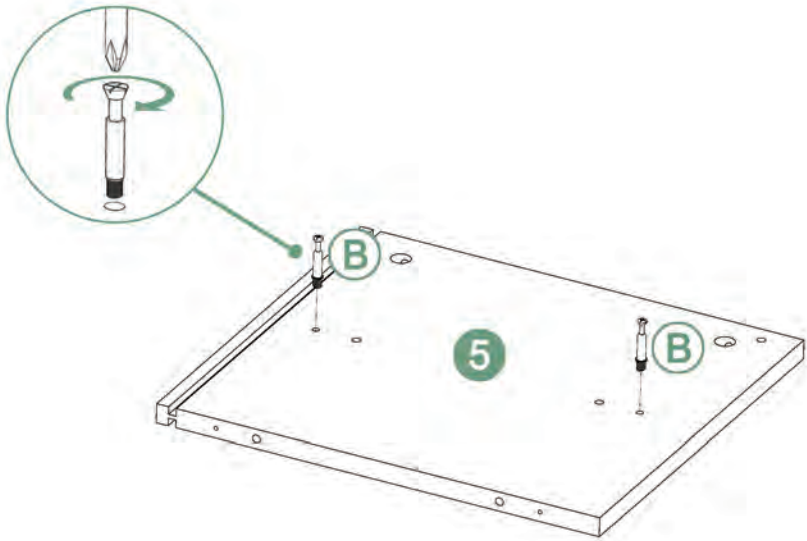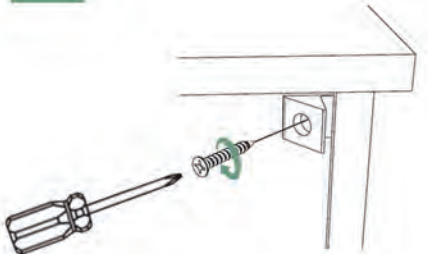


3.

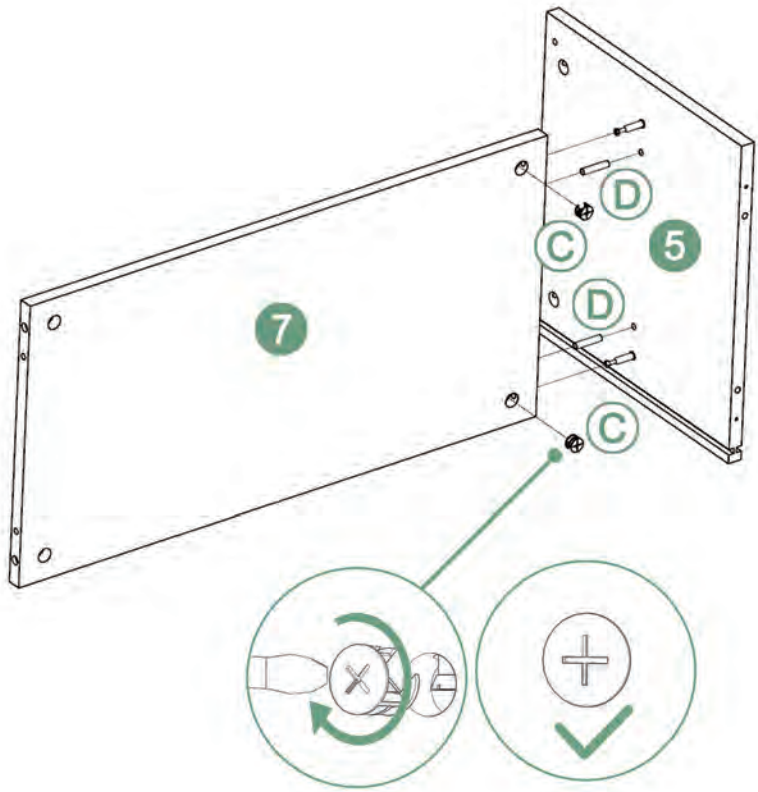


4.

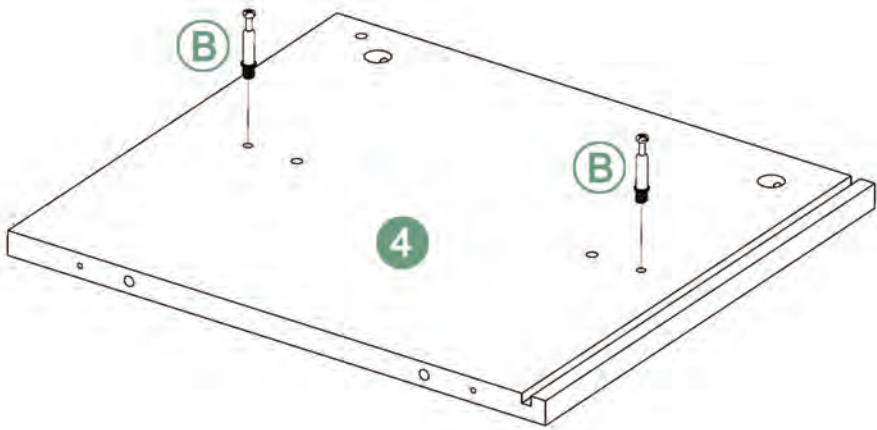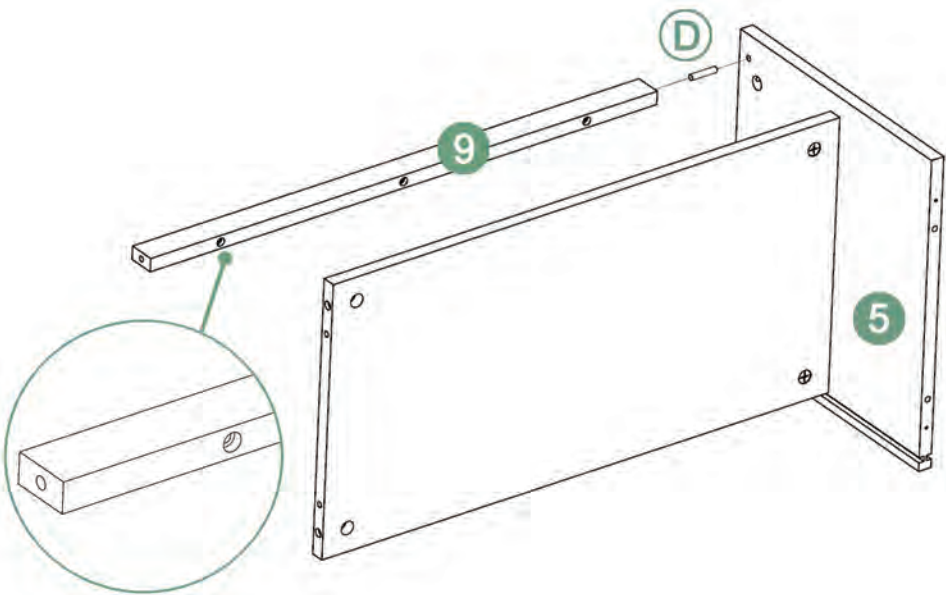


5.

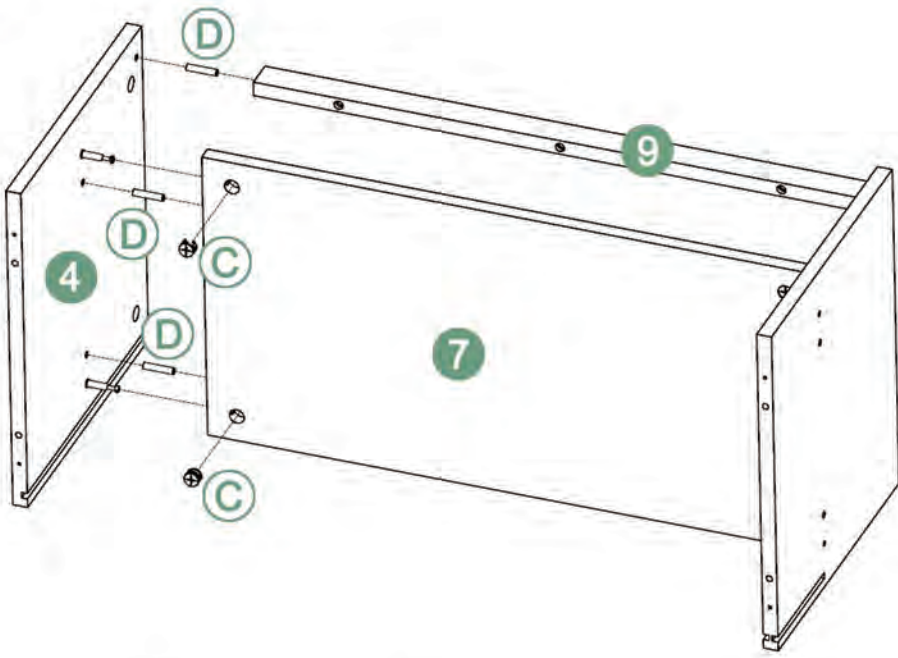


6.

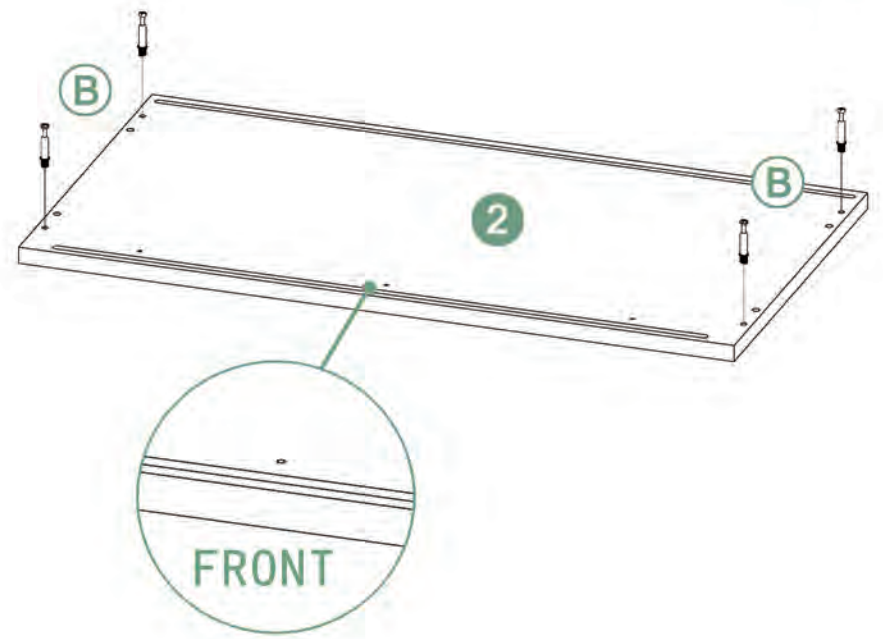


7.

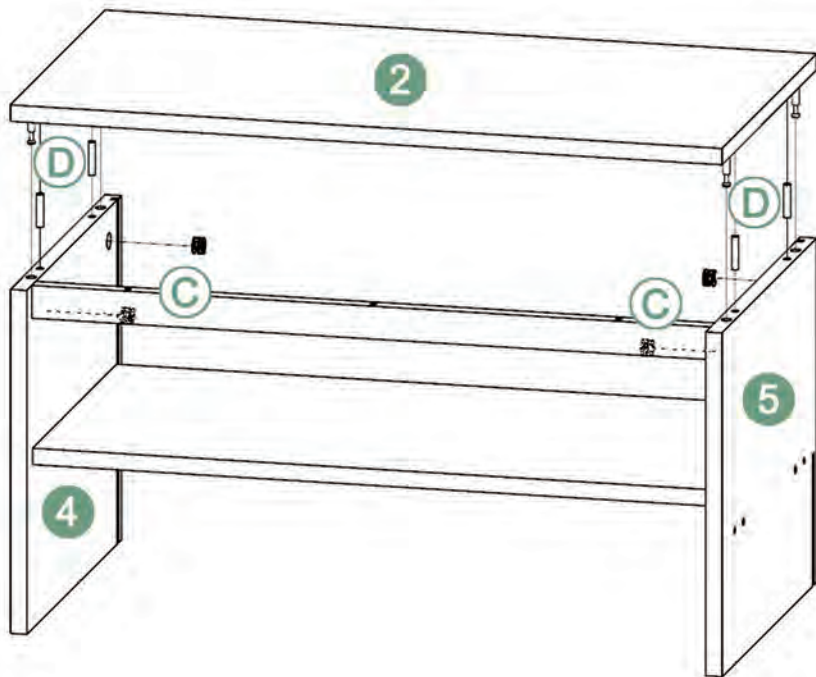


8.

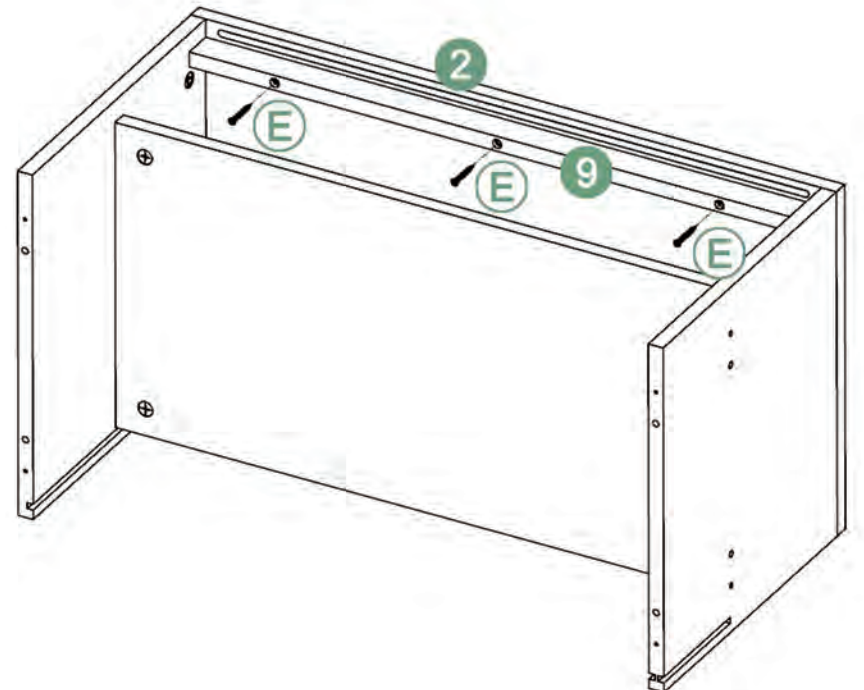


9.

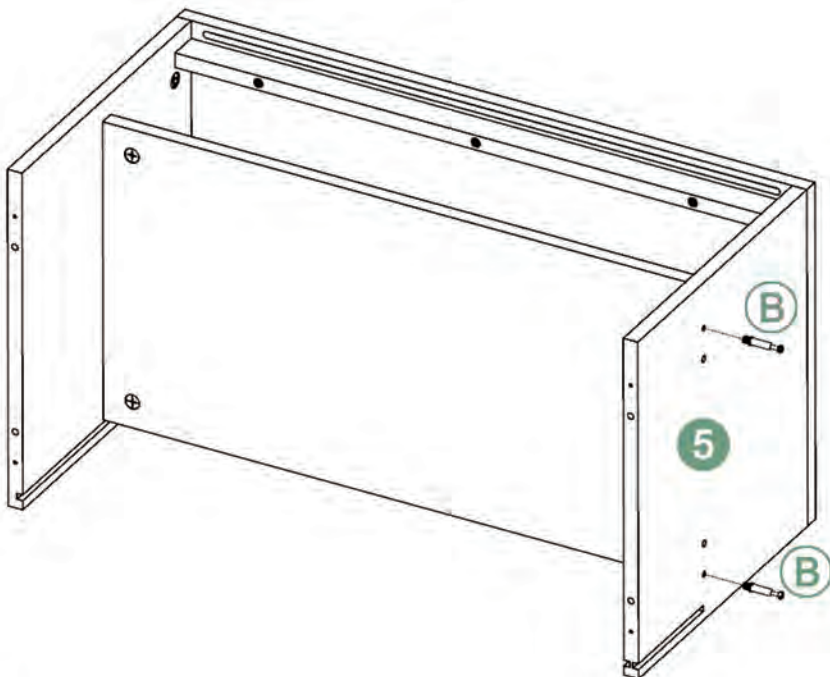


10.

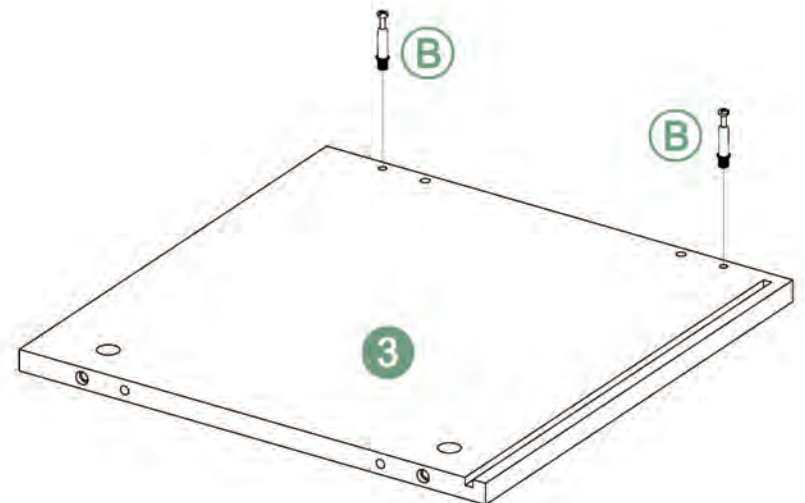


11.

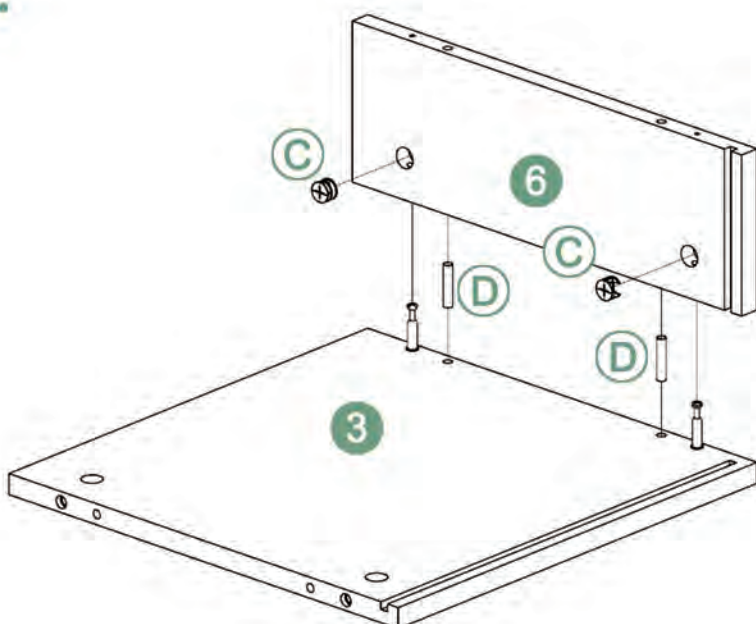


12.

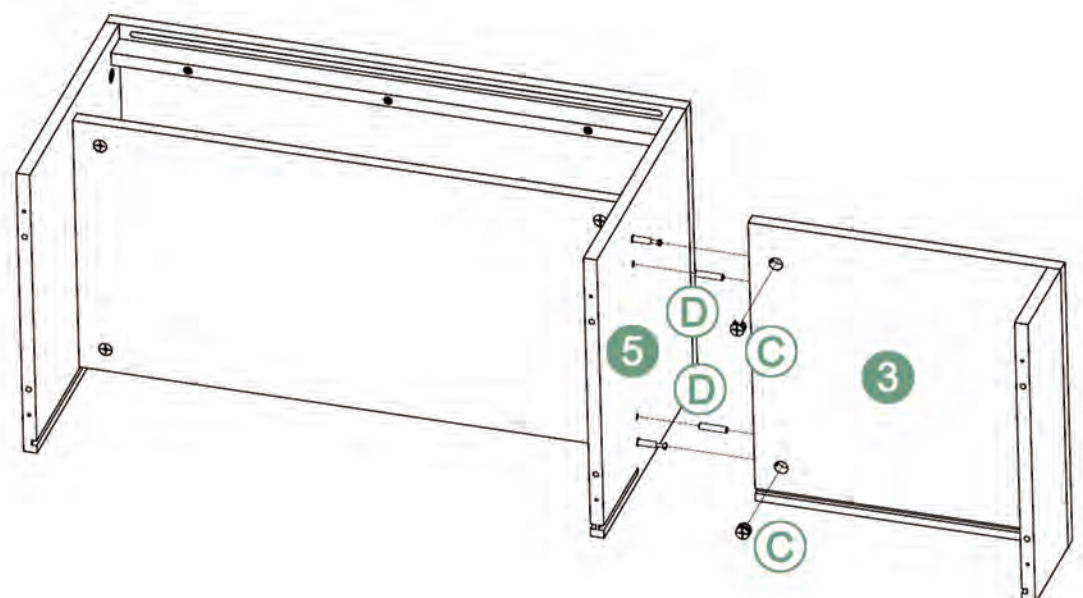


13.

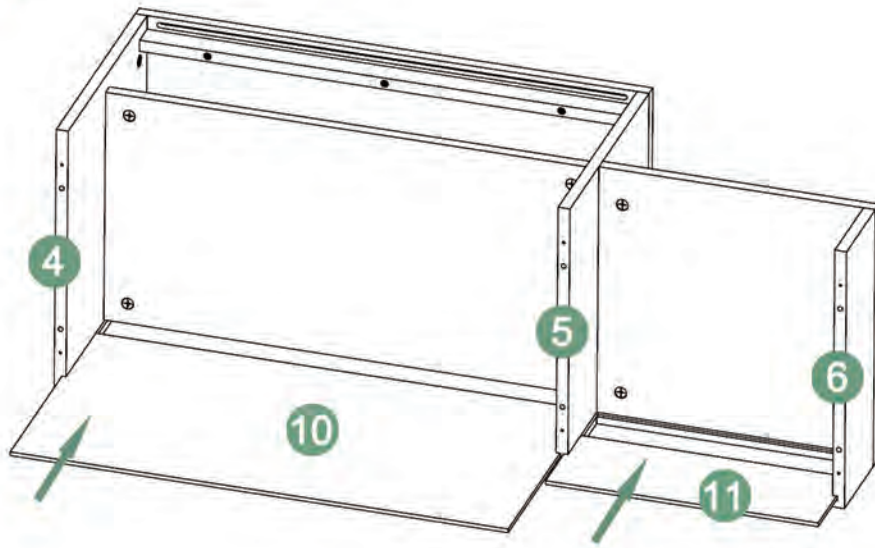


14.

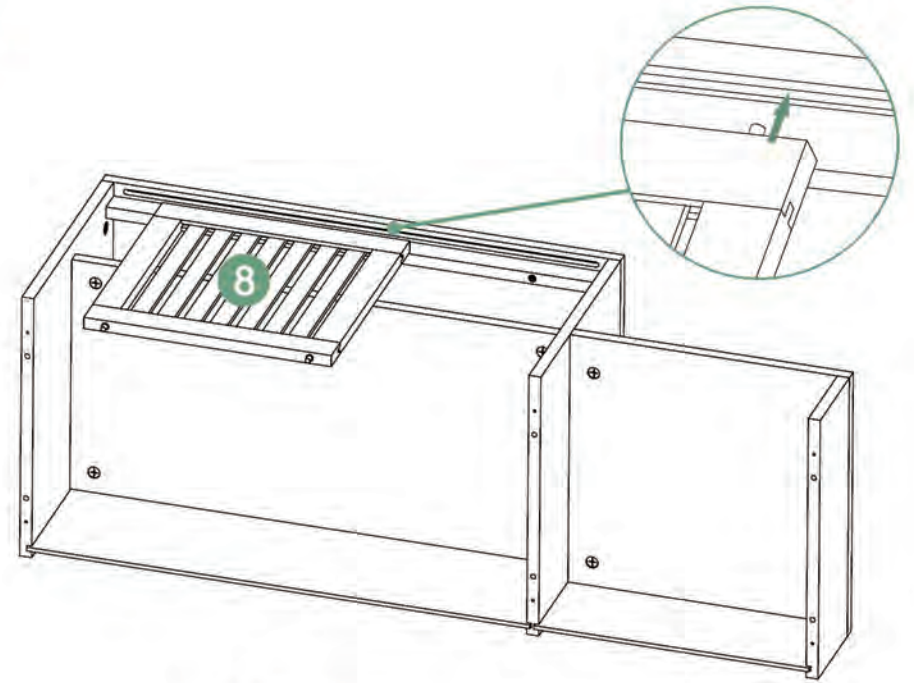


15.

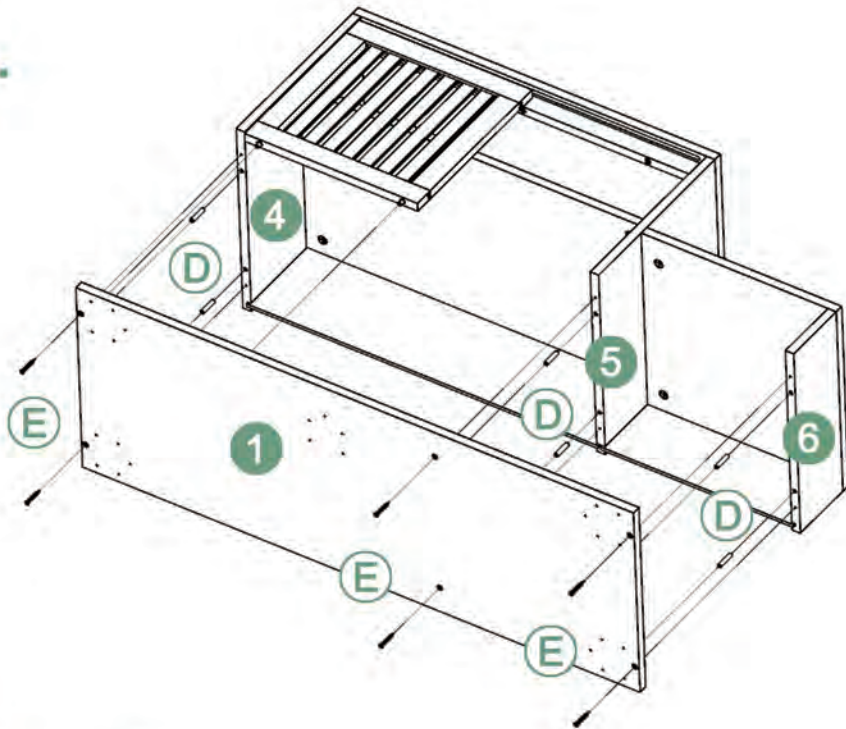


16.

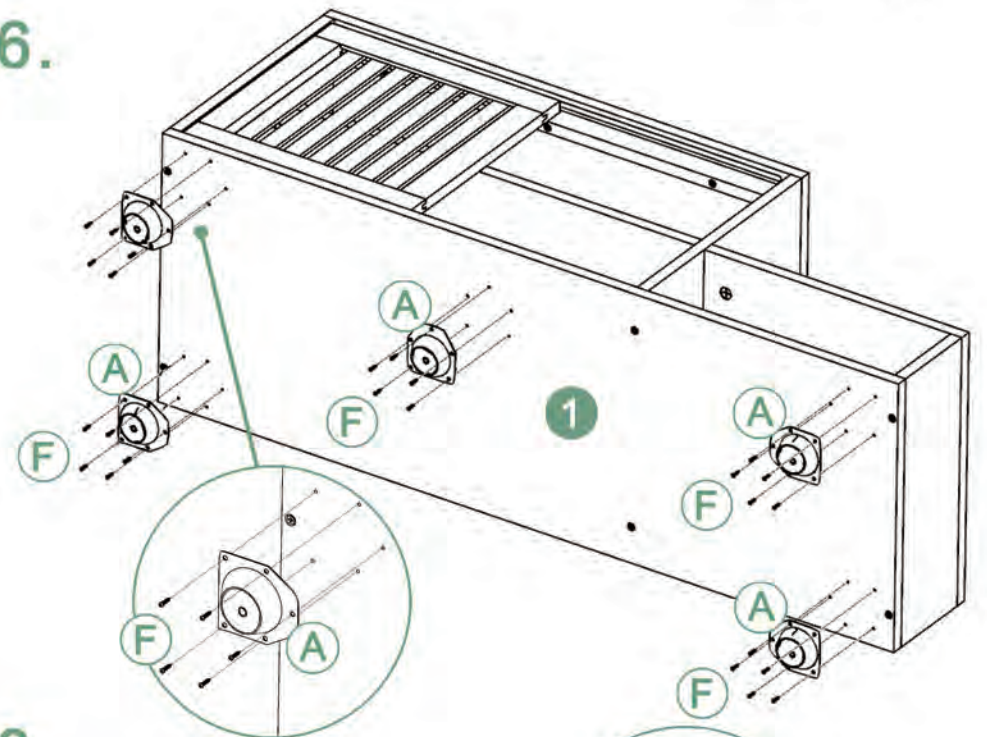

17.

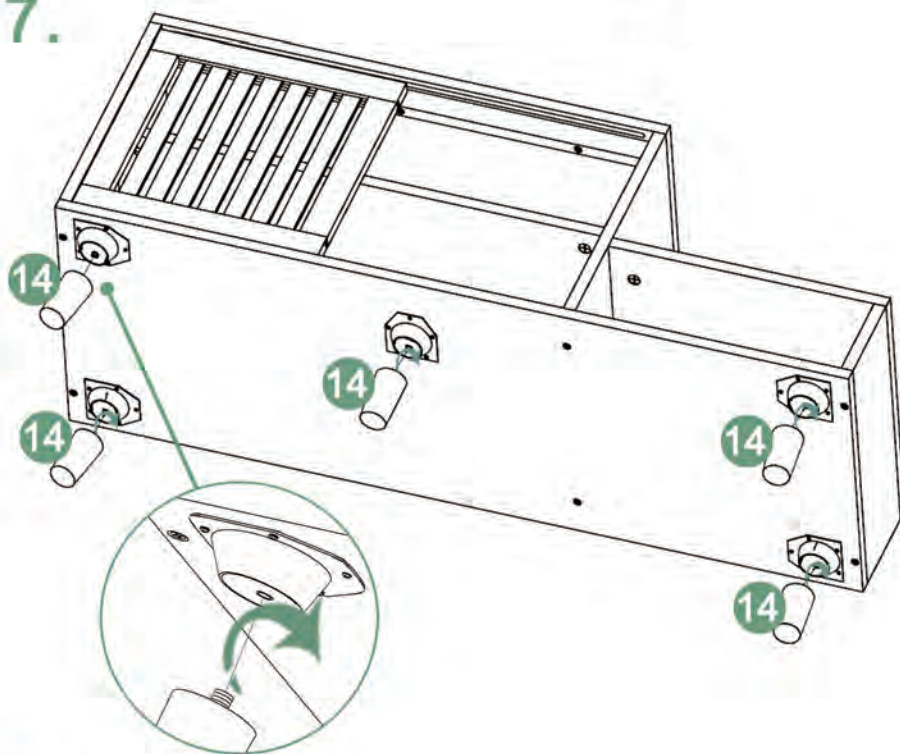

18.

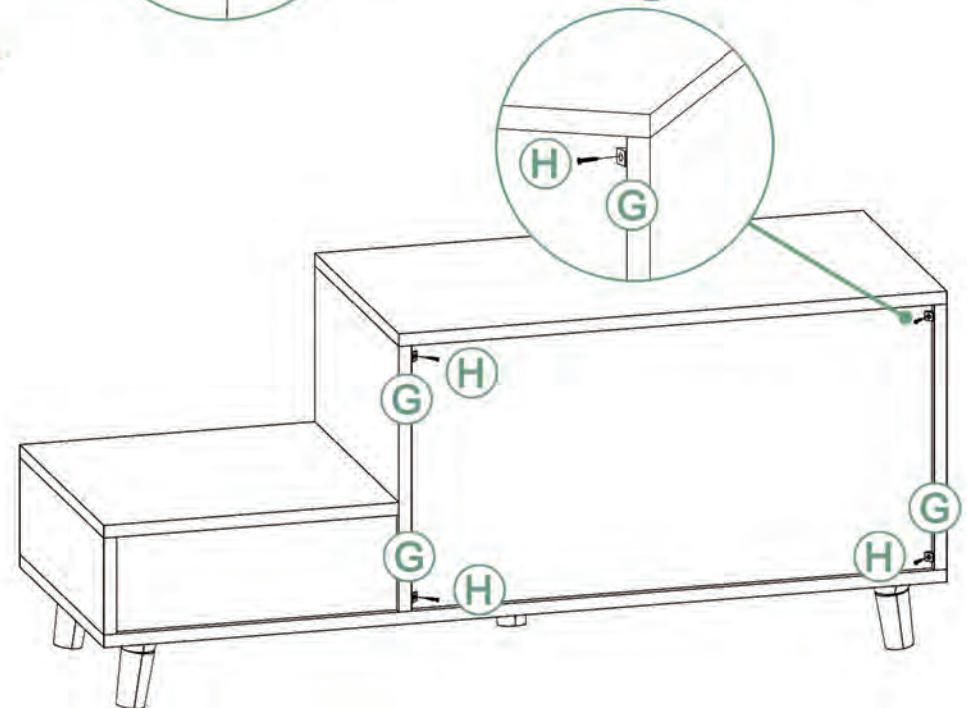

19.

