


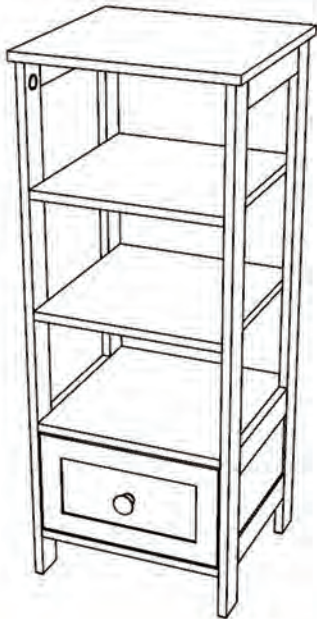

FBT91

SoBuy®



TOOLS:



UNIT:MM

1

2

3

× 2

4

5a


5b



300×280×12



725×270×12

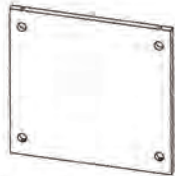

270×260×12



270×260×12



260×40×12



260×40×12

UNIT:MM

6

7

8

9

10

11

12



258×145×15




230×120×12



230×120×12



233×120×12

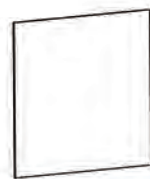

243×230×3



270×160×3



725×270×12

UNIT:MM

A

B

C

× 24

D

× 24

E

× 4

F

× 4

G

× 4

H

× 4

J

K

× 4

L

× 4

M

N

O

P



φ 23×21



M4×18



M6×35



φ 15×10



φ 6×30



M3×12



M4×30



40×10



φ 18



M4×35





M4×10



Pour en savoir plus:
www.quefairedemesdechets.fr

Stand:01.2020

BOLT INSTALLATION AS BELOW:

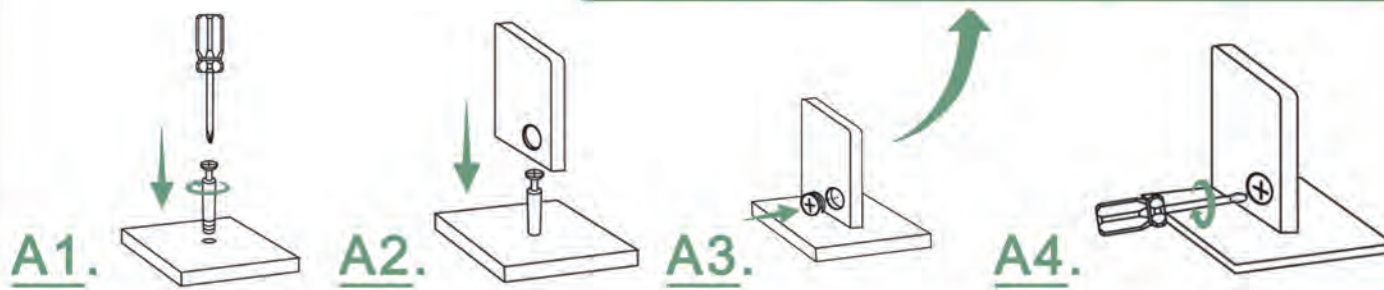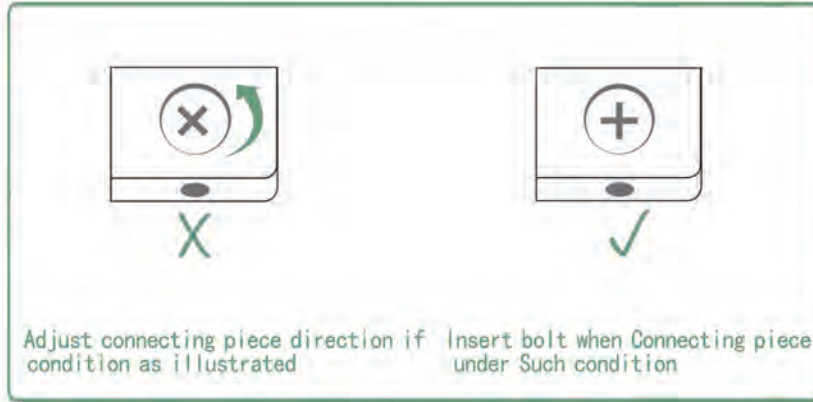


BACKPLATE BUCKLE INSTALLATION AS BELOW:




B1.


B2.

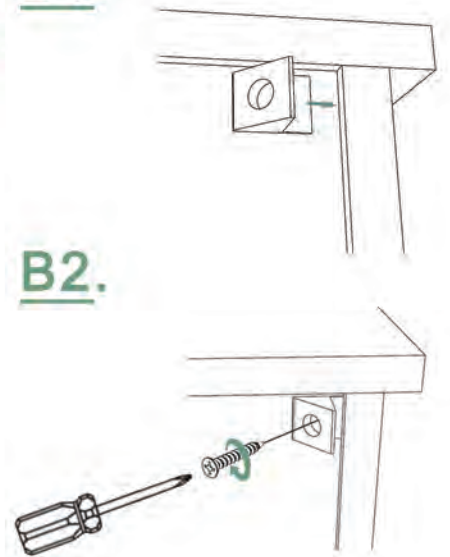


1.

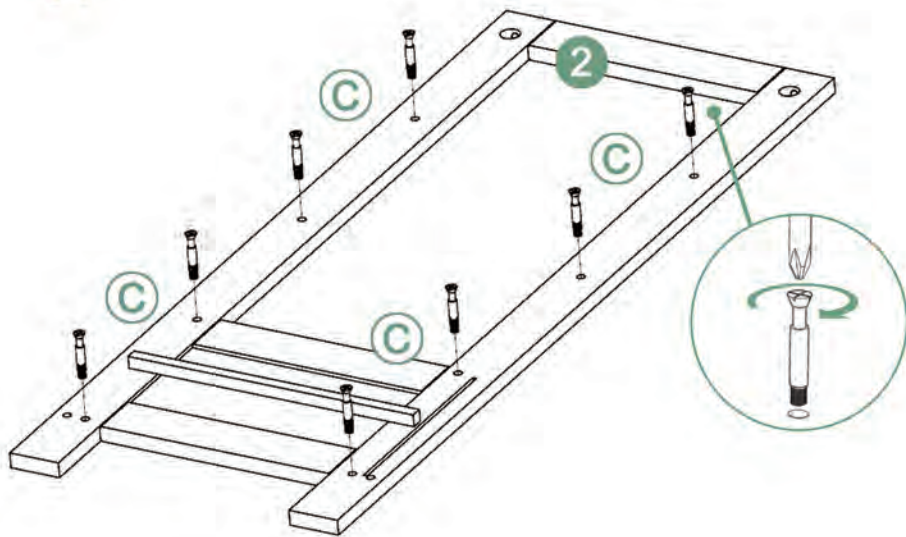


2.

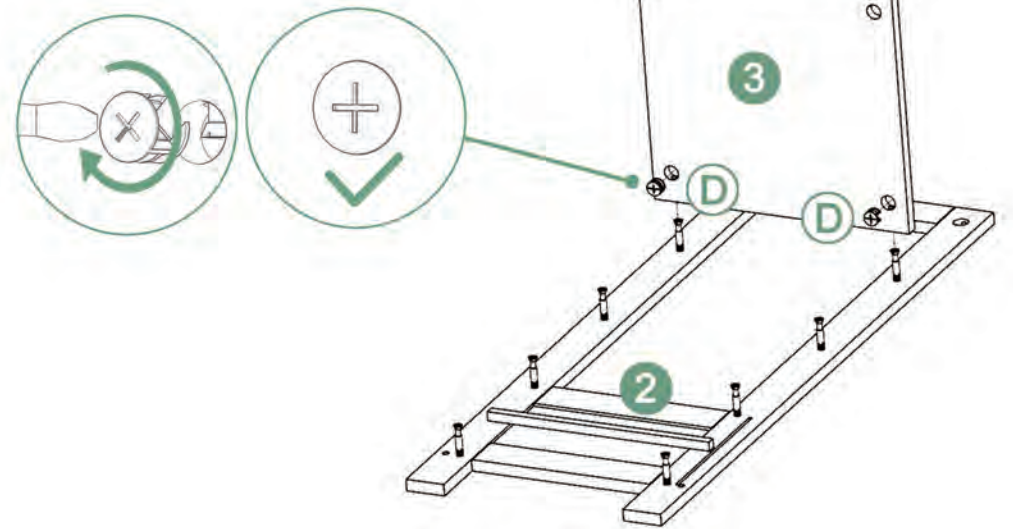


3.

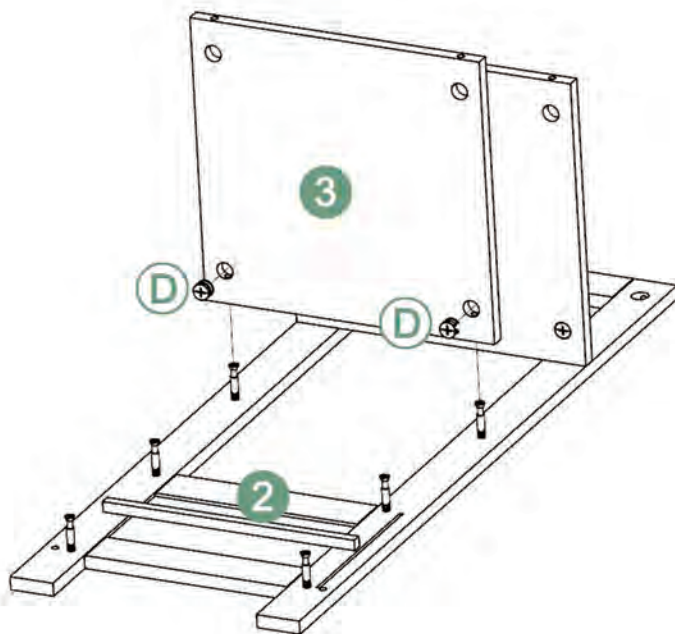


4.

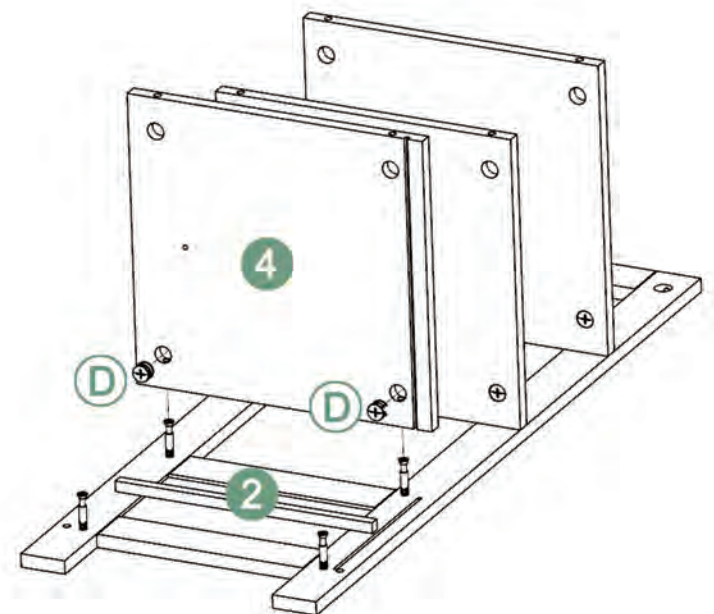


5.

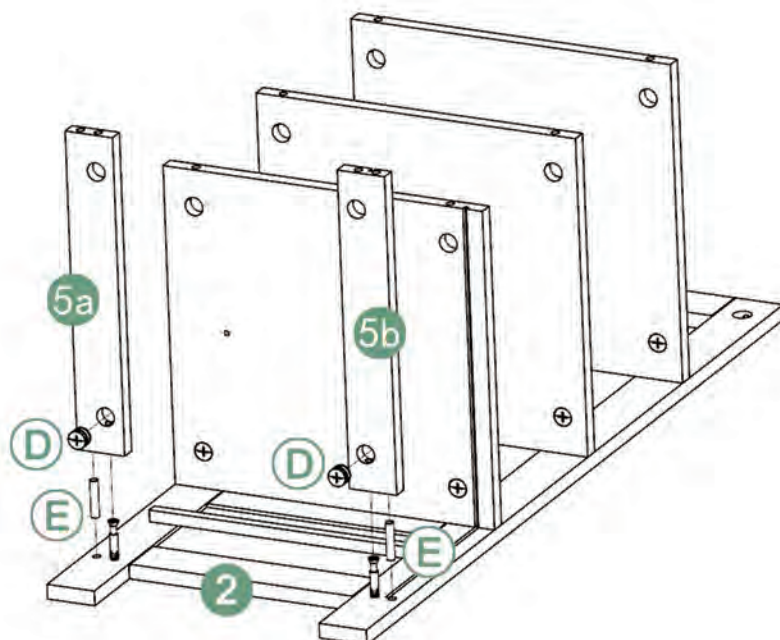


6.

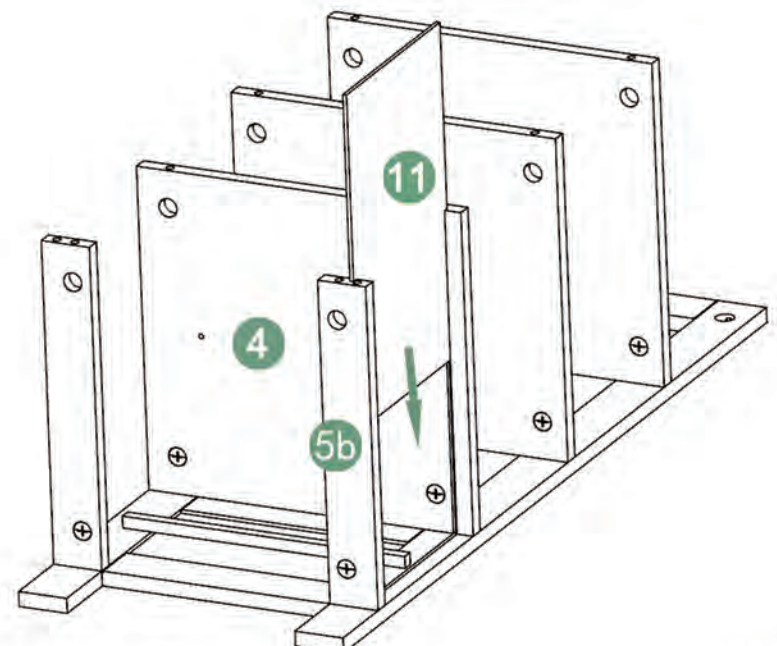


7.

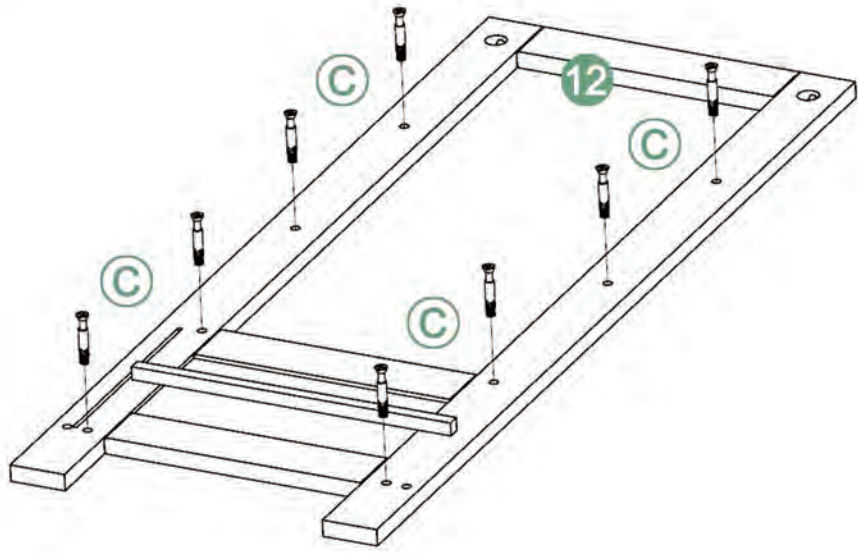


8.

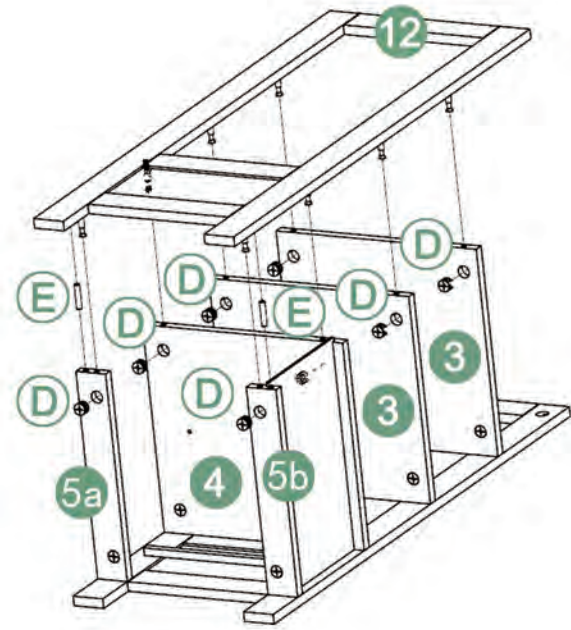


9.

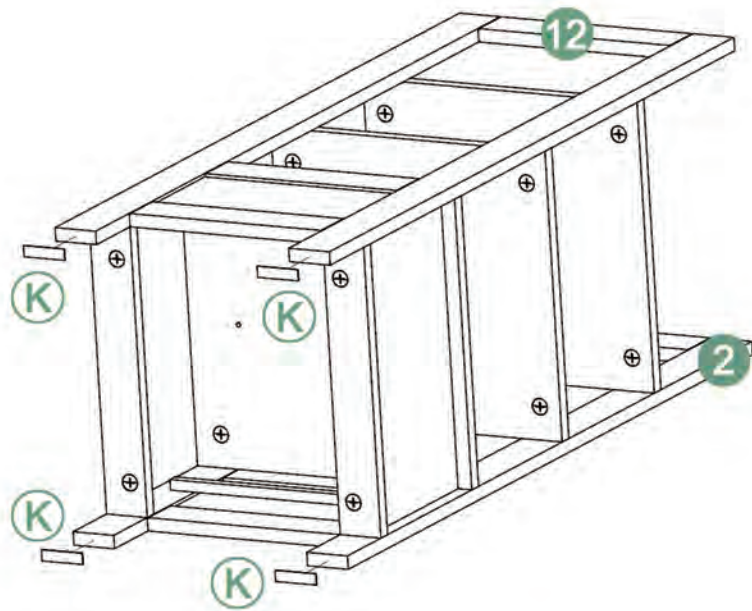


10.

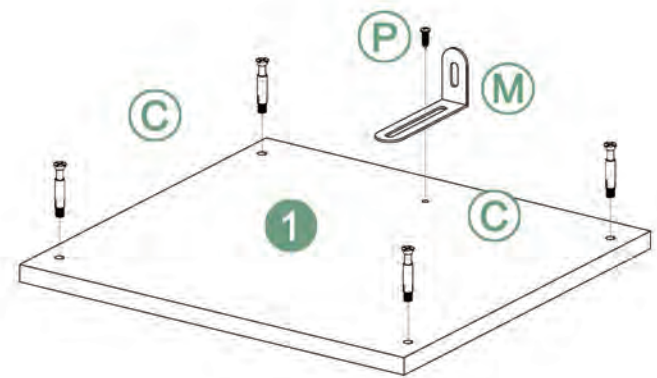


11.

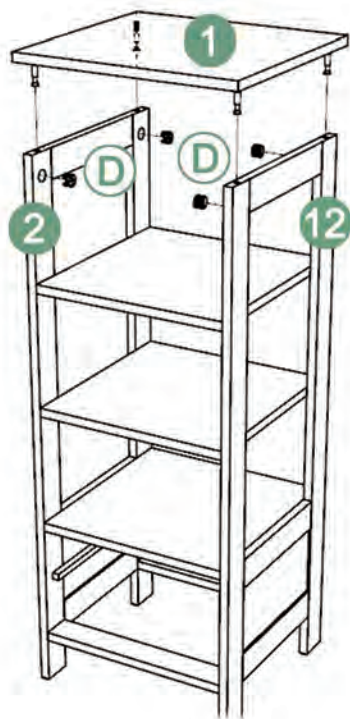


12.

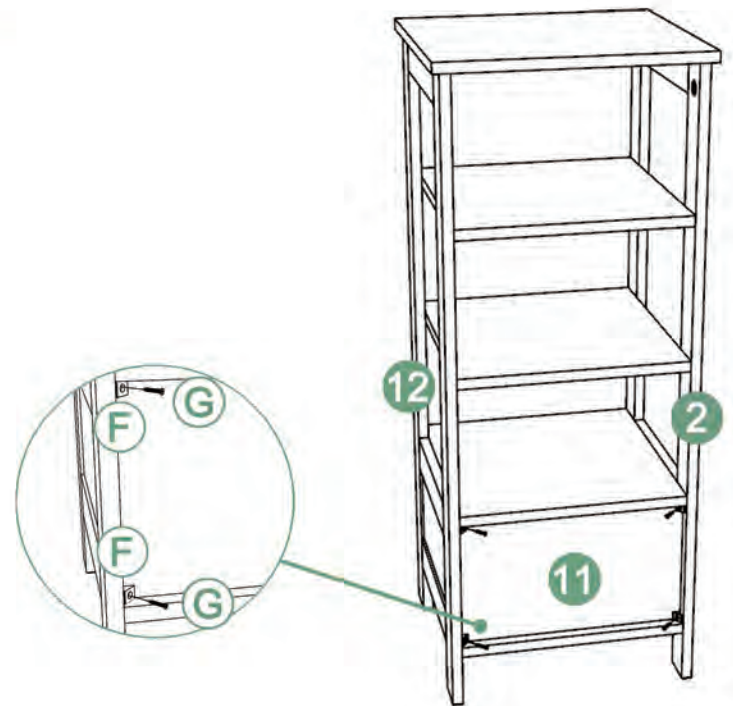


13.

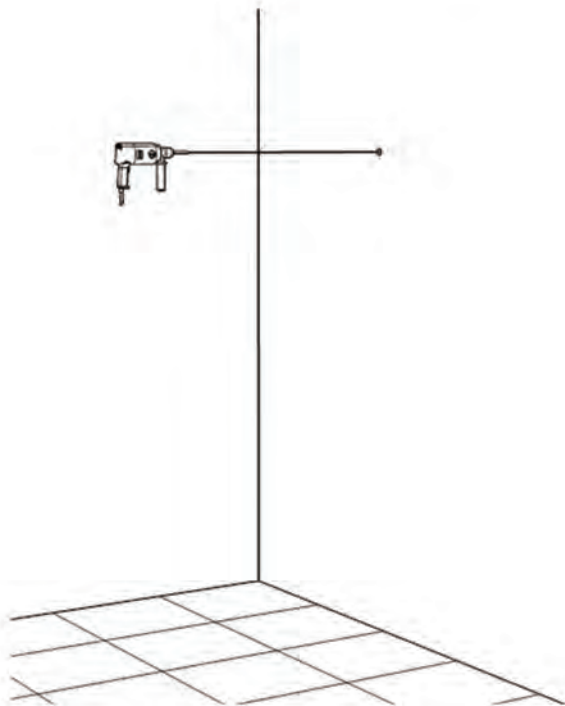


14.

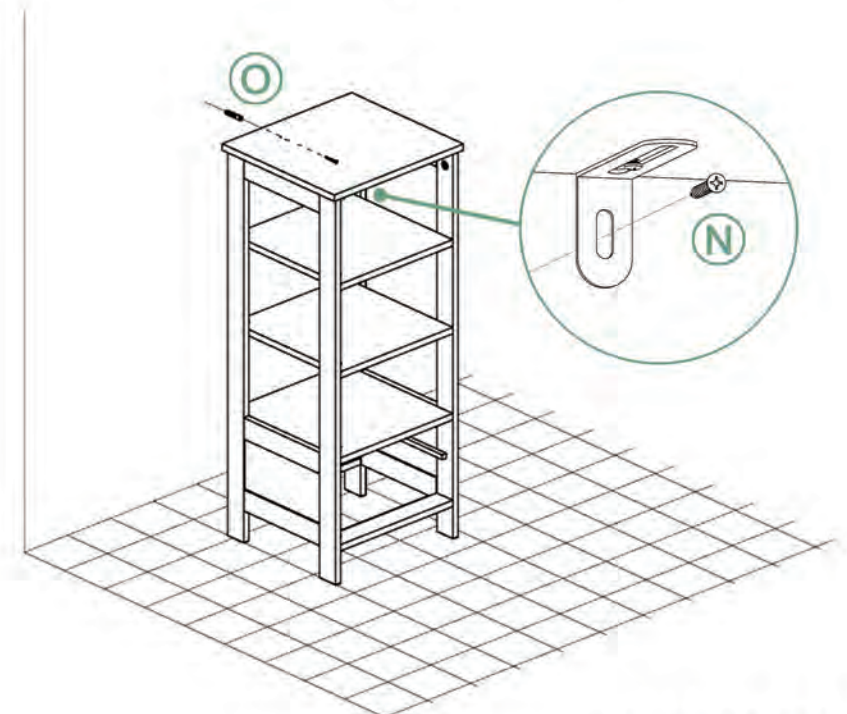


15.

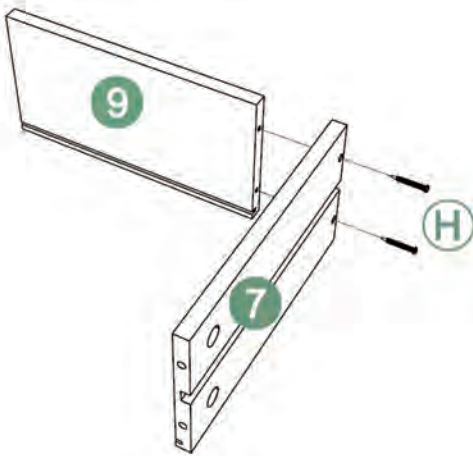


16.

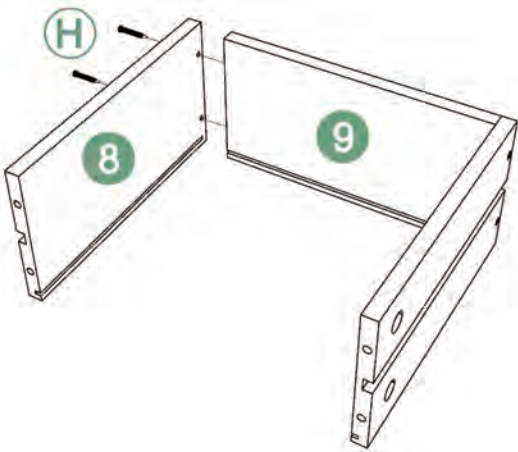


17.

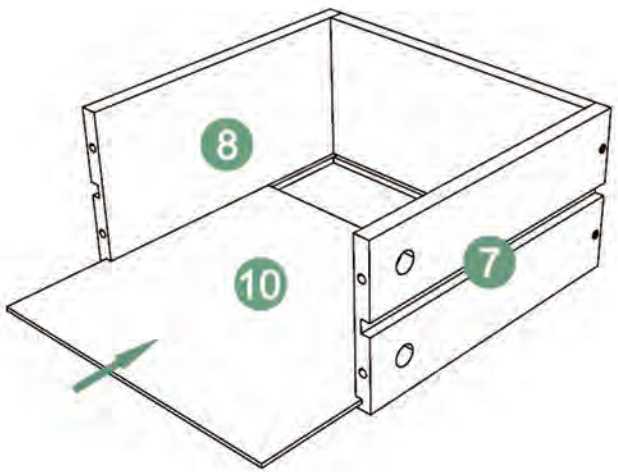


18.

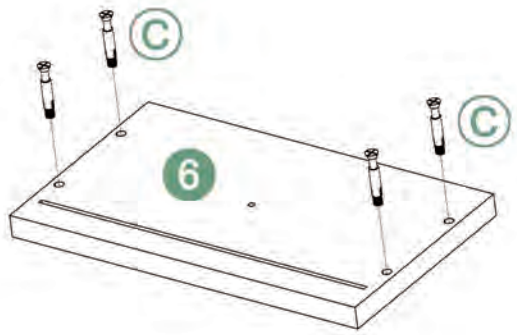


19.

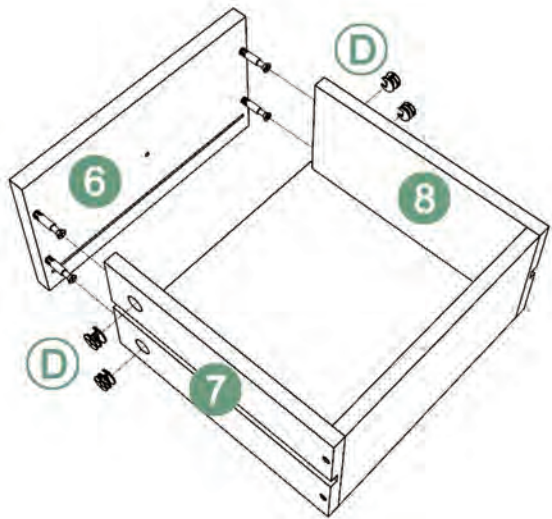


20.

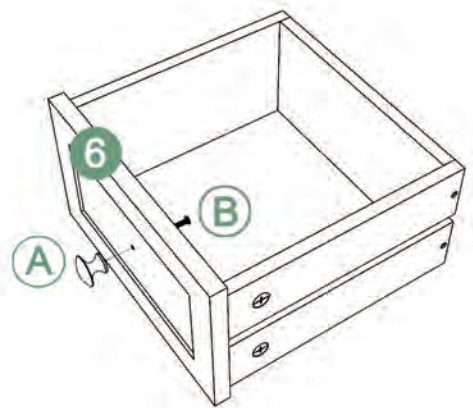


21.

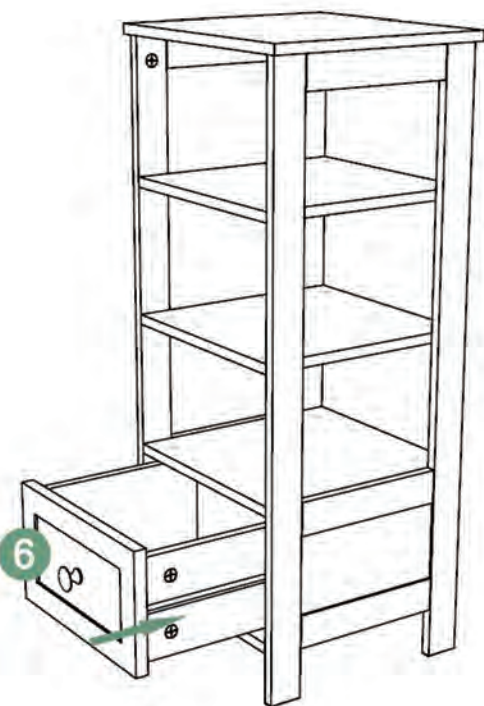

22.

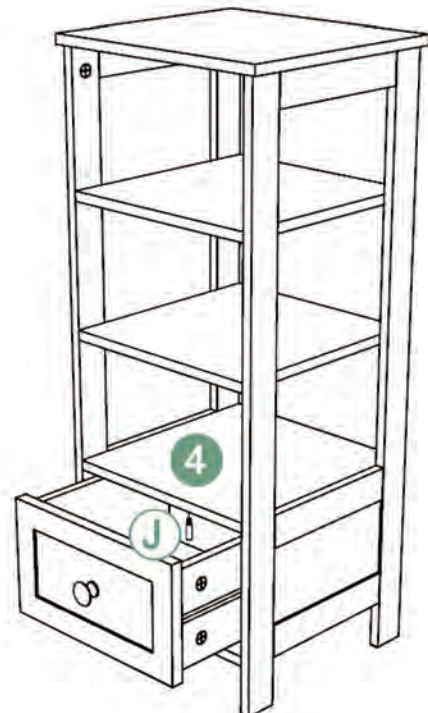

23.

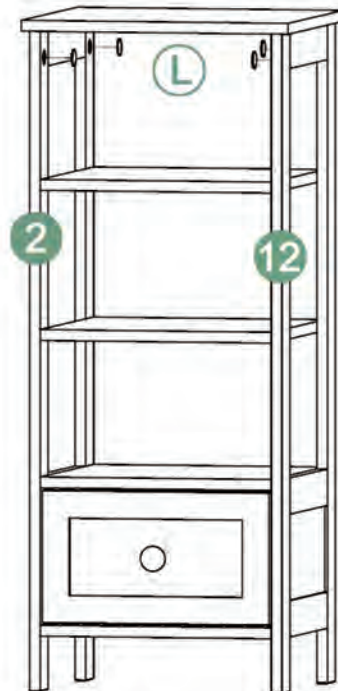

24.

