



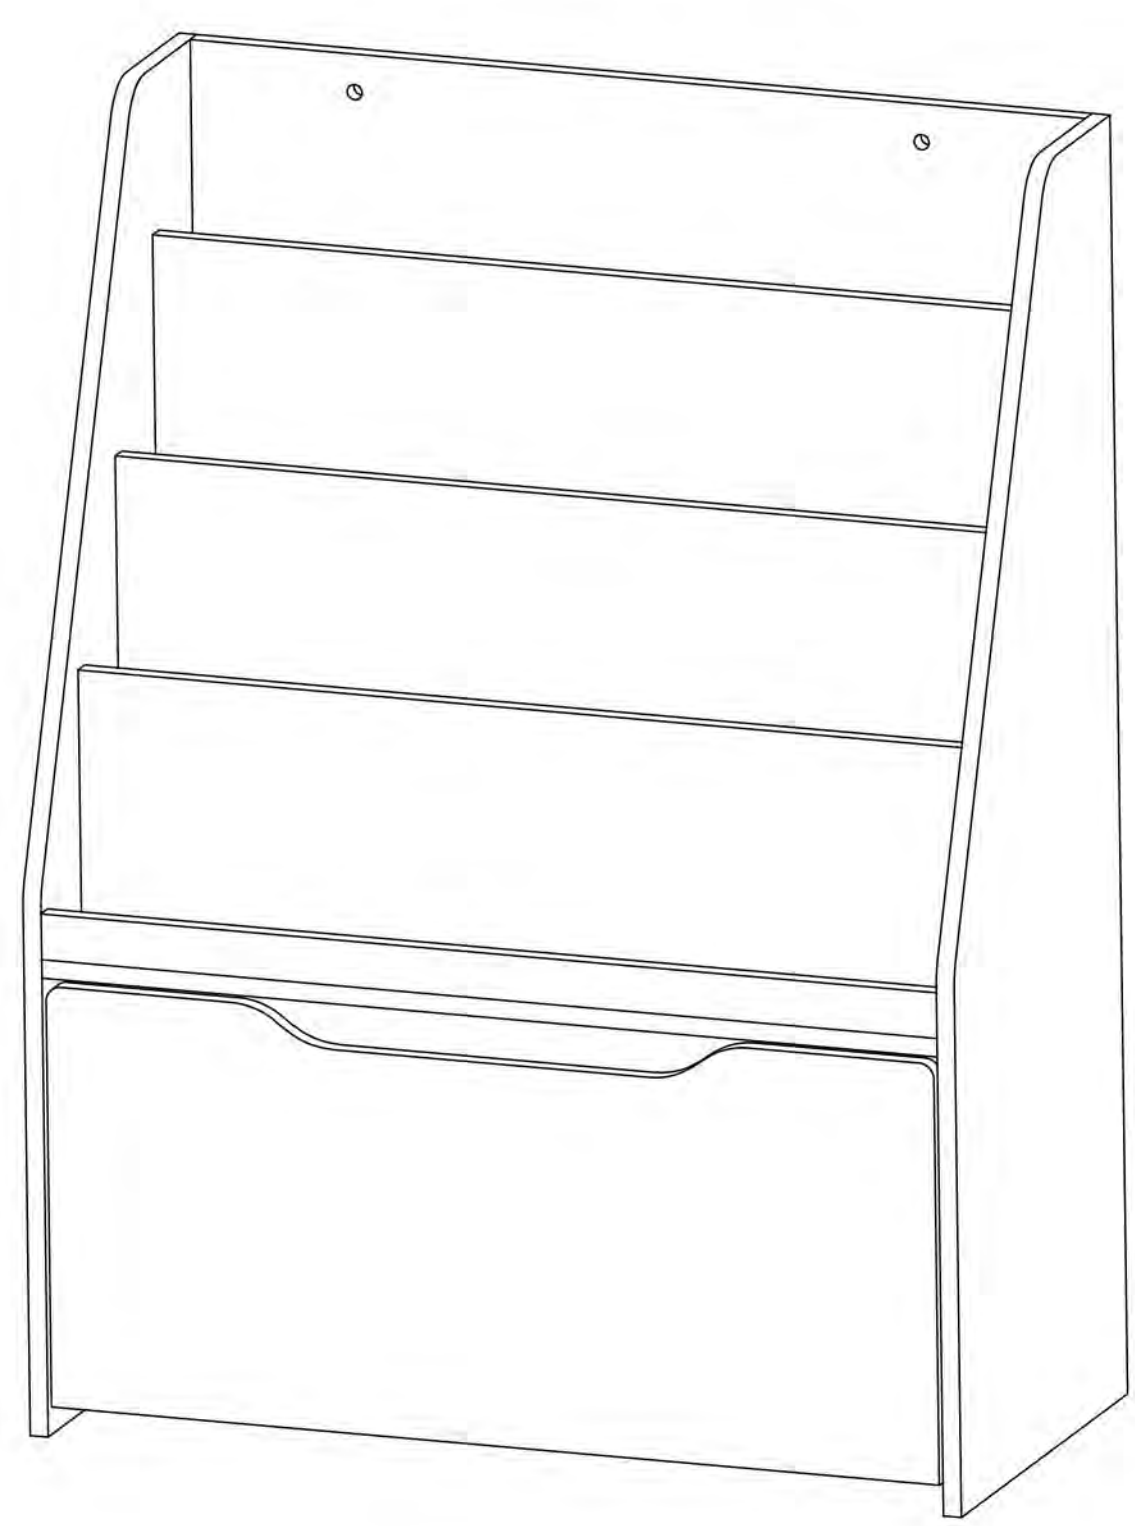


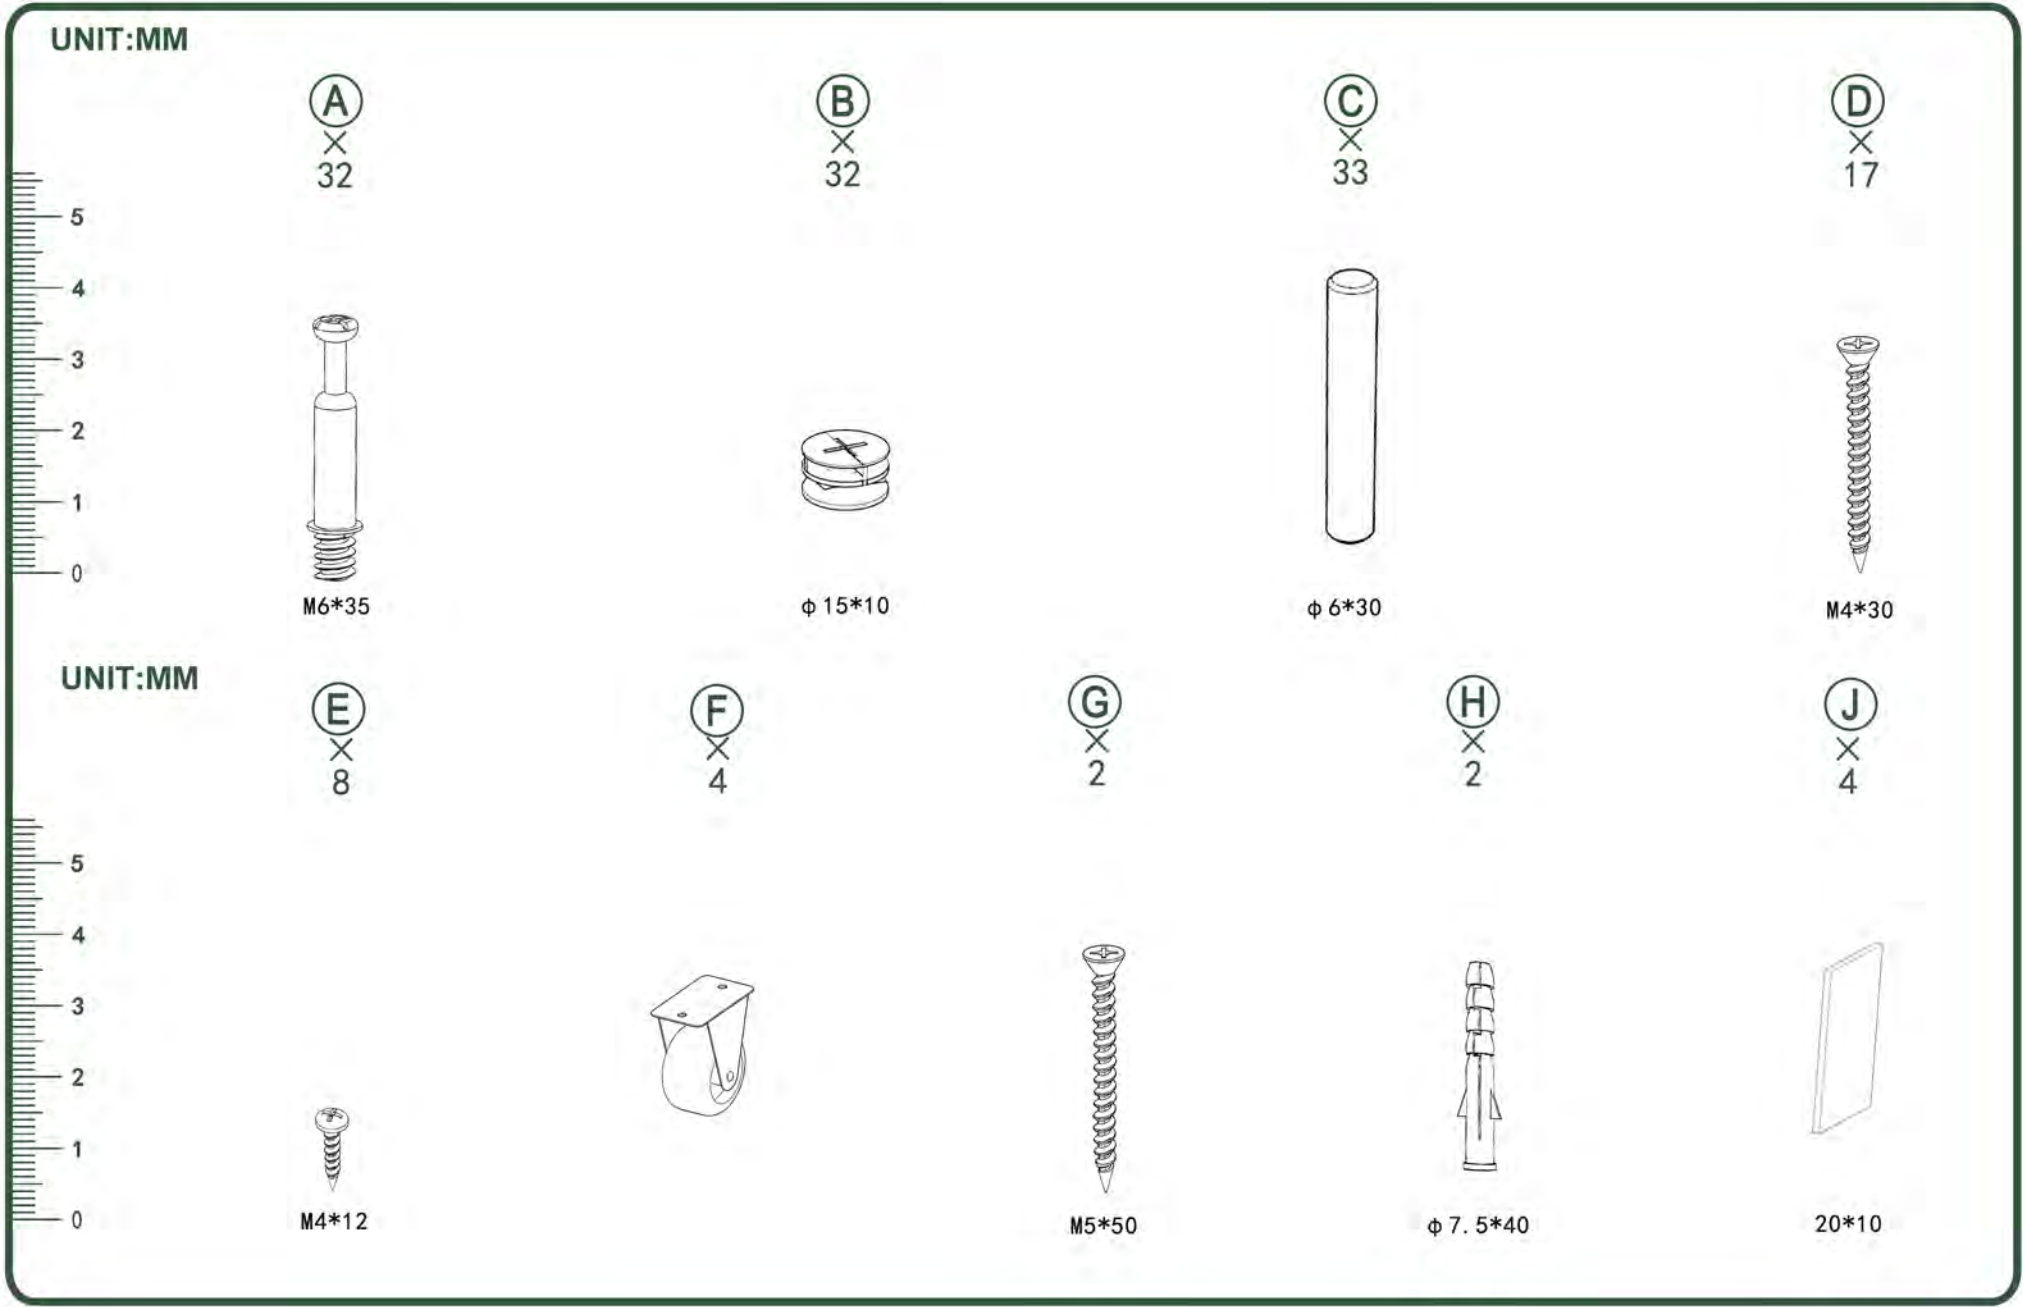



KMB95

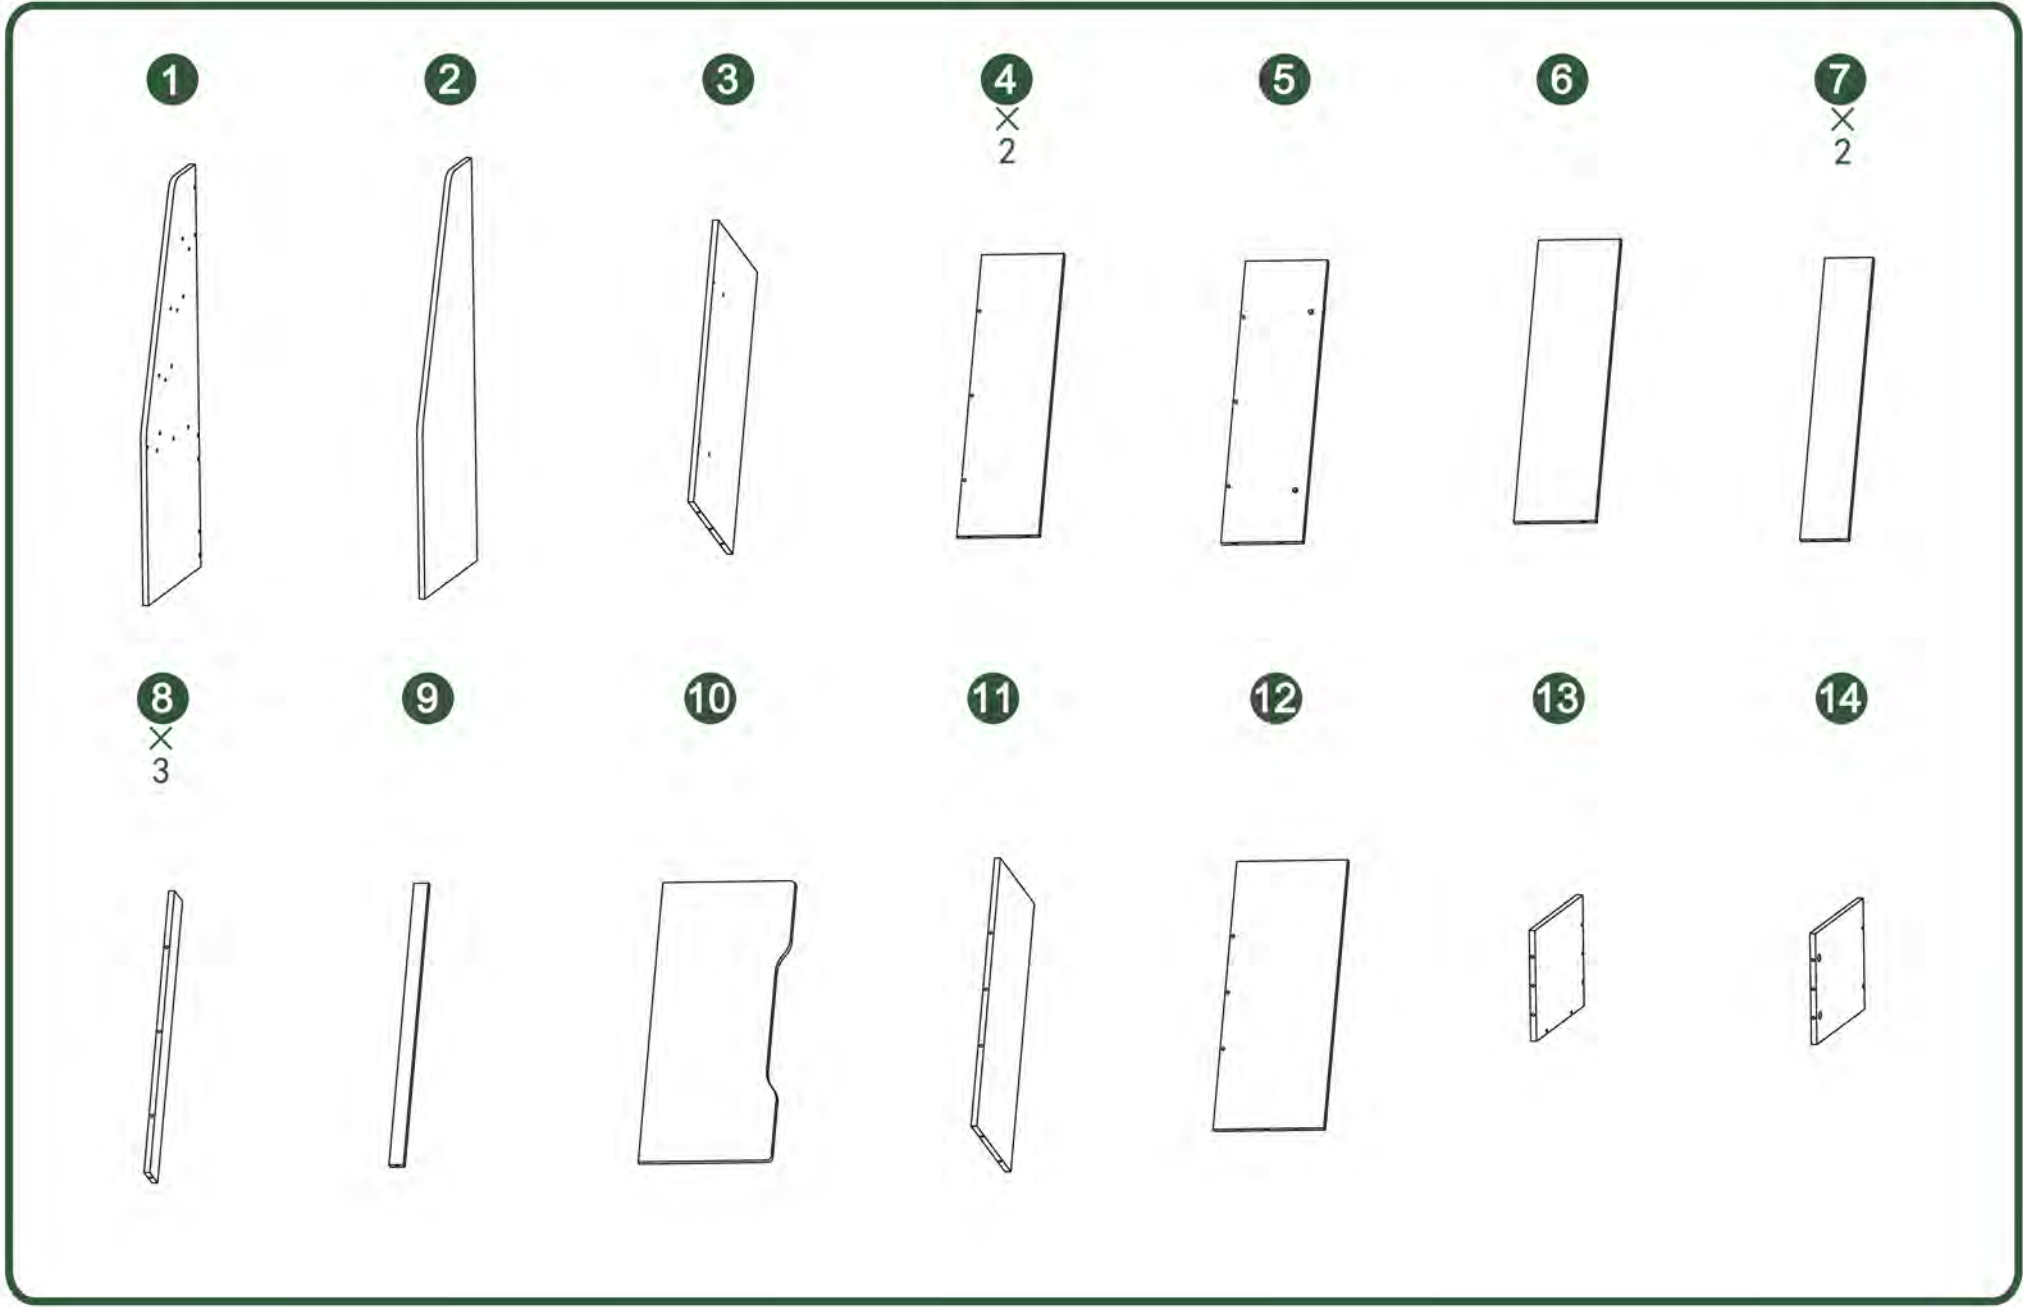

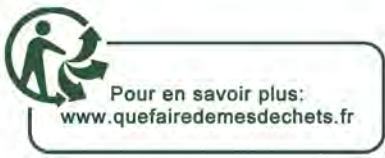


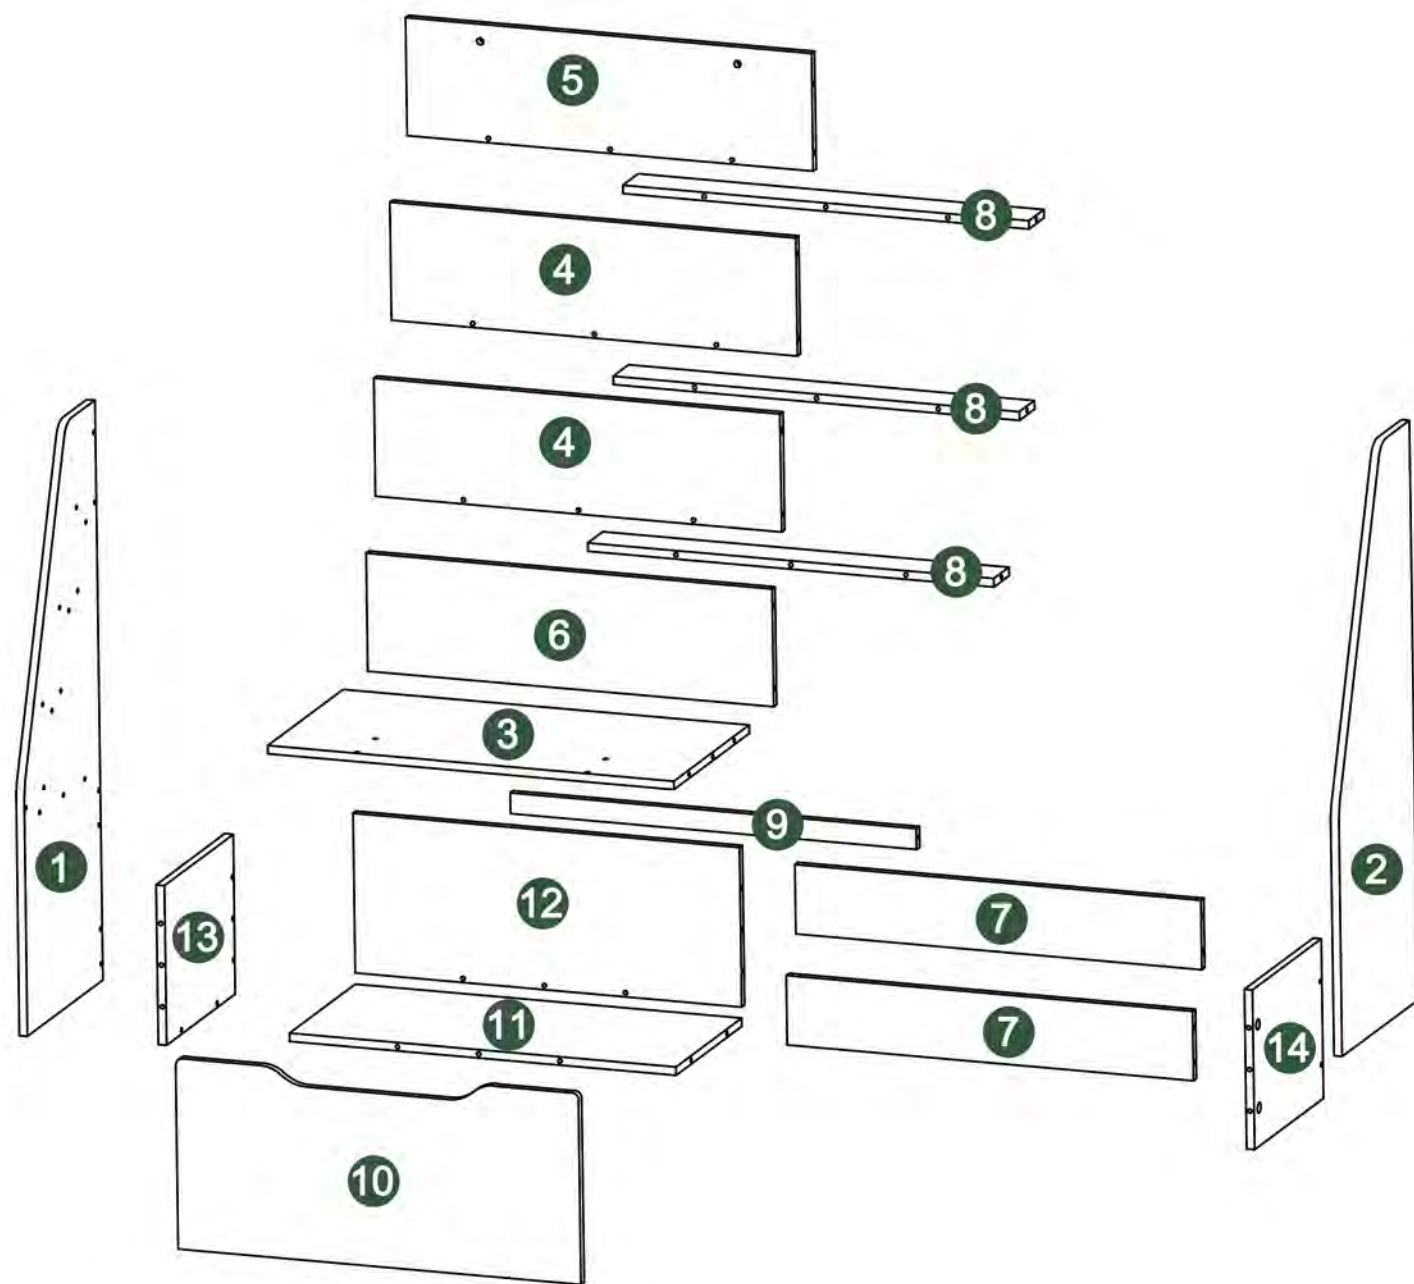


BOLT INSTALLATION AS BELOW:

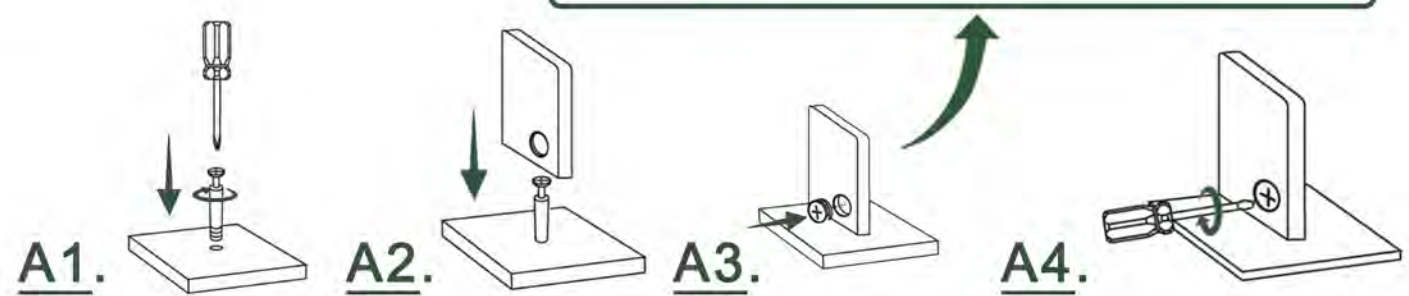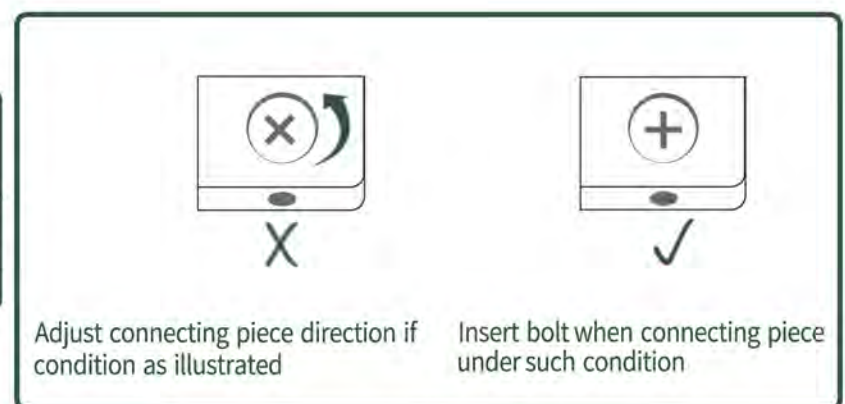


1.

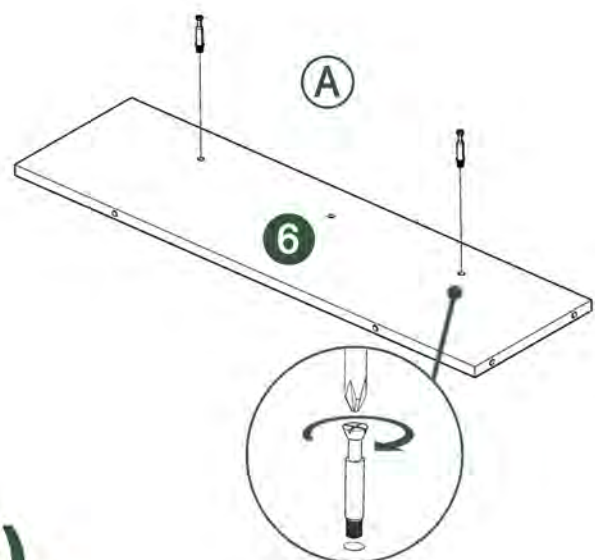


2.

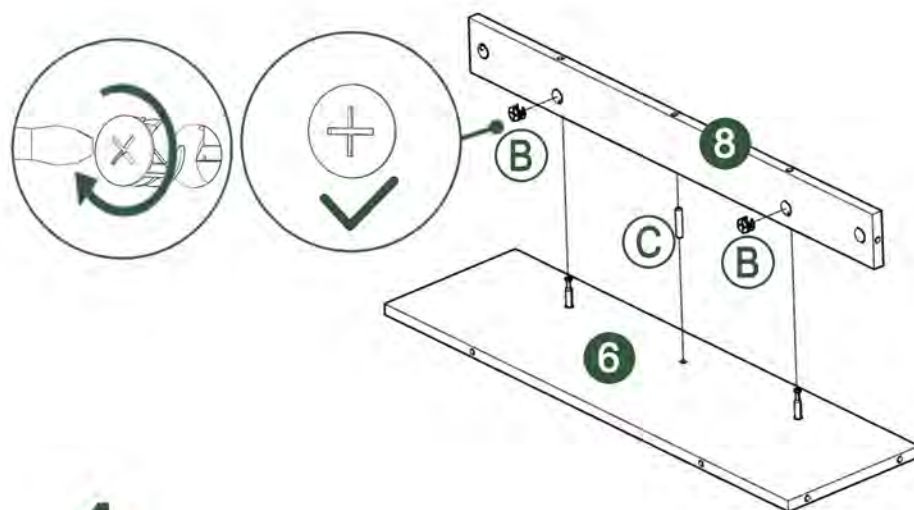


3(X2).

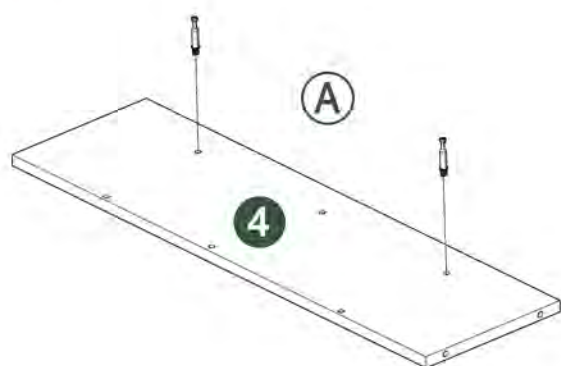


4.

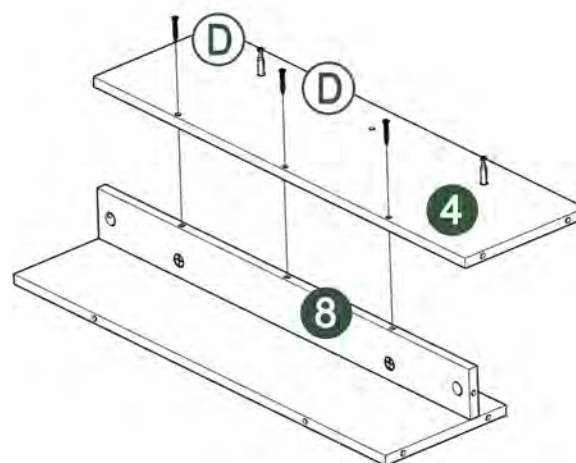


5.

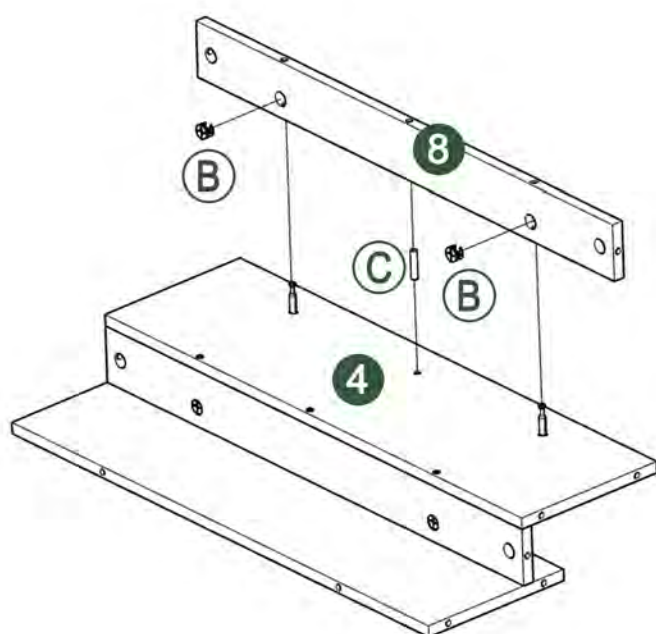


6.

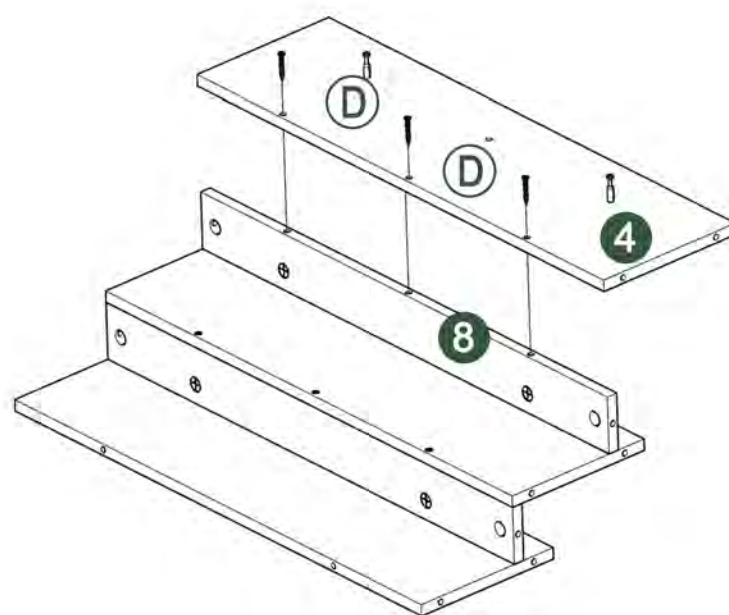


7.

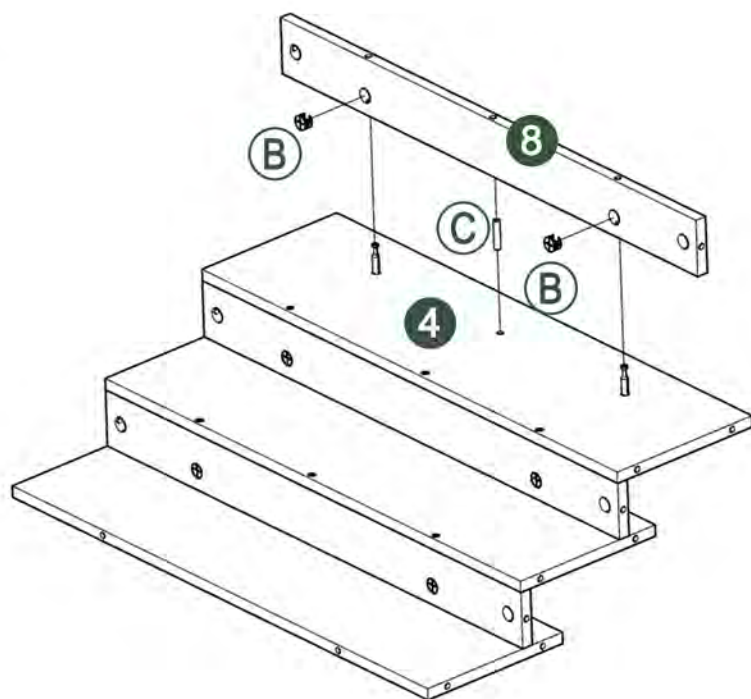


8.

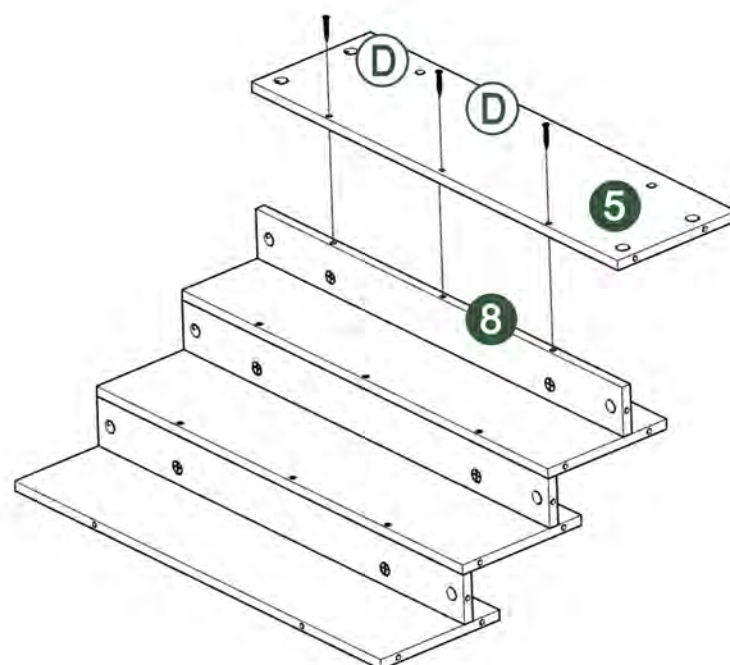


9.

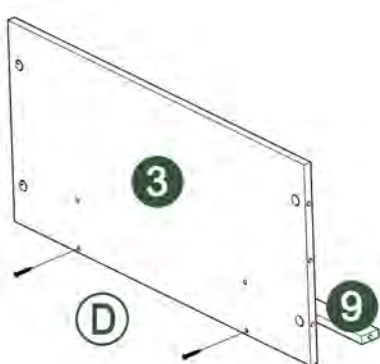


10.

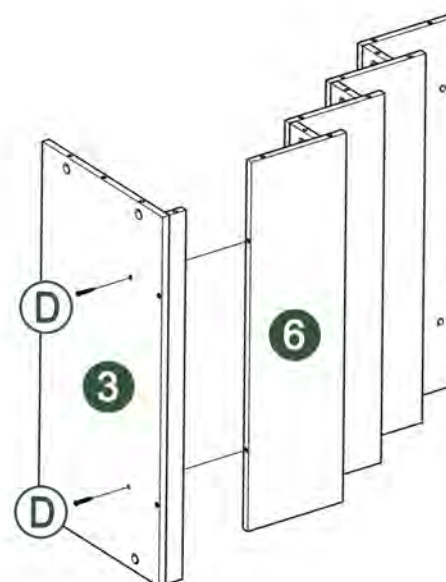


11.

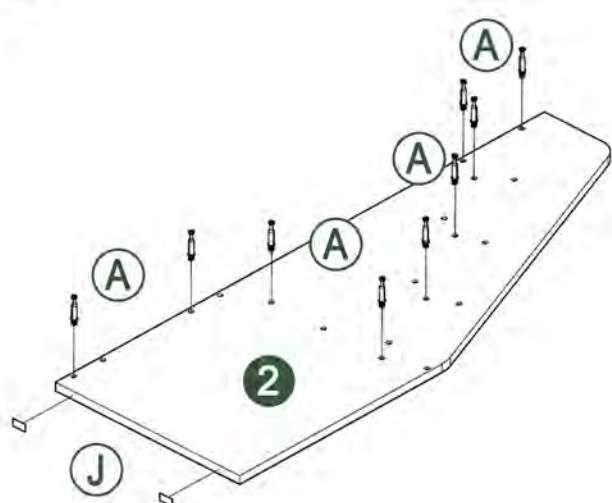


12.

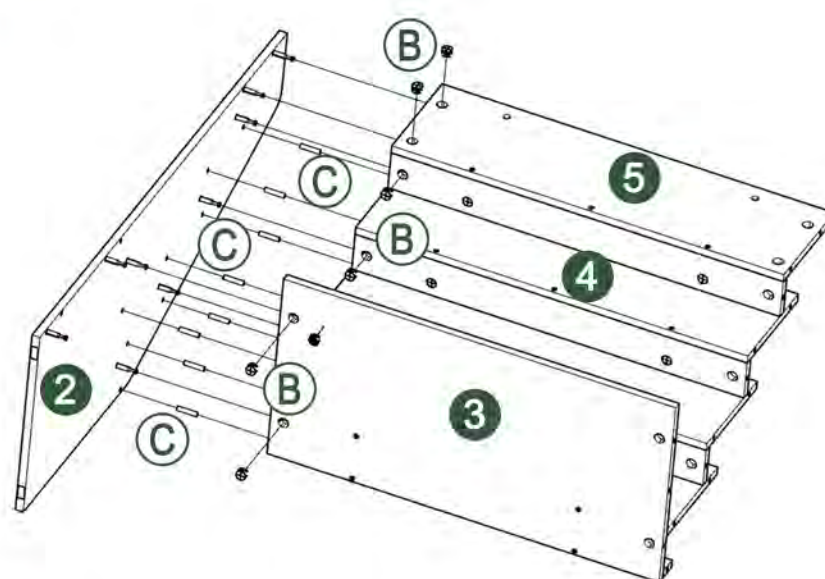


13.

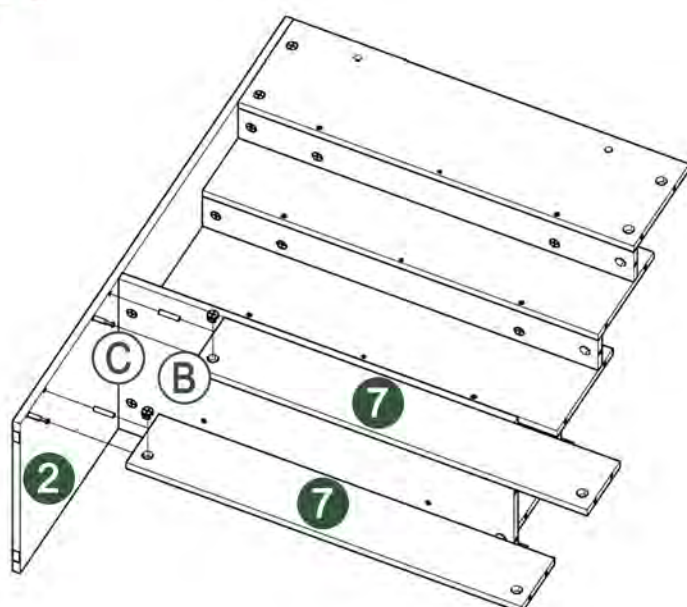


14.

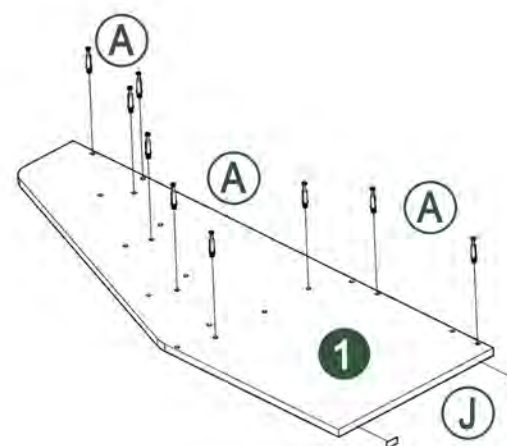


15.

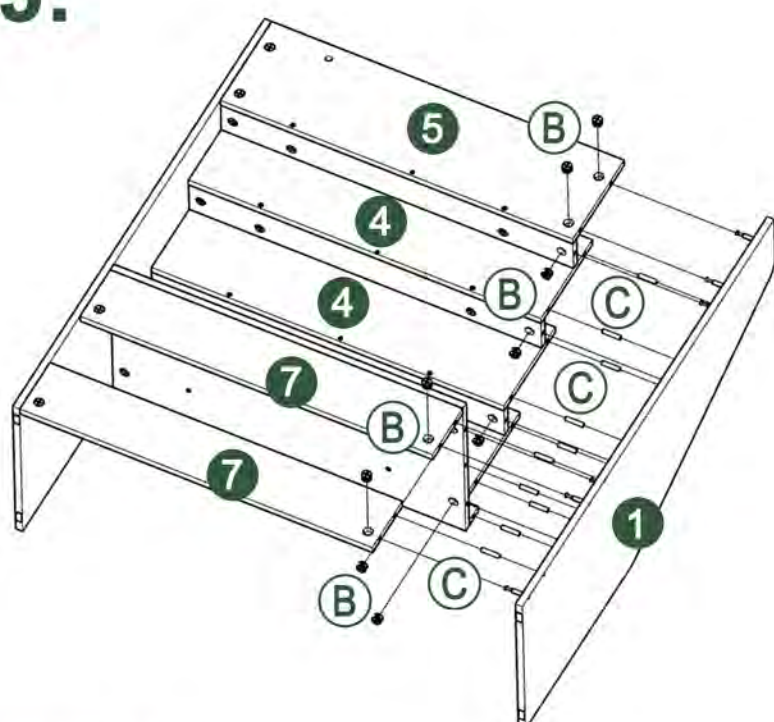


16.

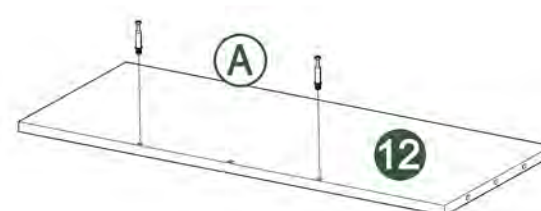


17.

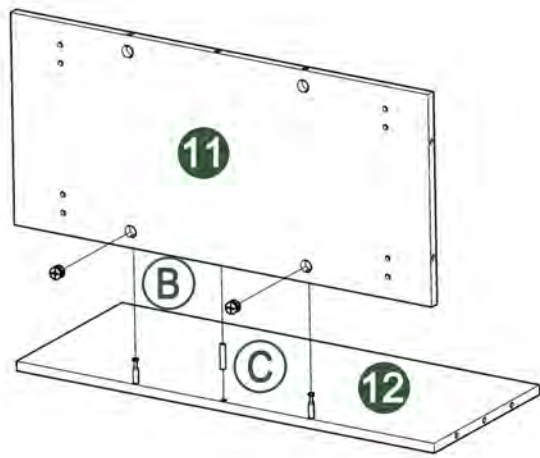


18.

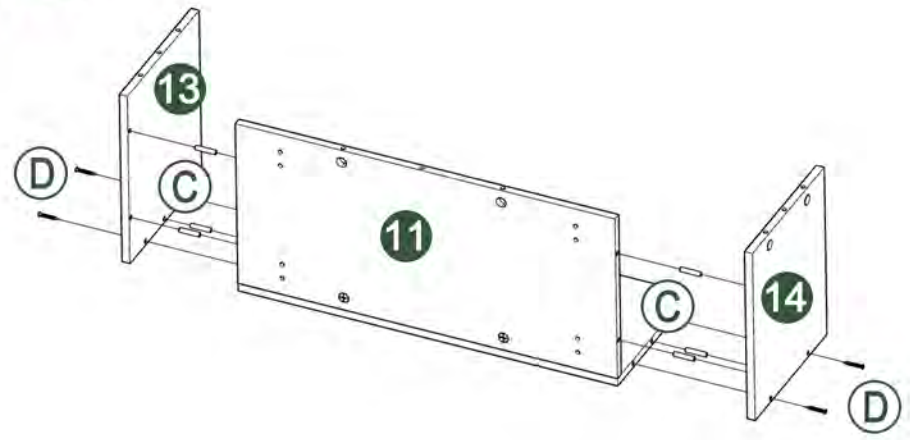


19.

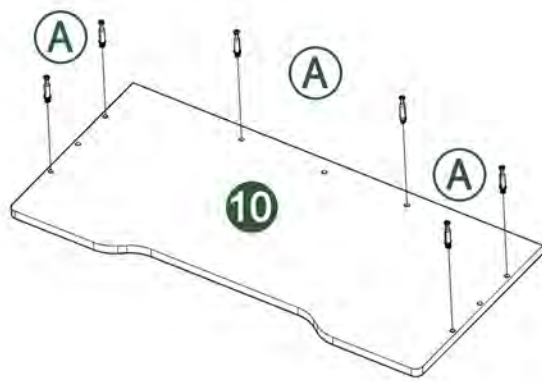


20.

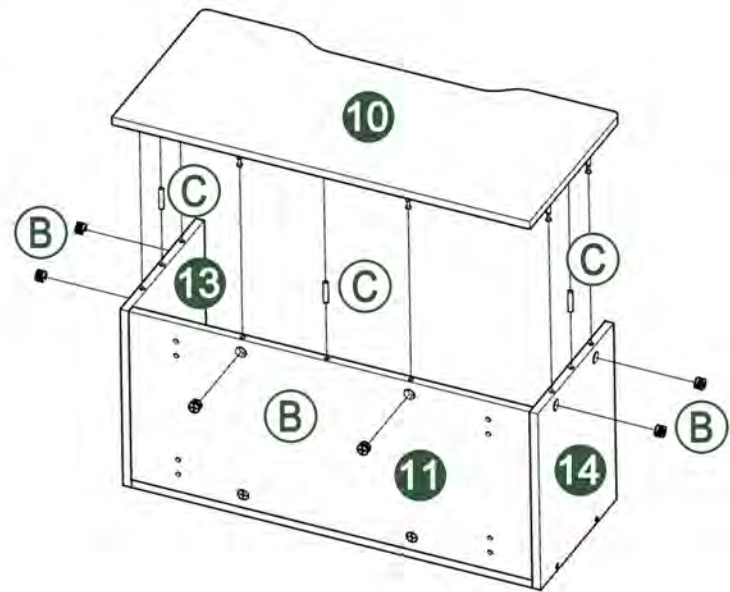


21.

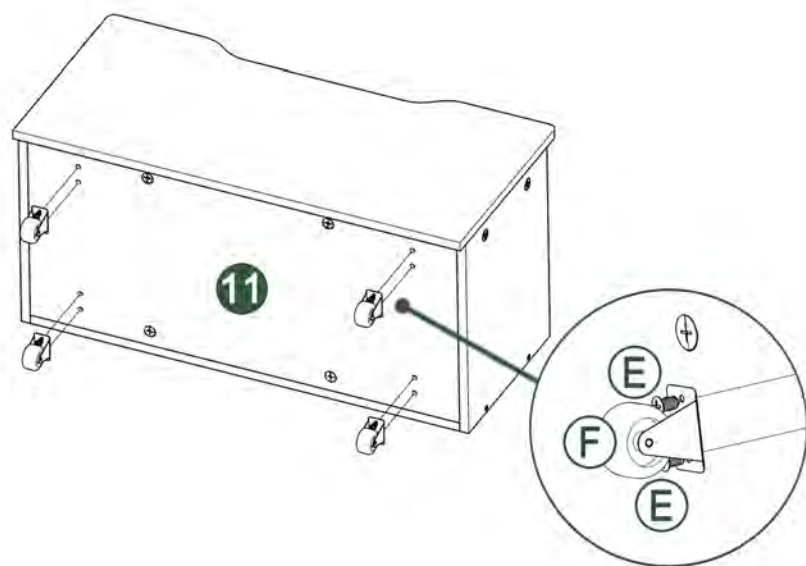


22.

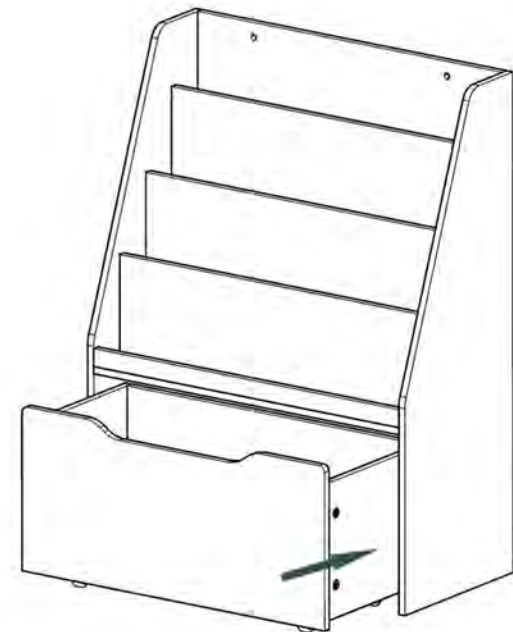

23.

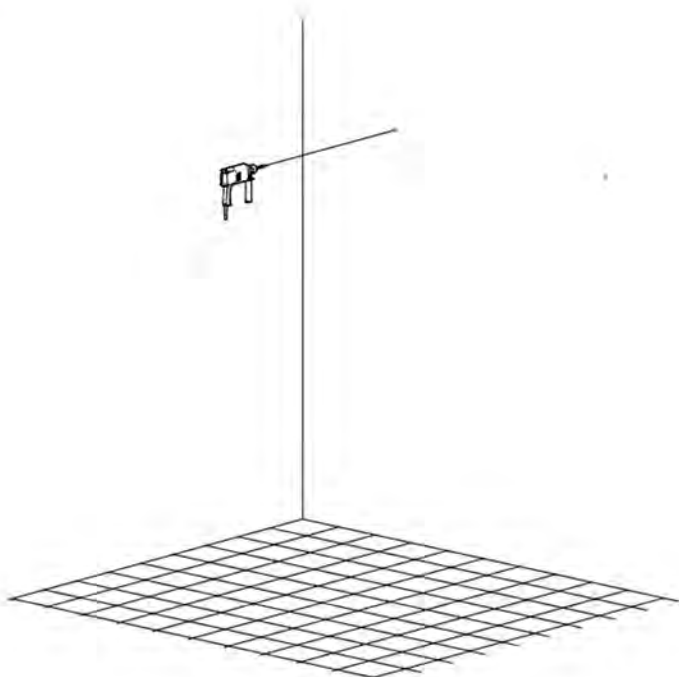

24.

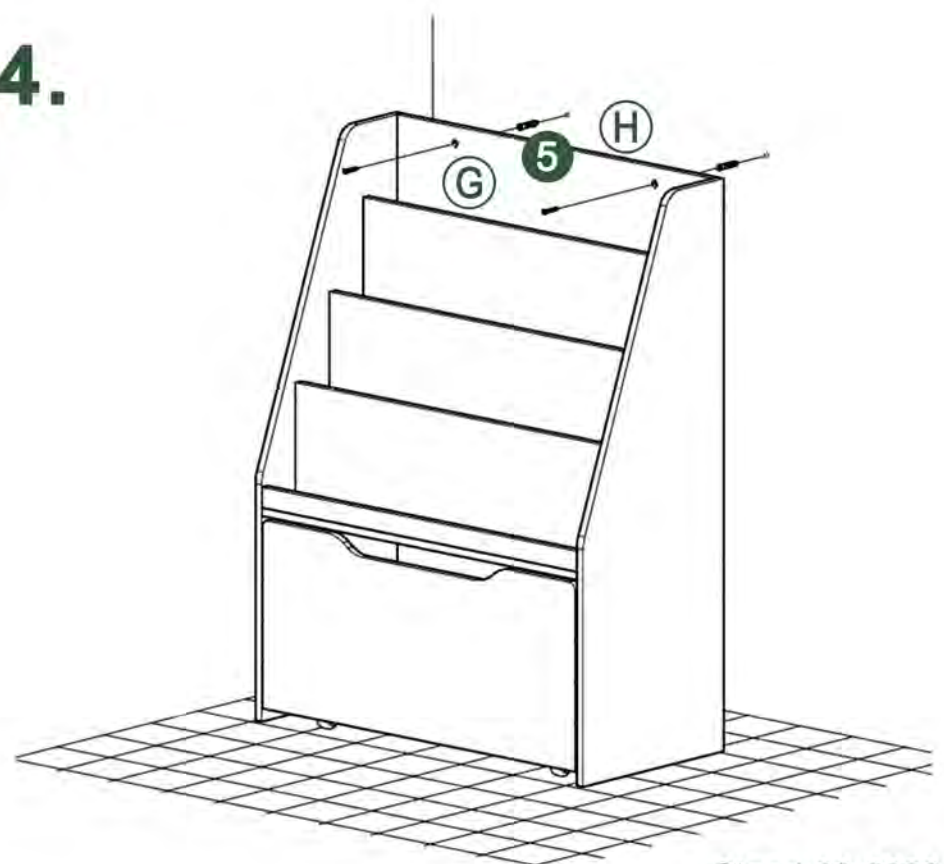



Scan the QR code to
share your review