



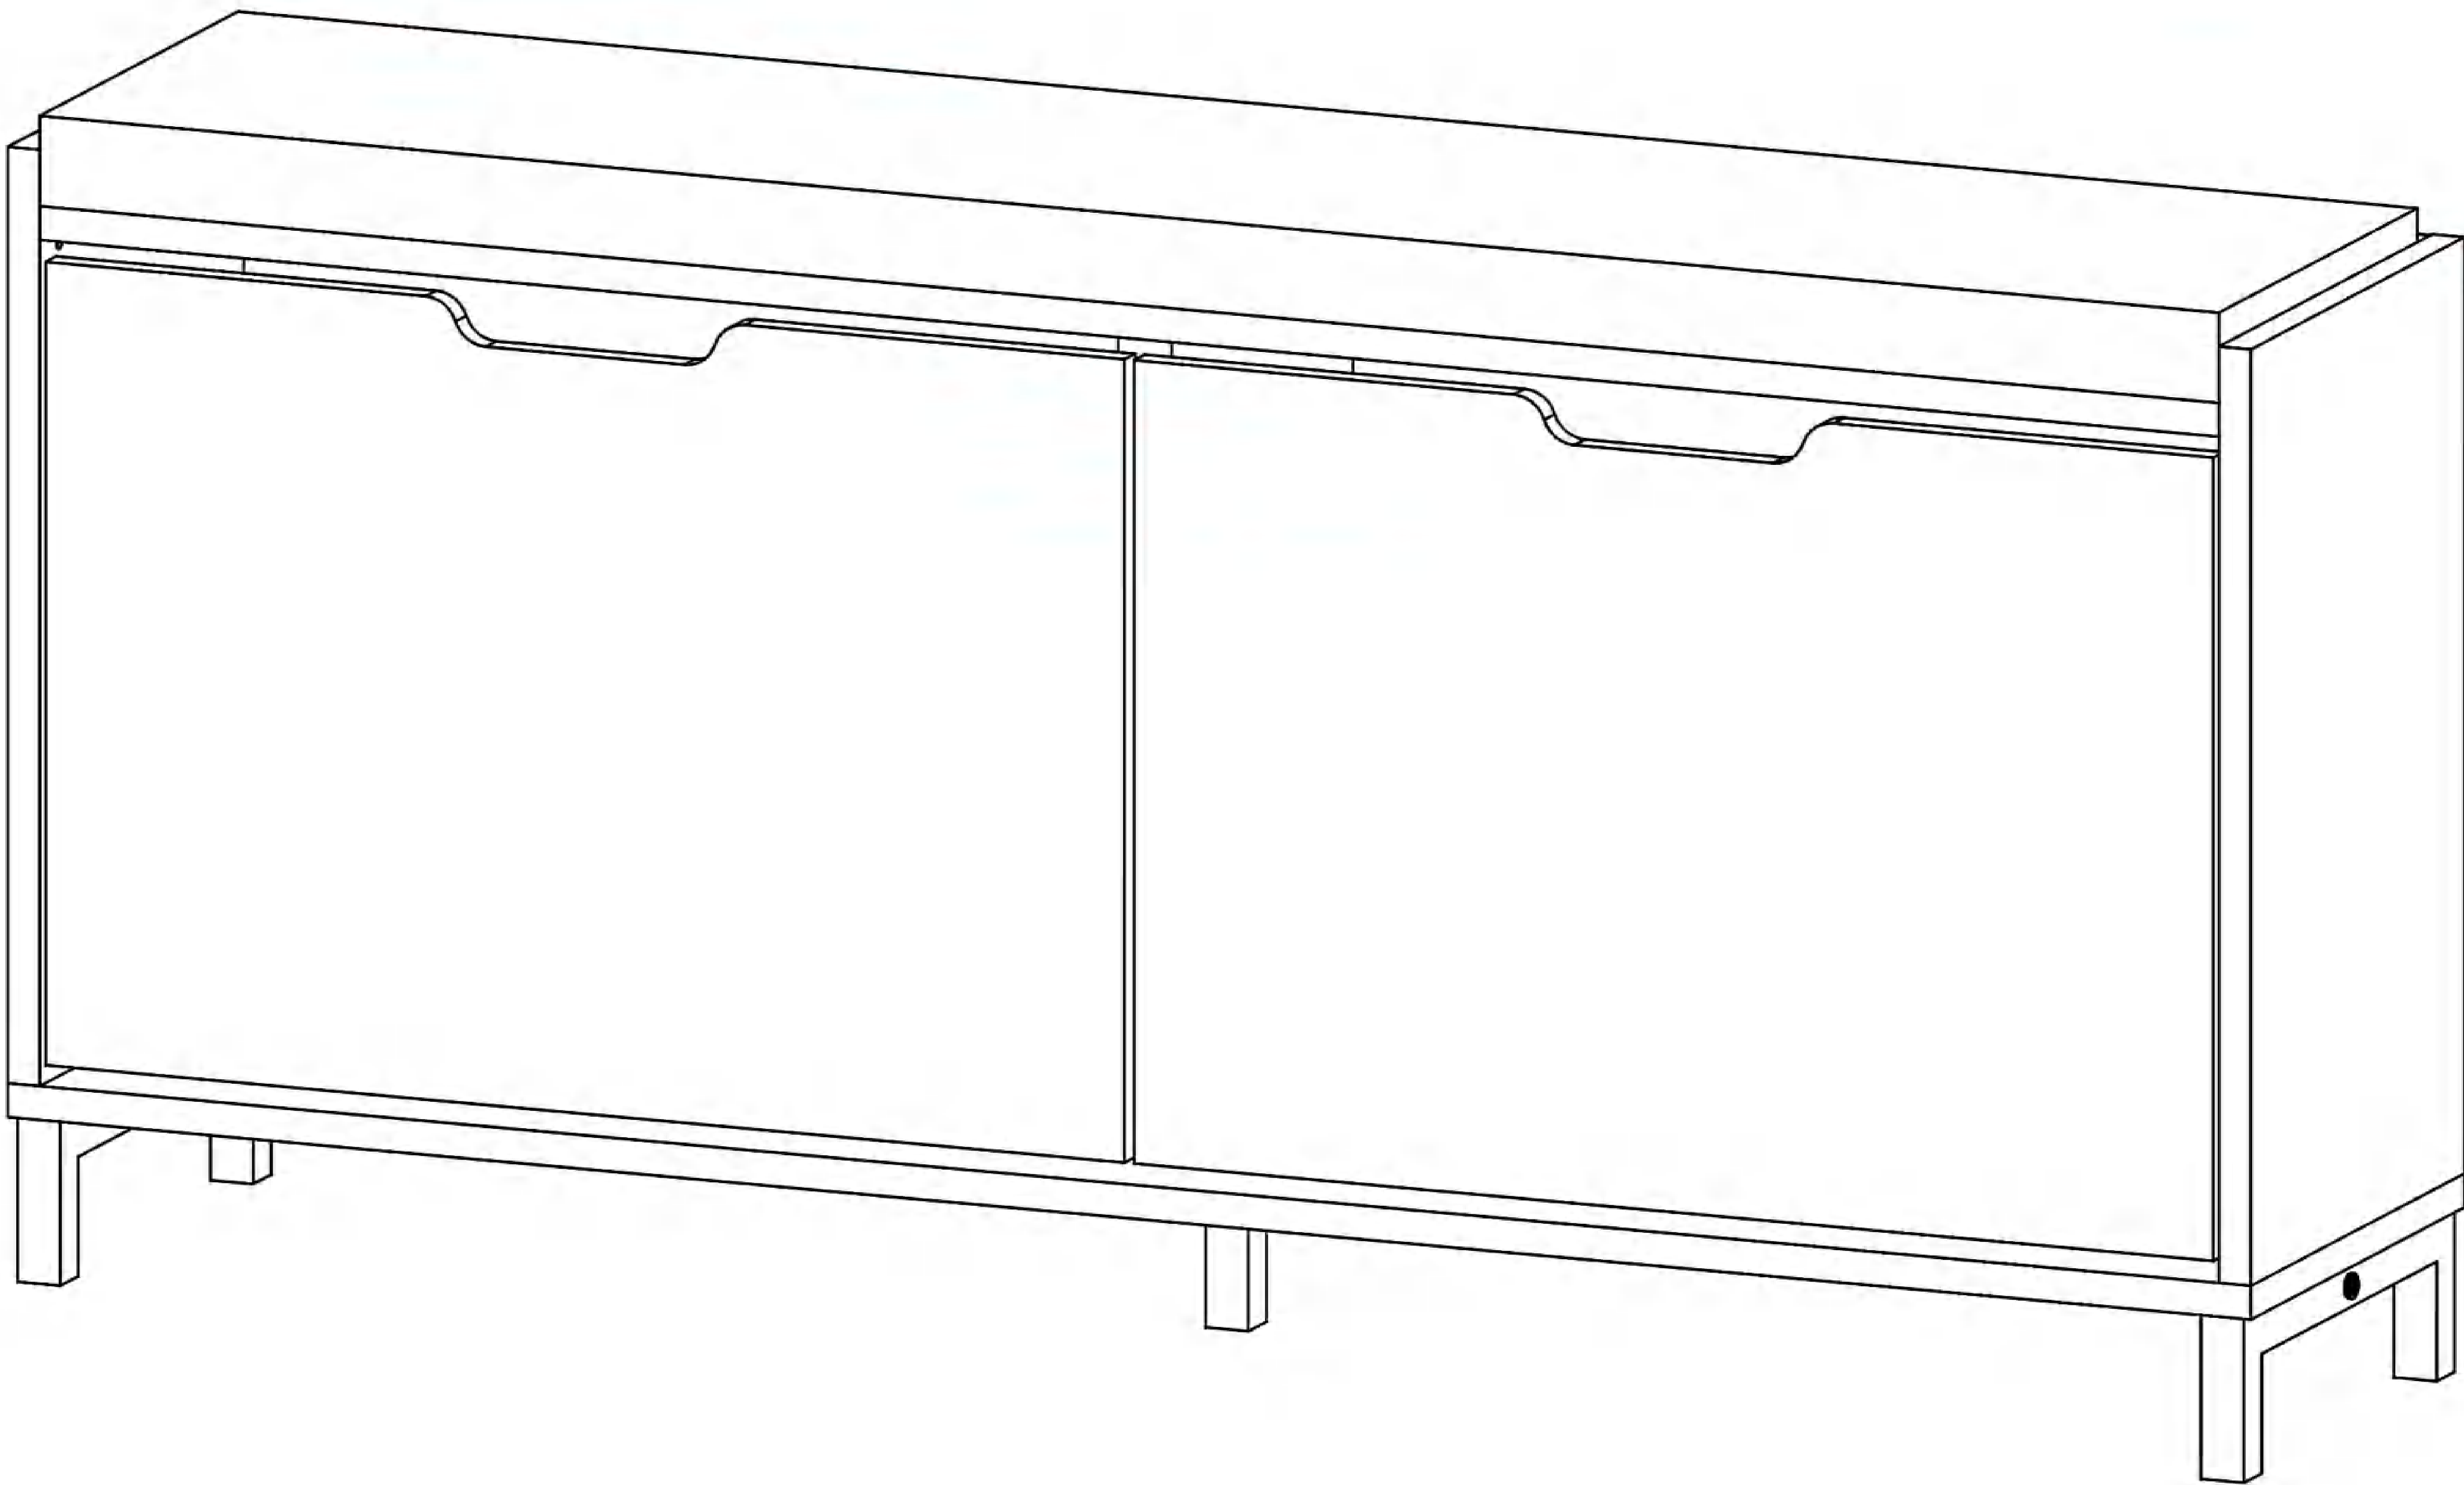



FSR151-L

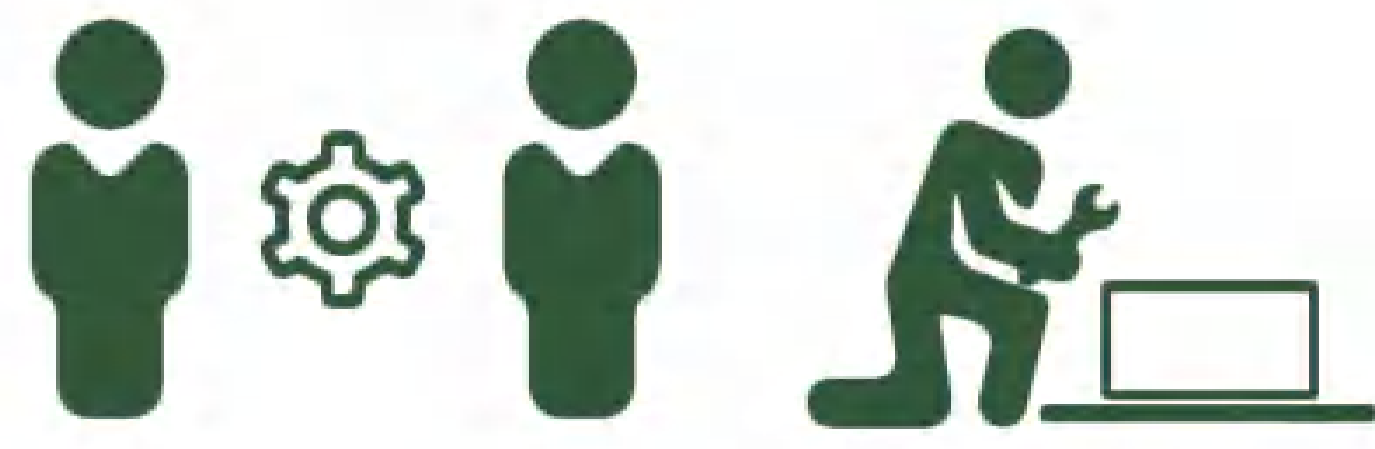


TOOLS:






Pour en savoir plus:
www.quefairedemesdechets.fr

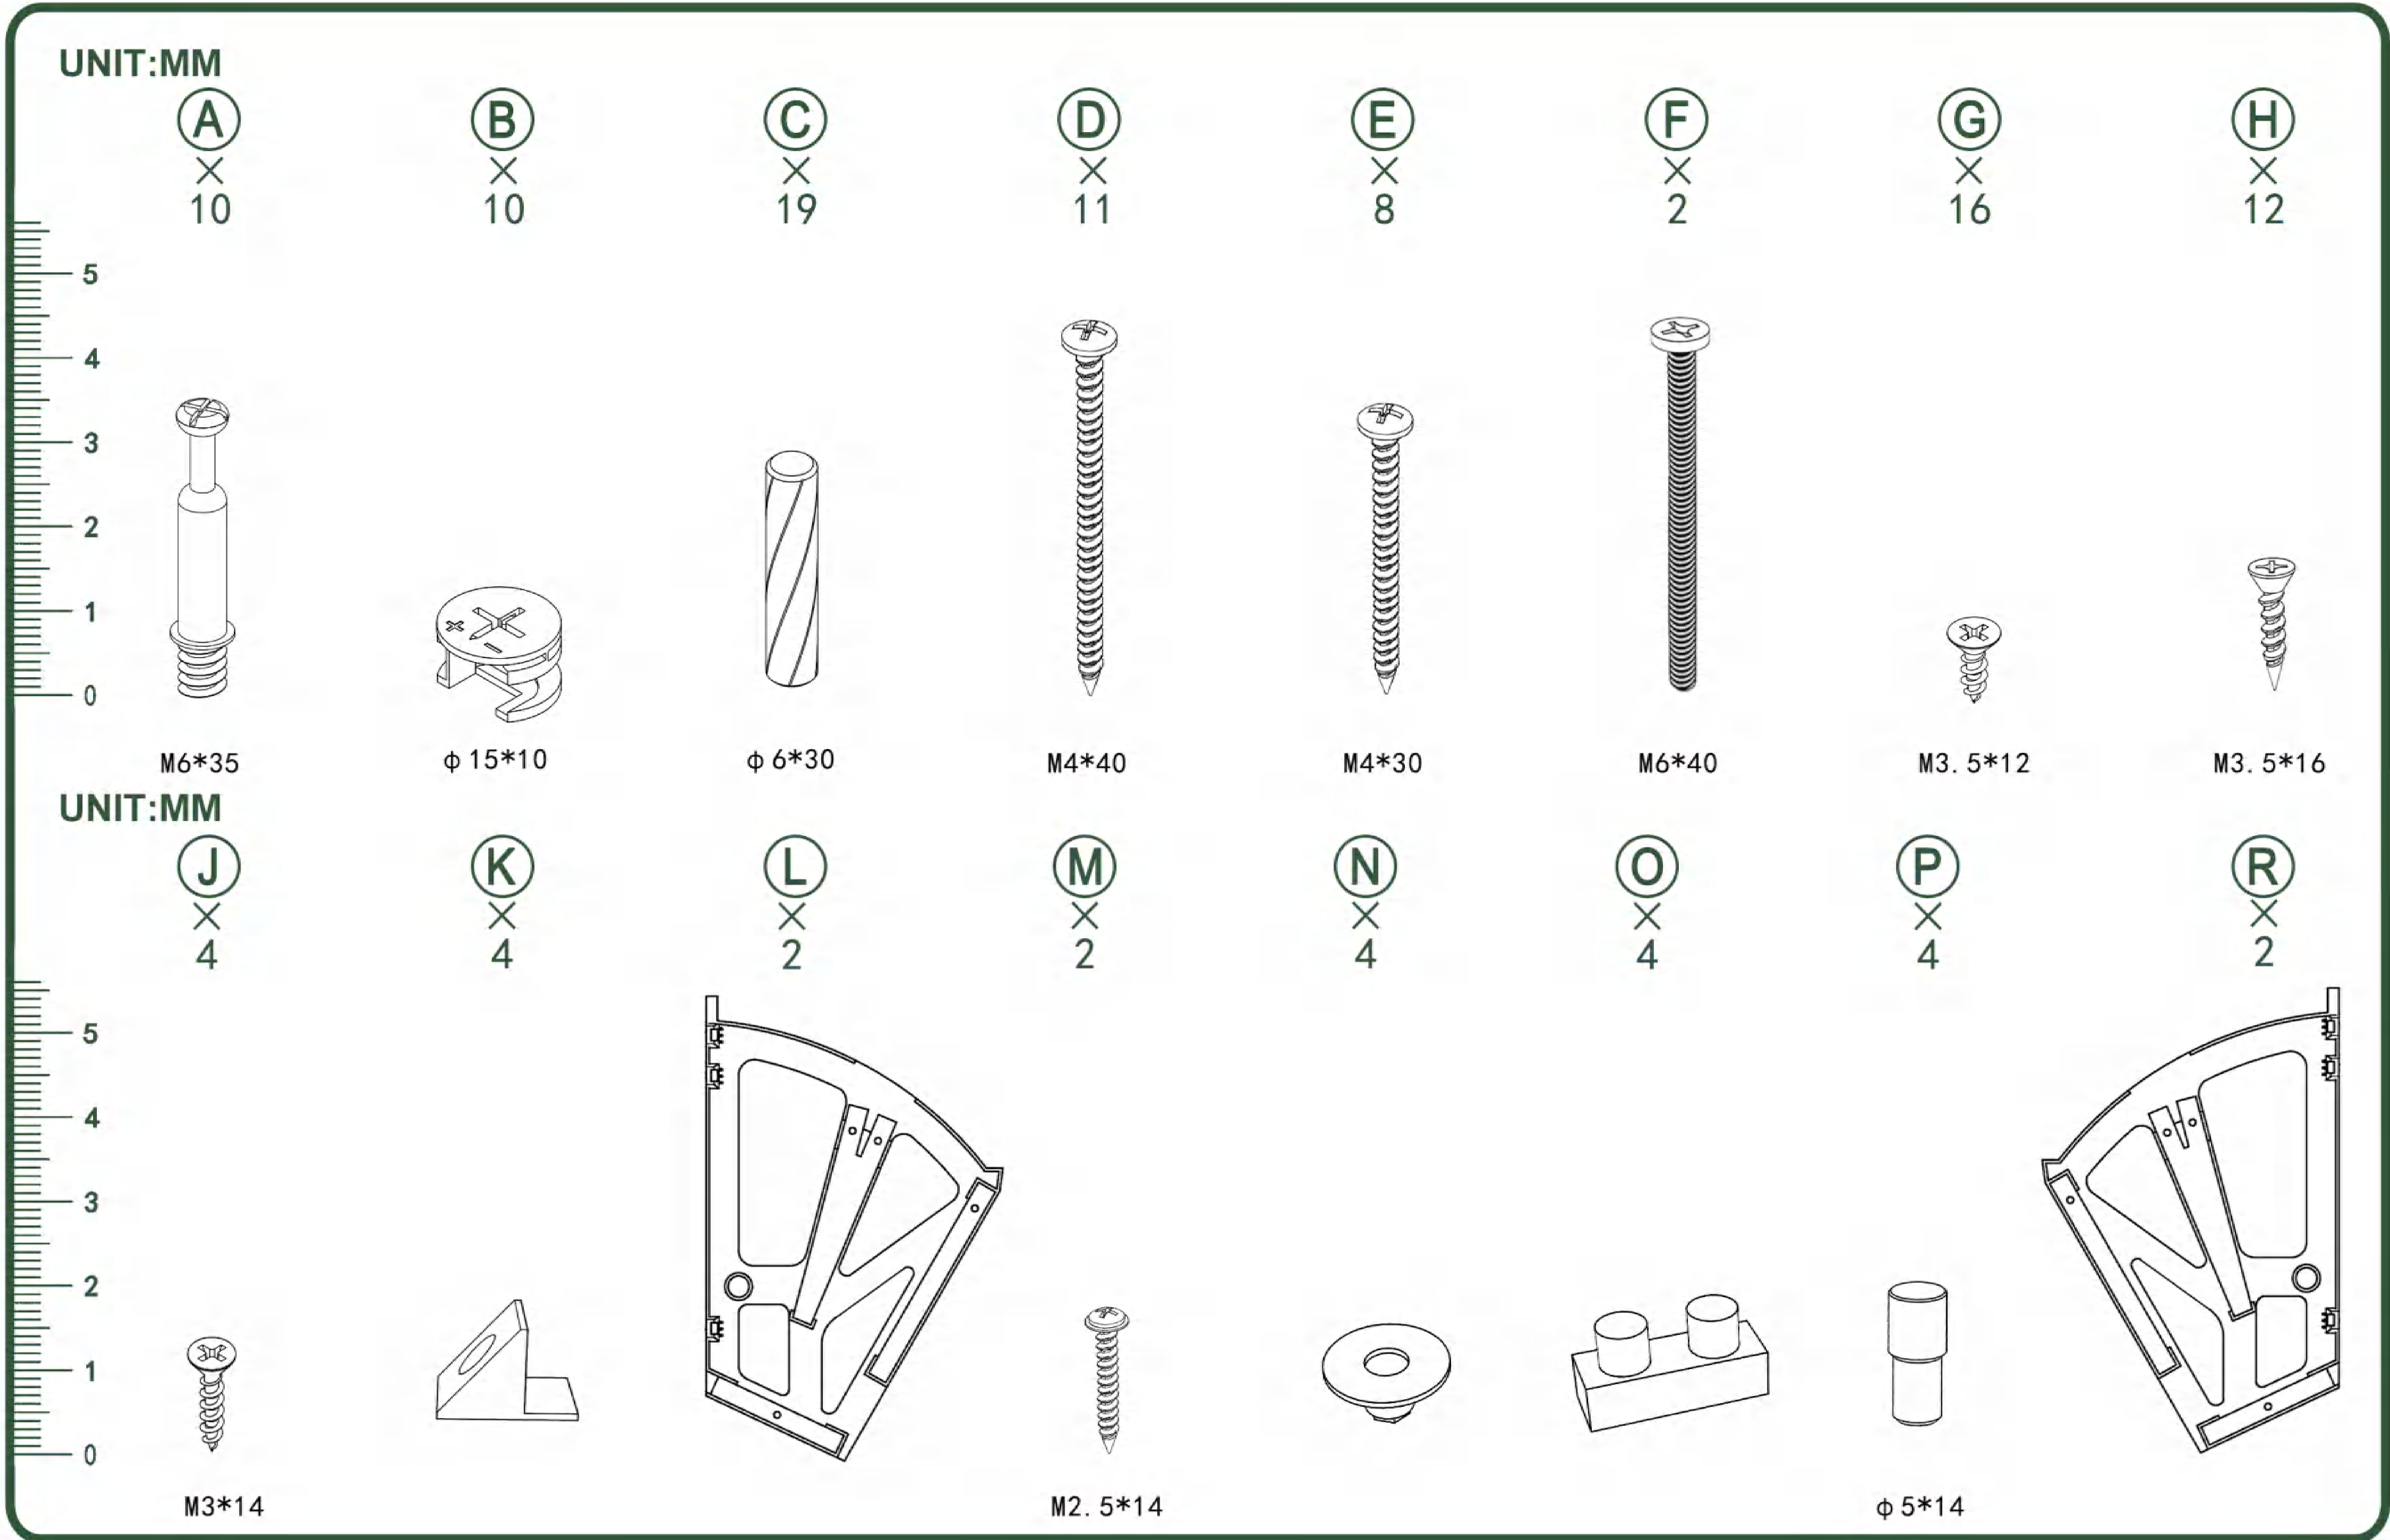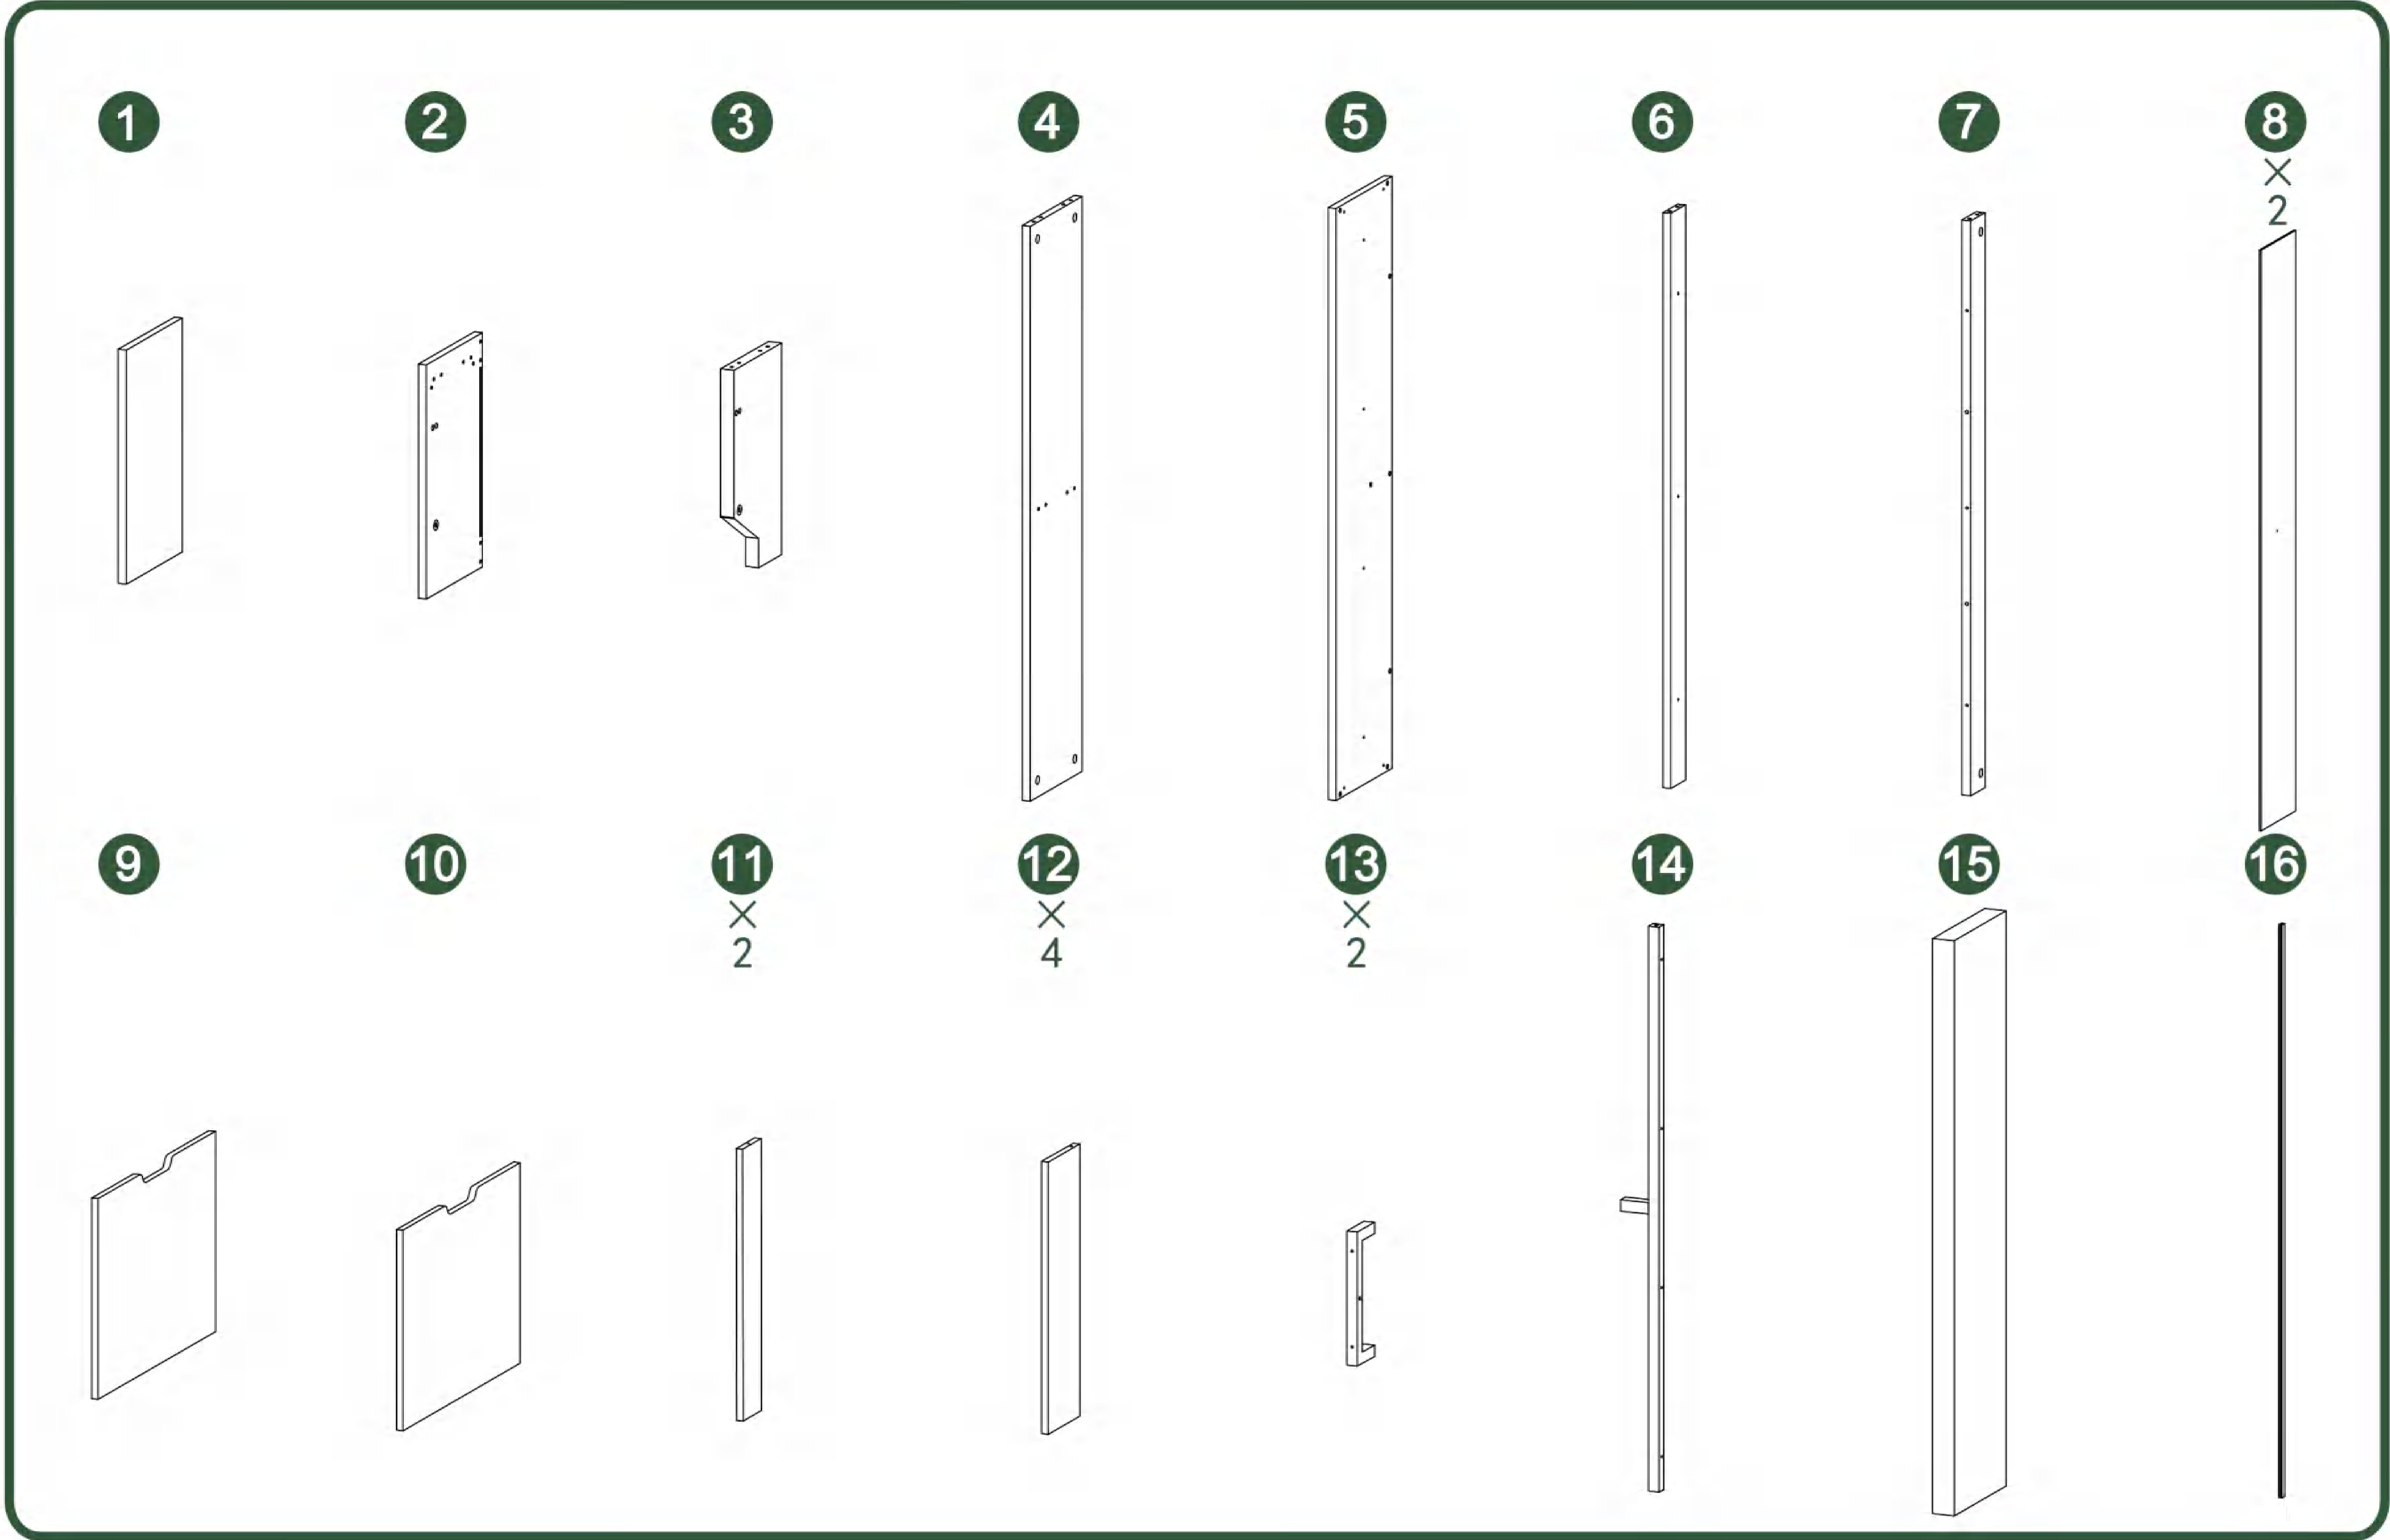


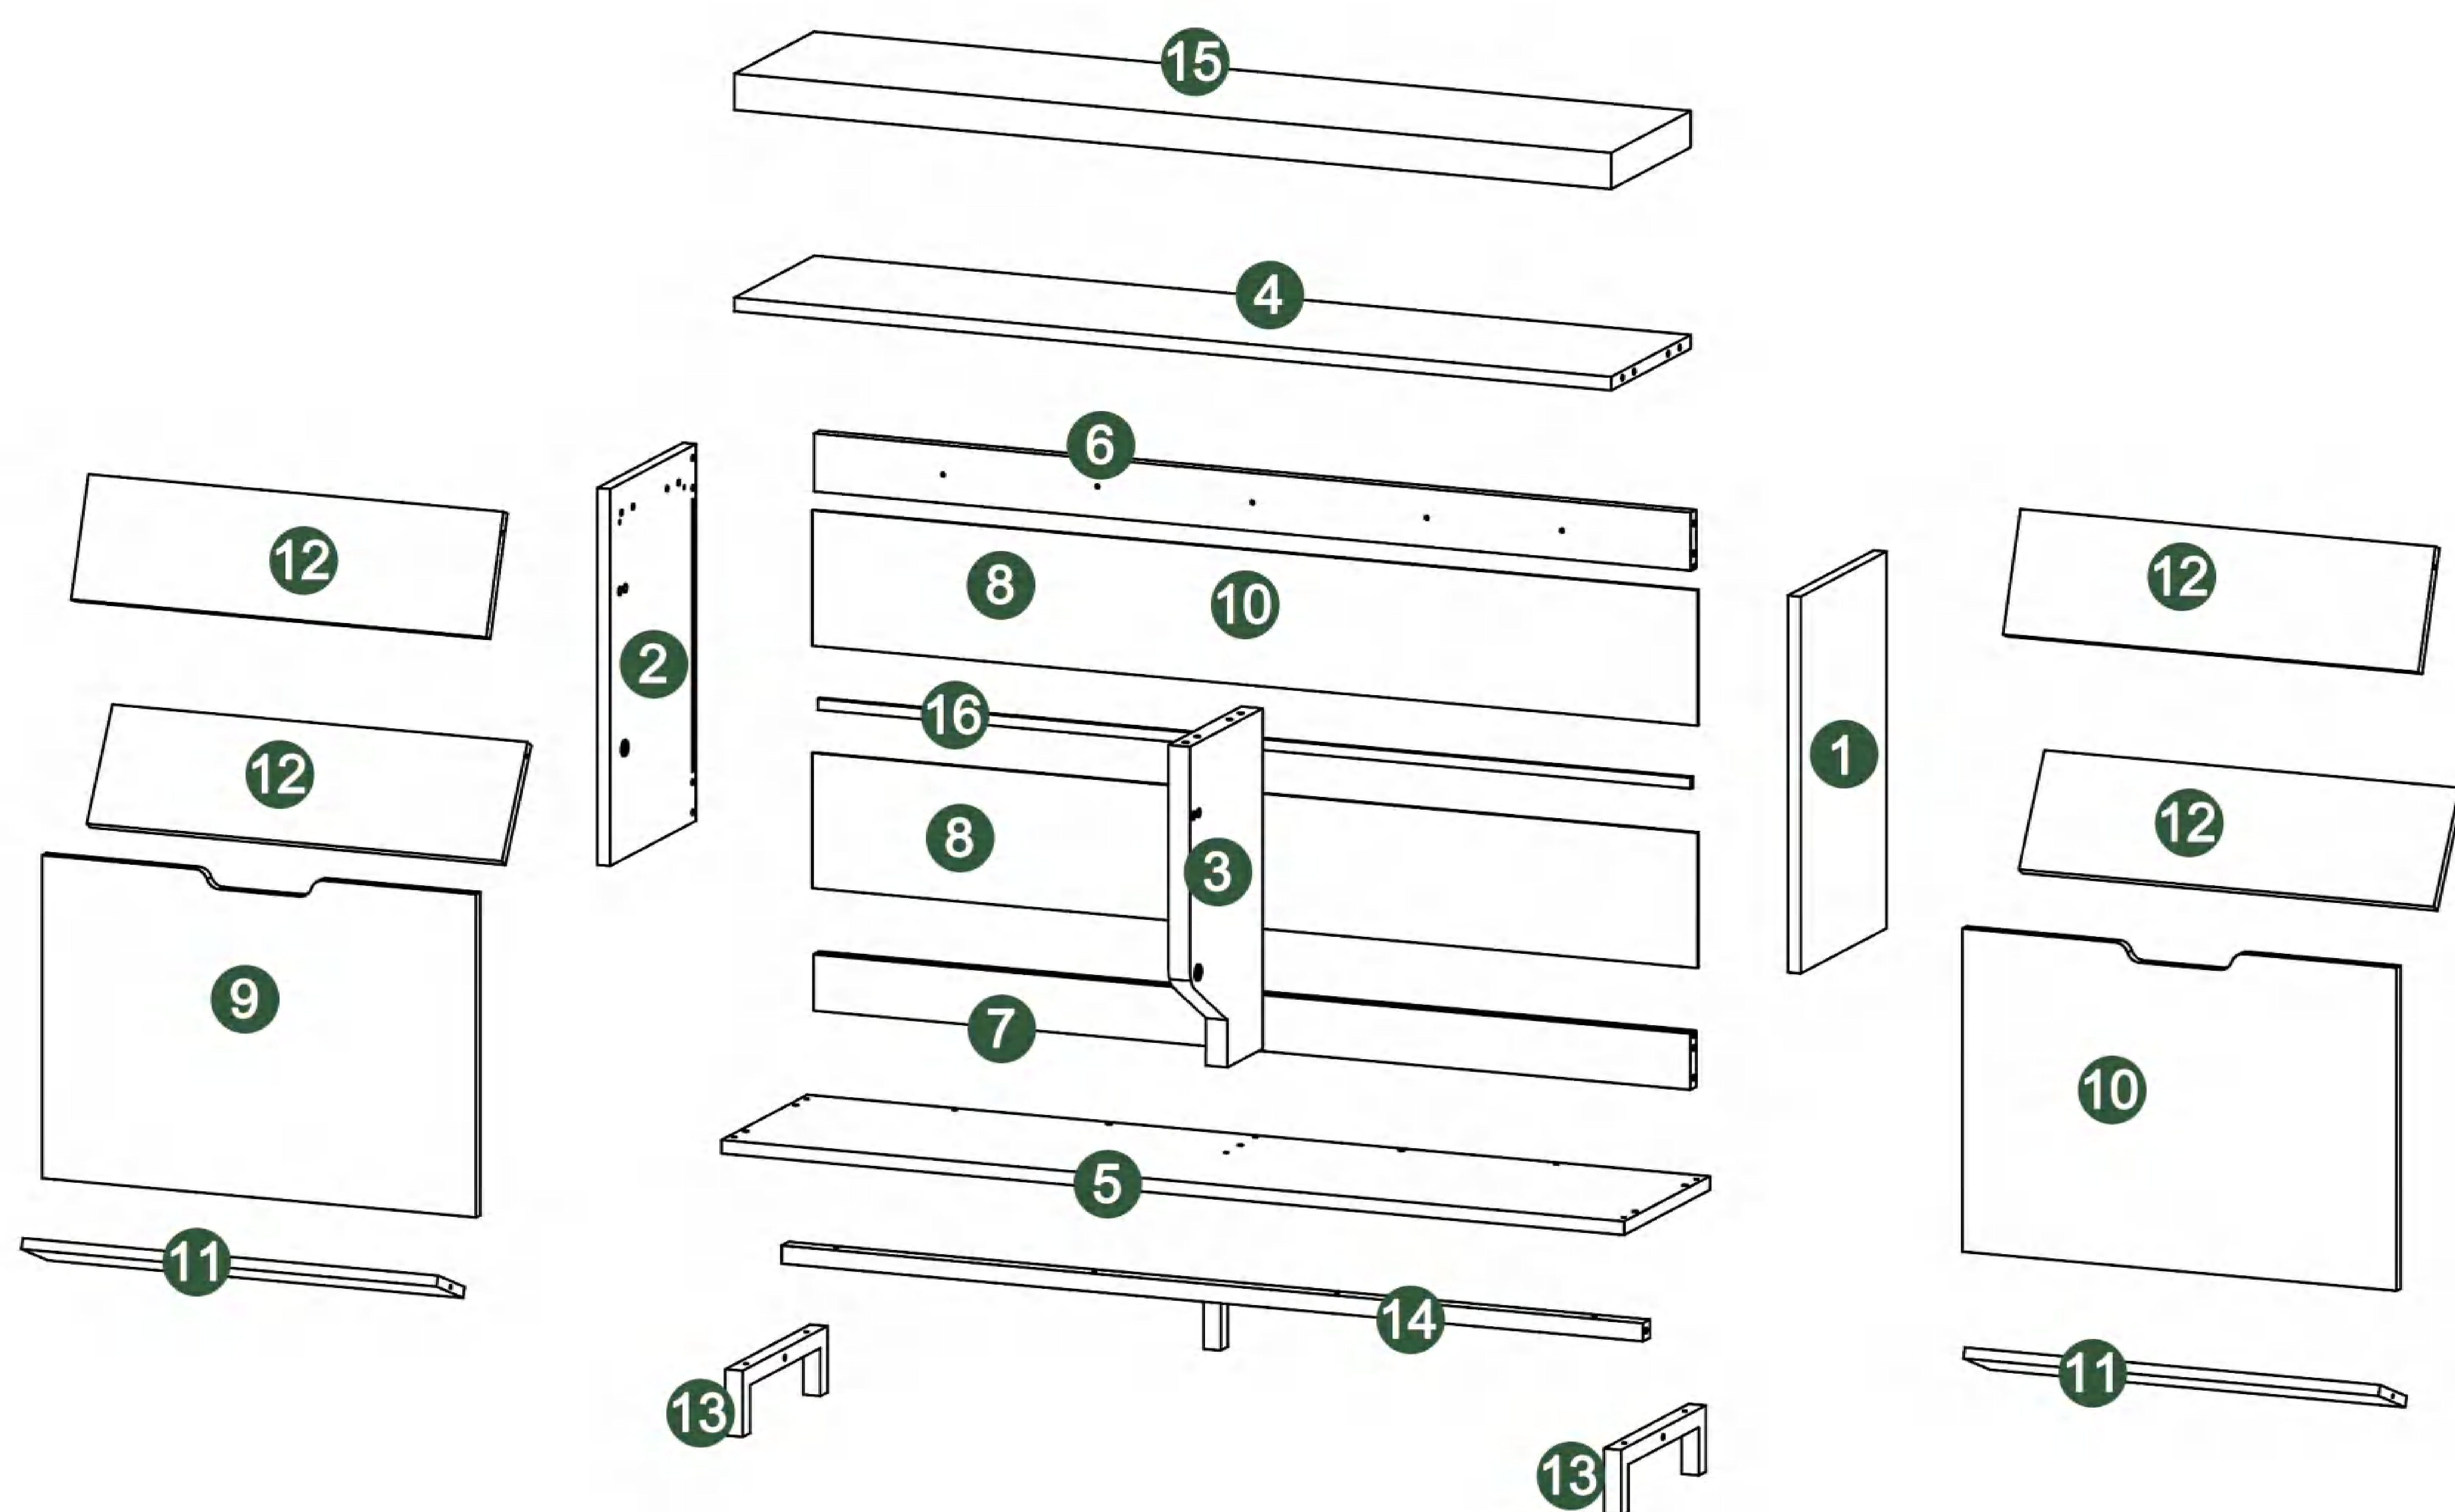


BOLT INSTALLATION AS BELOW:

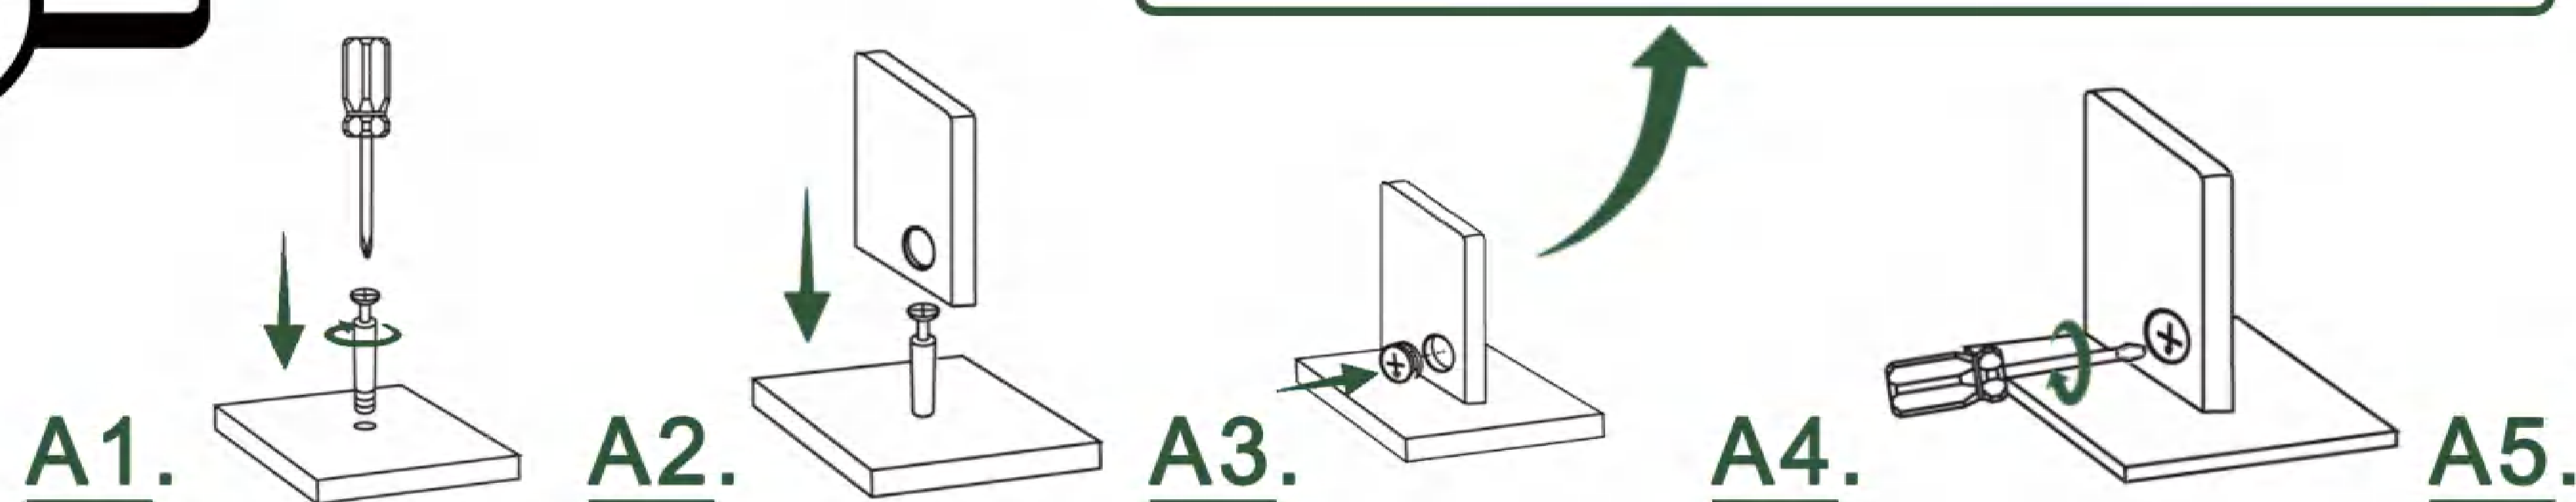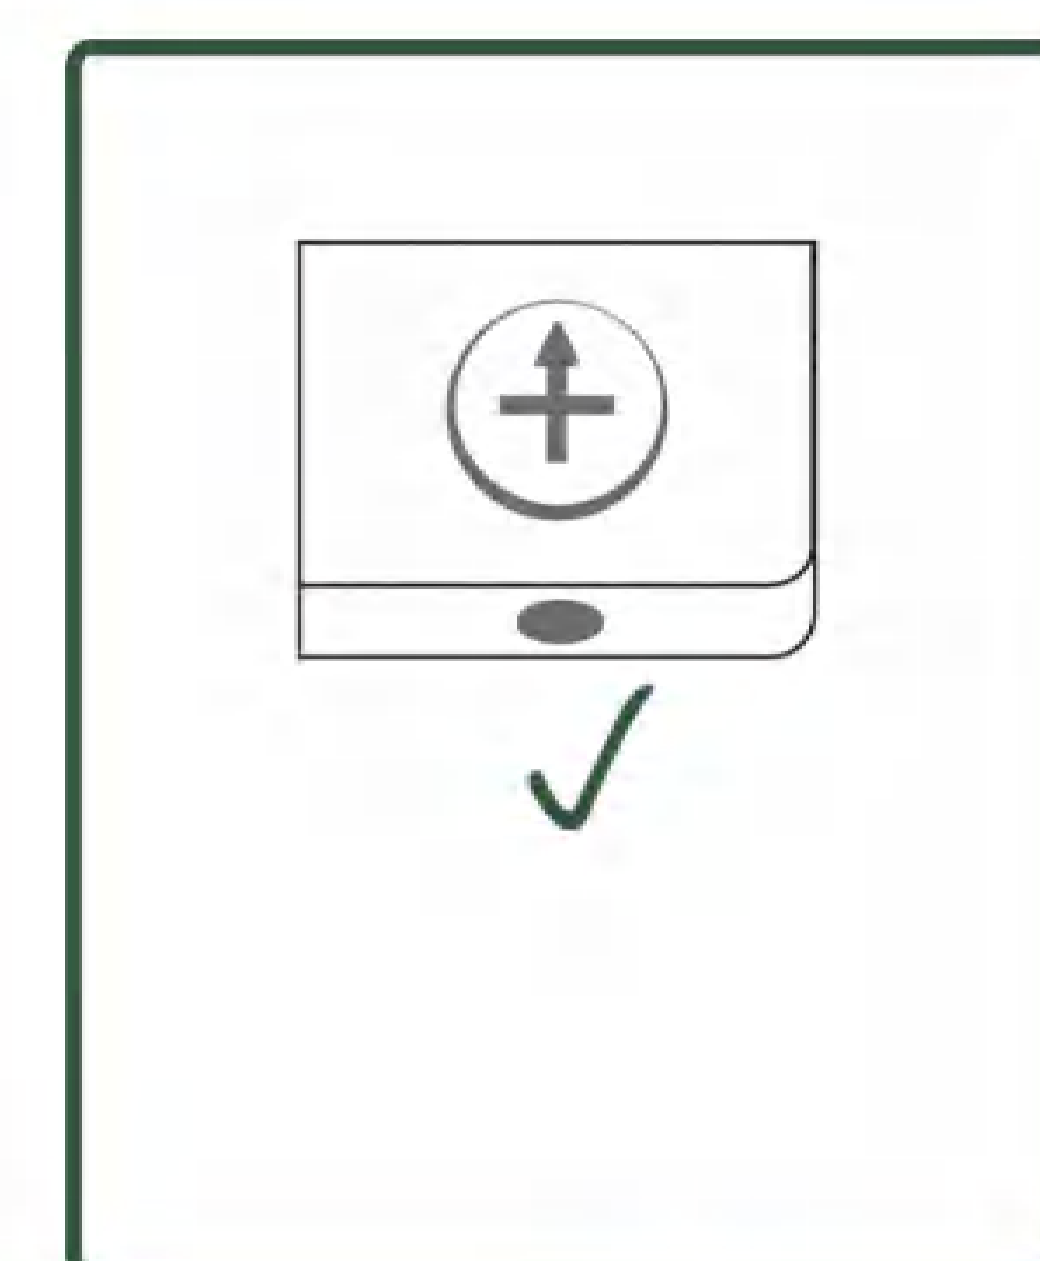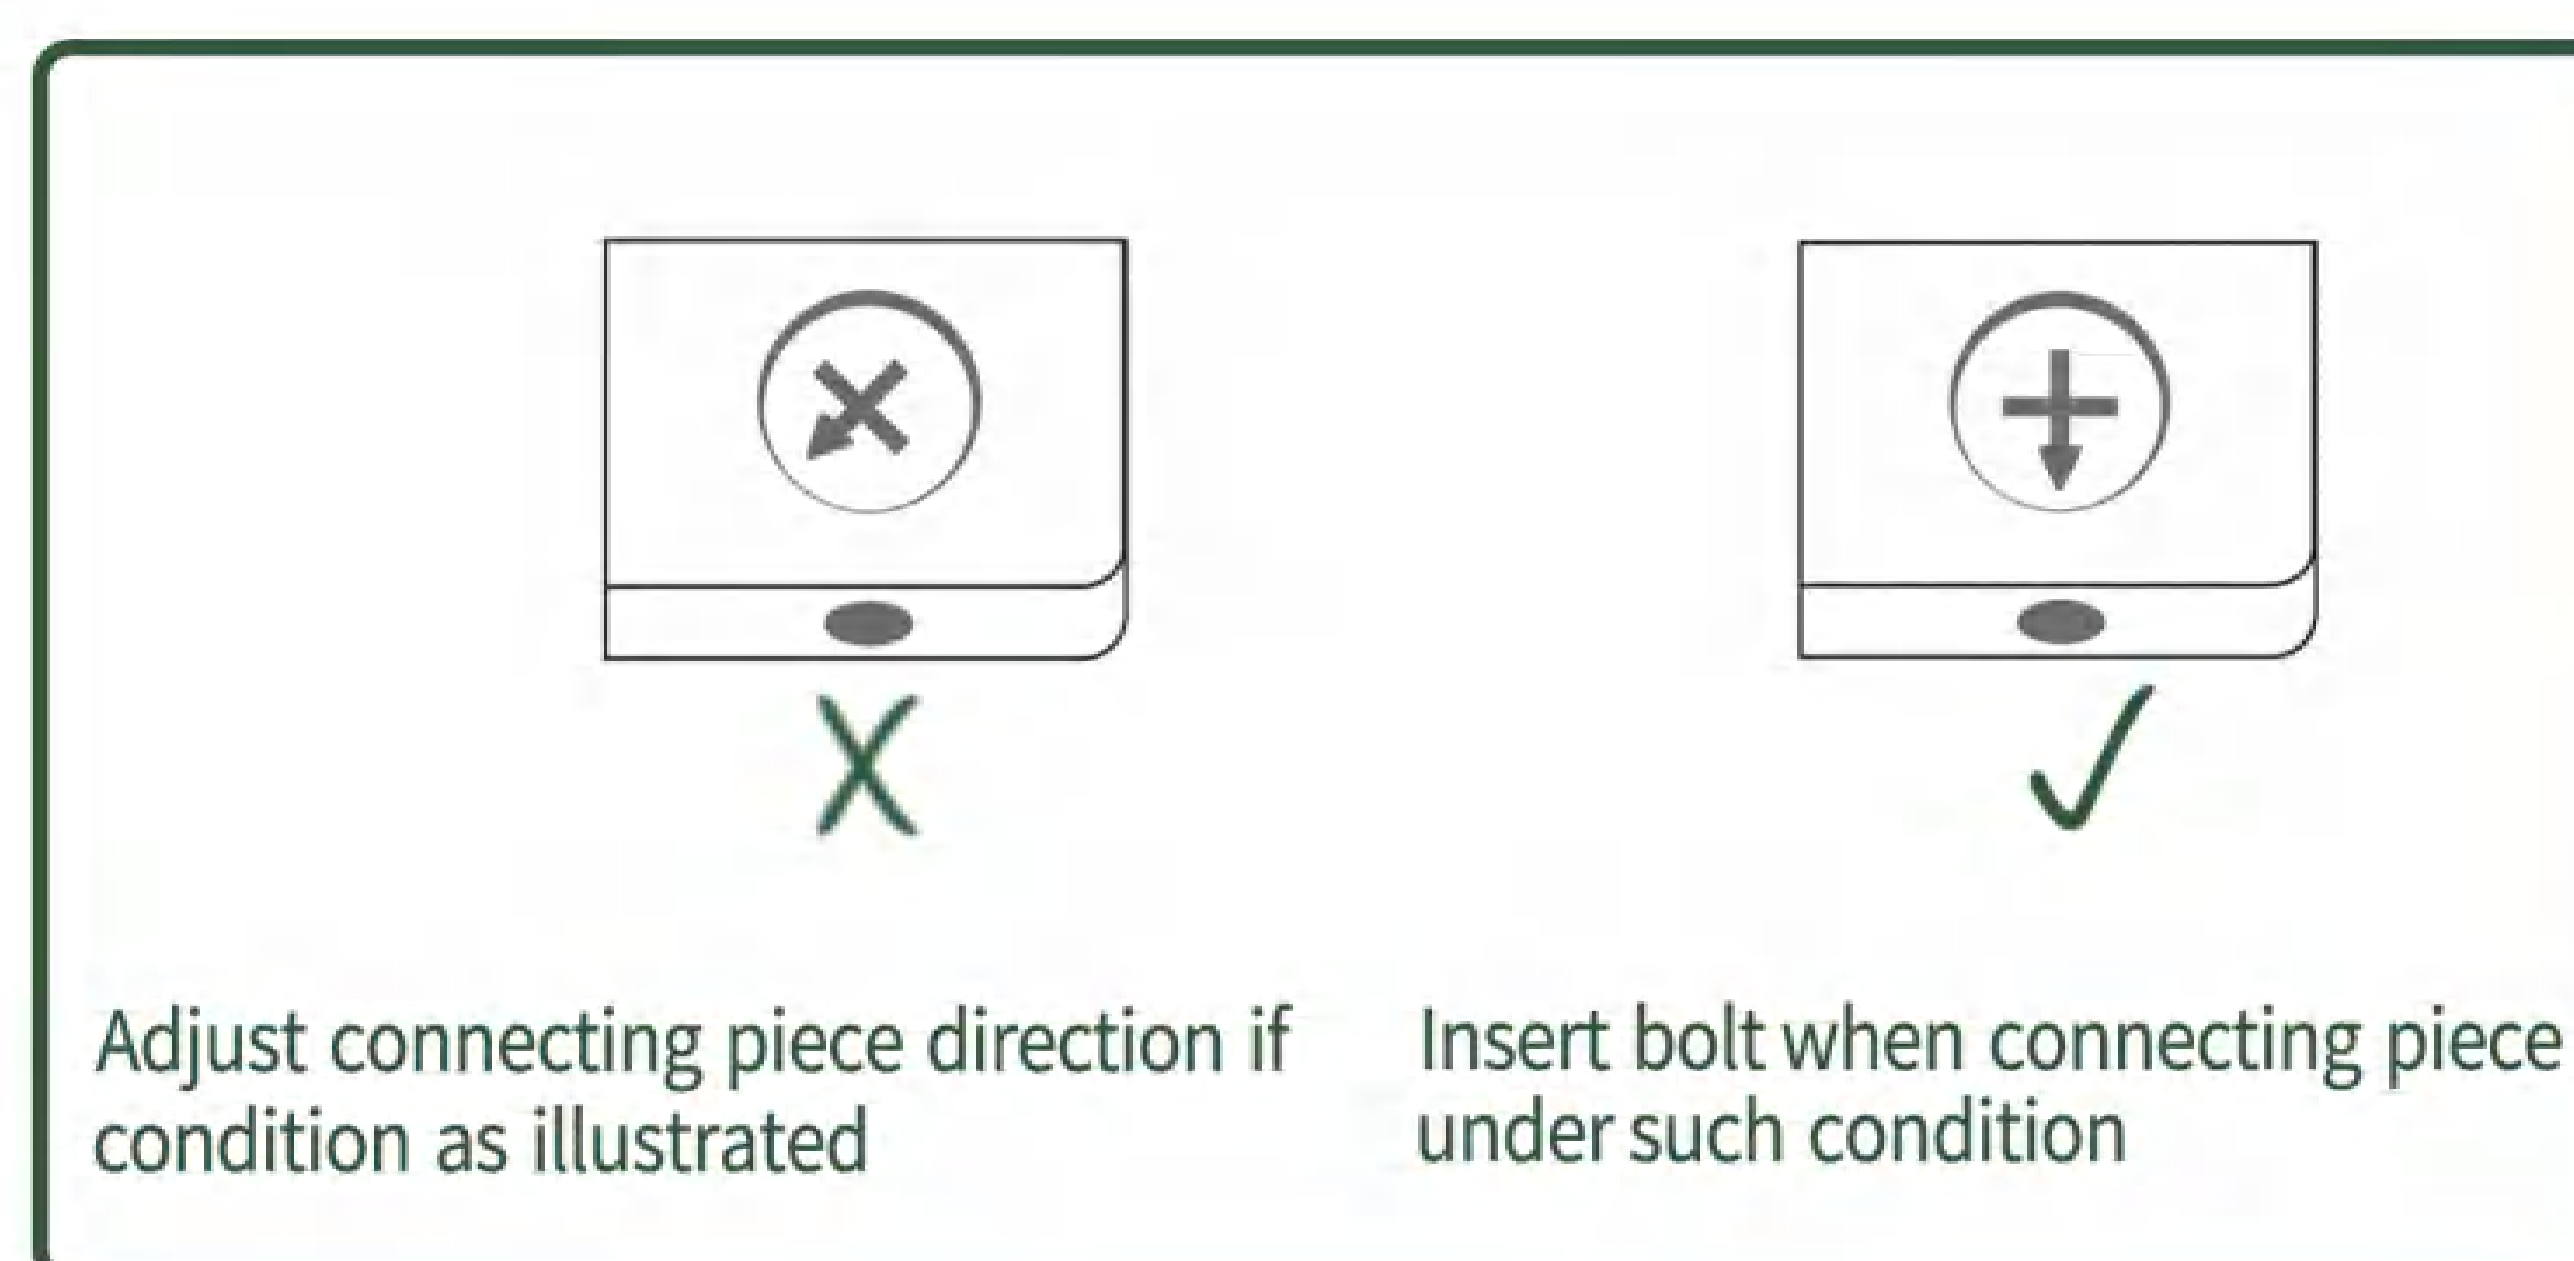


1.

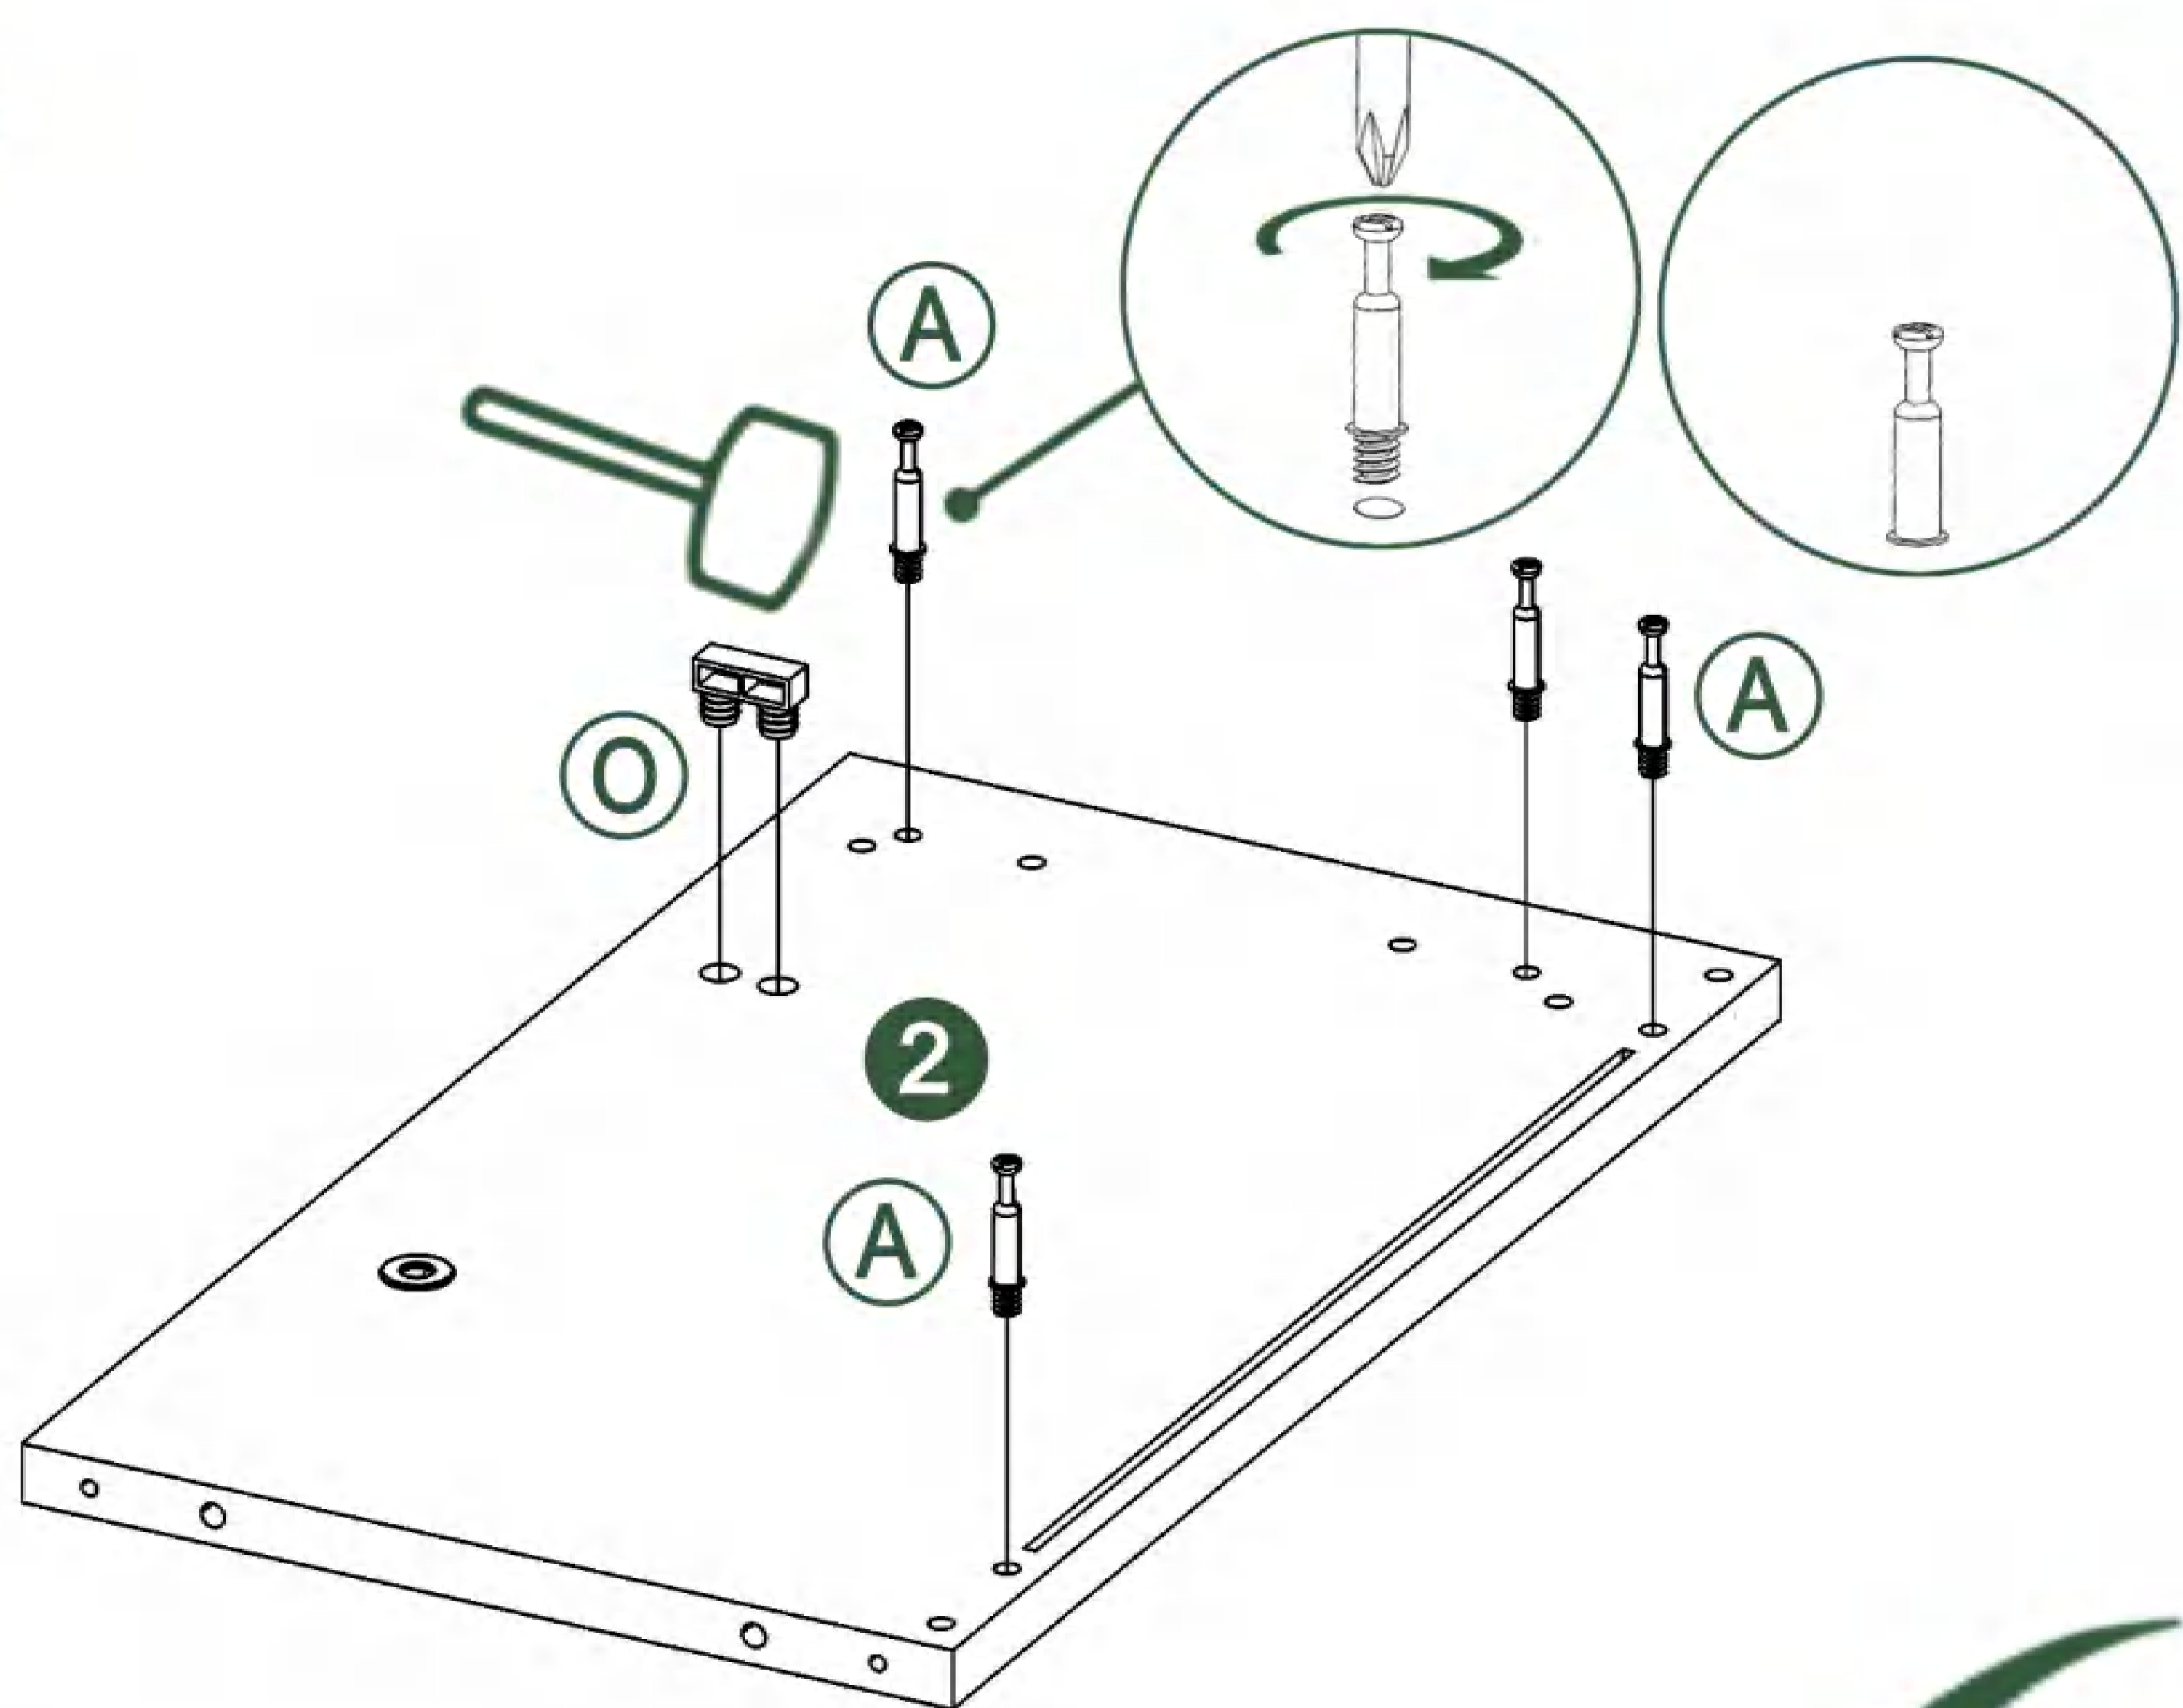


2.

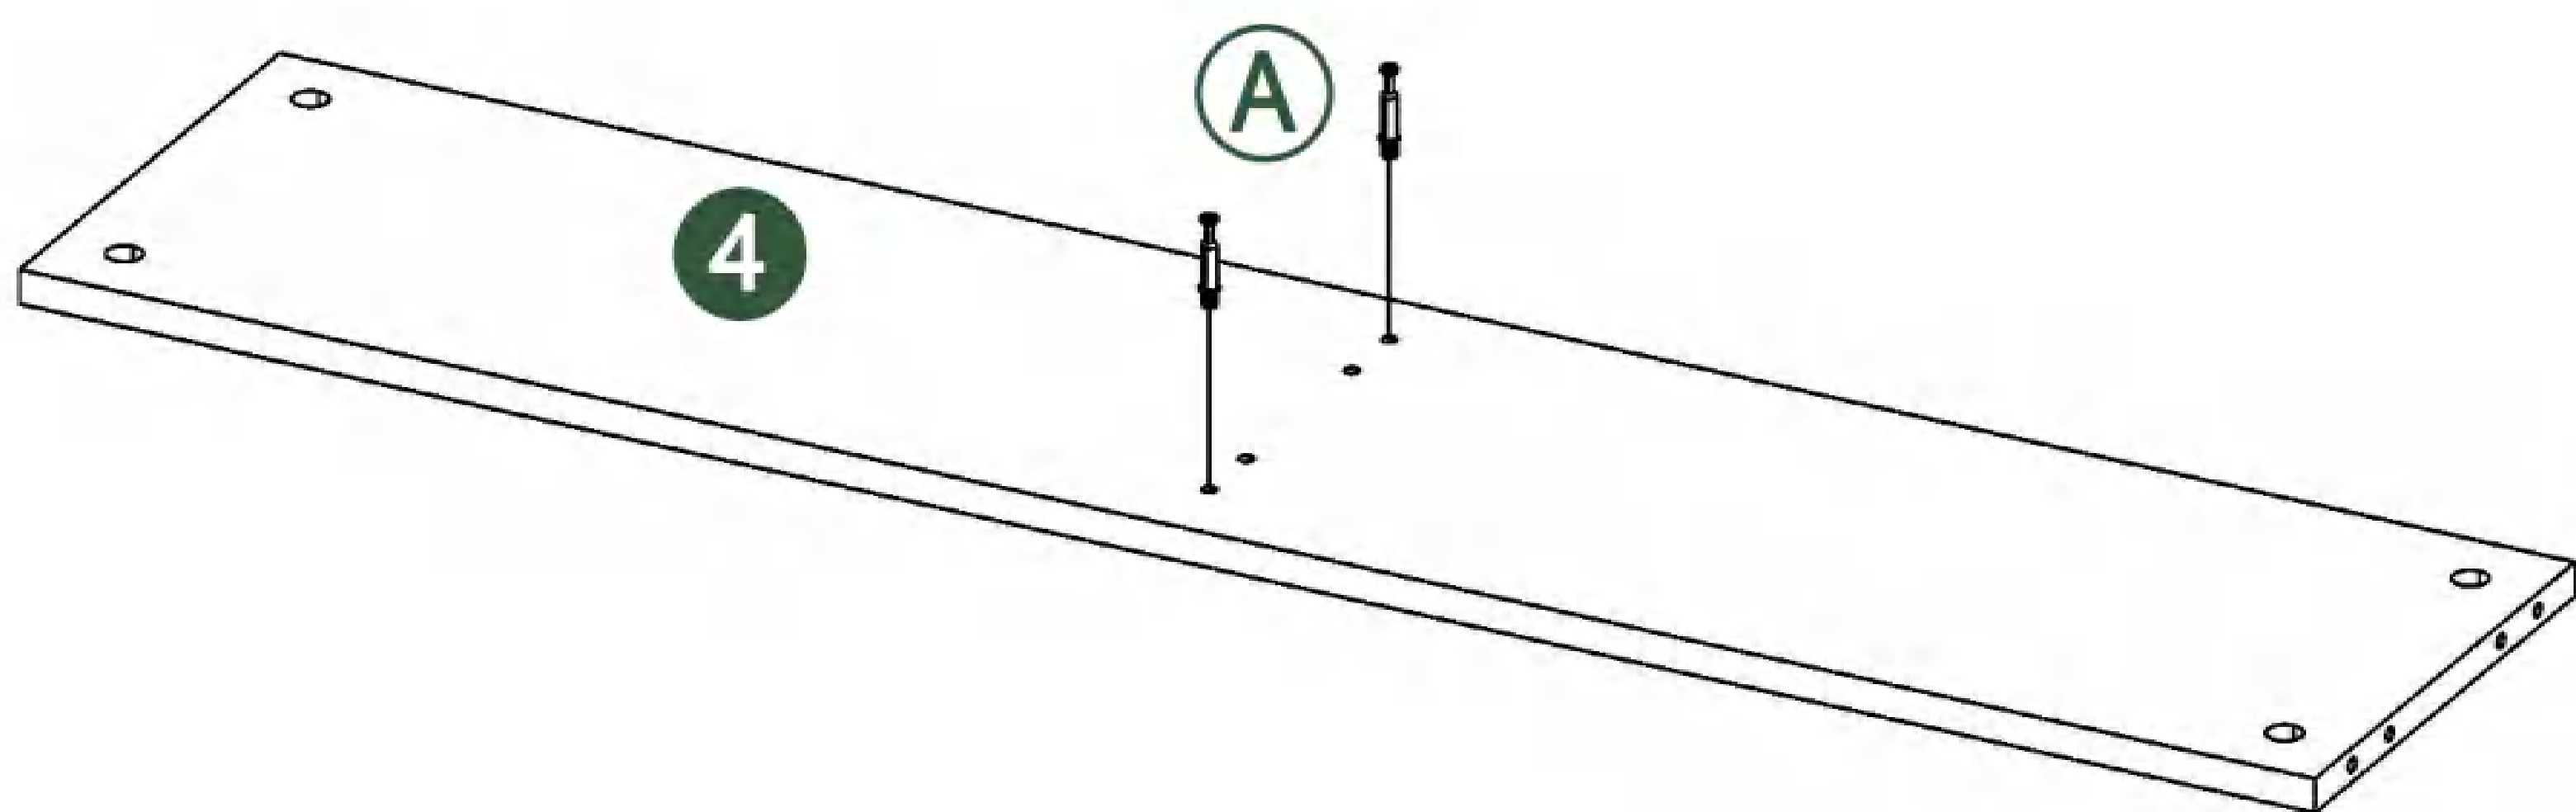


3.

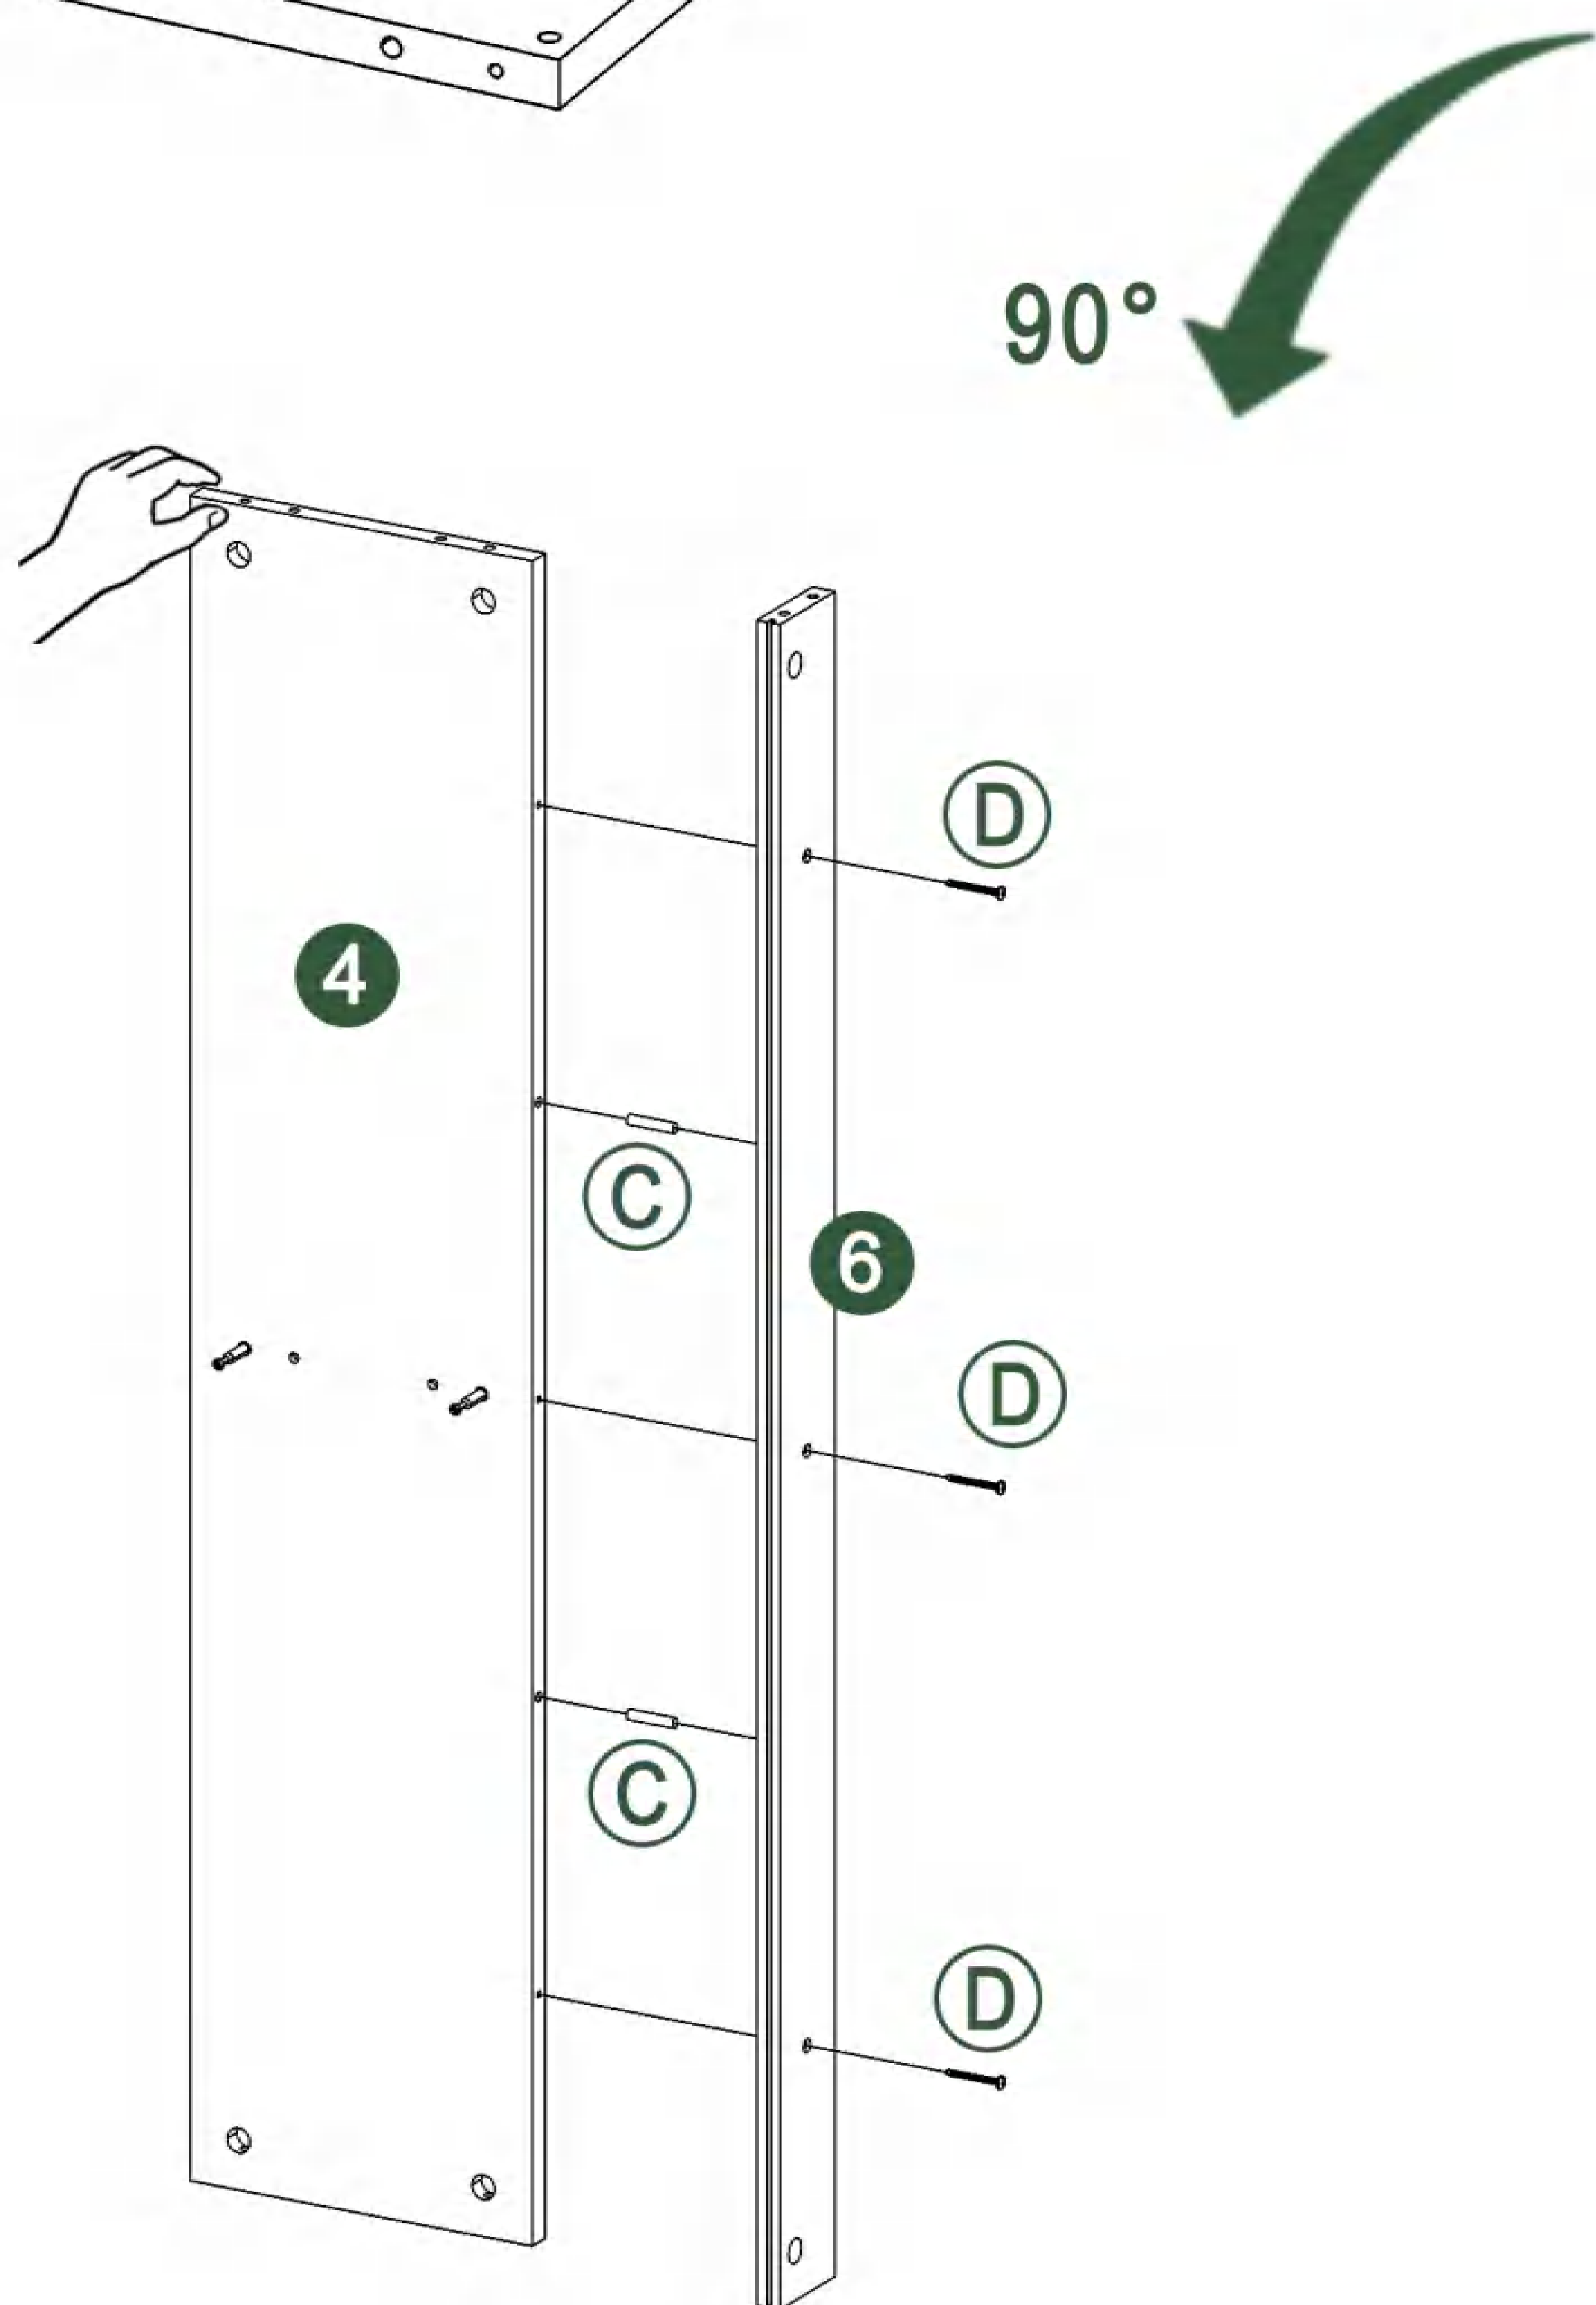


4.

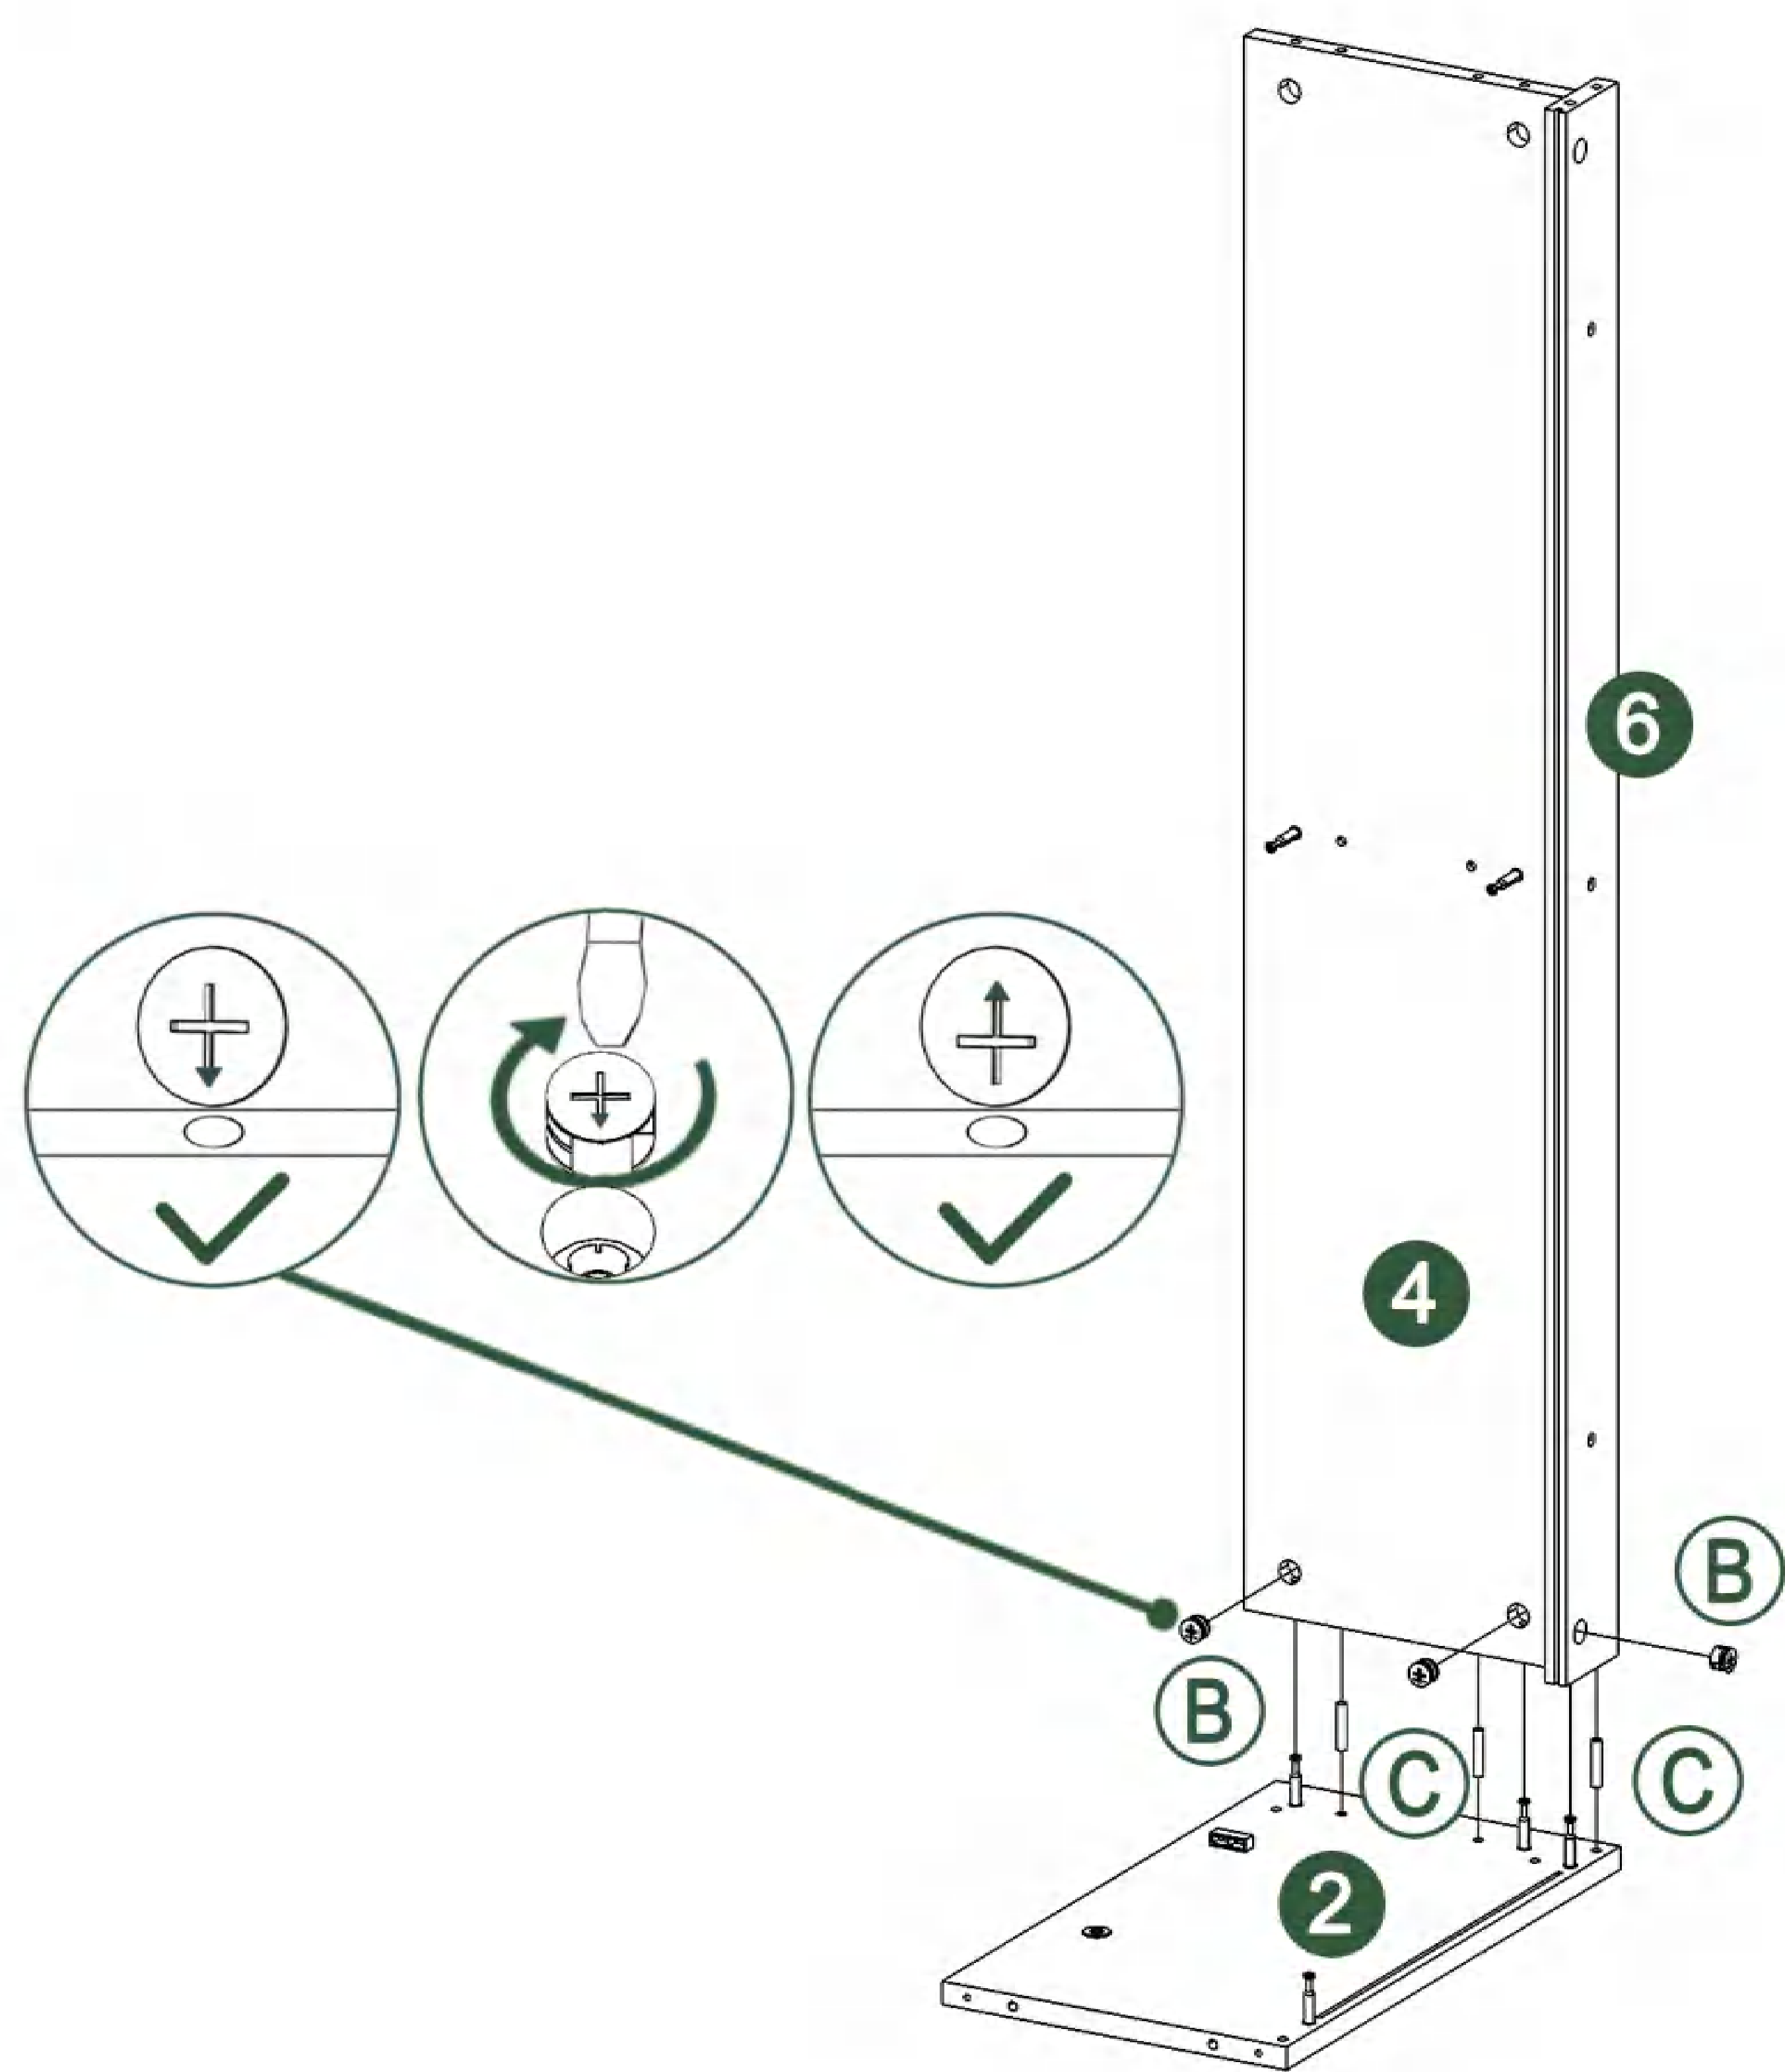


5.

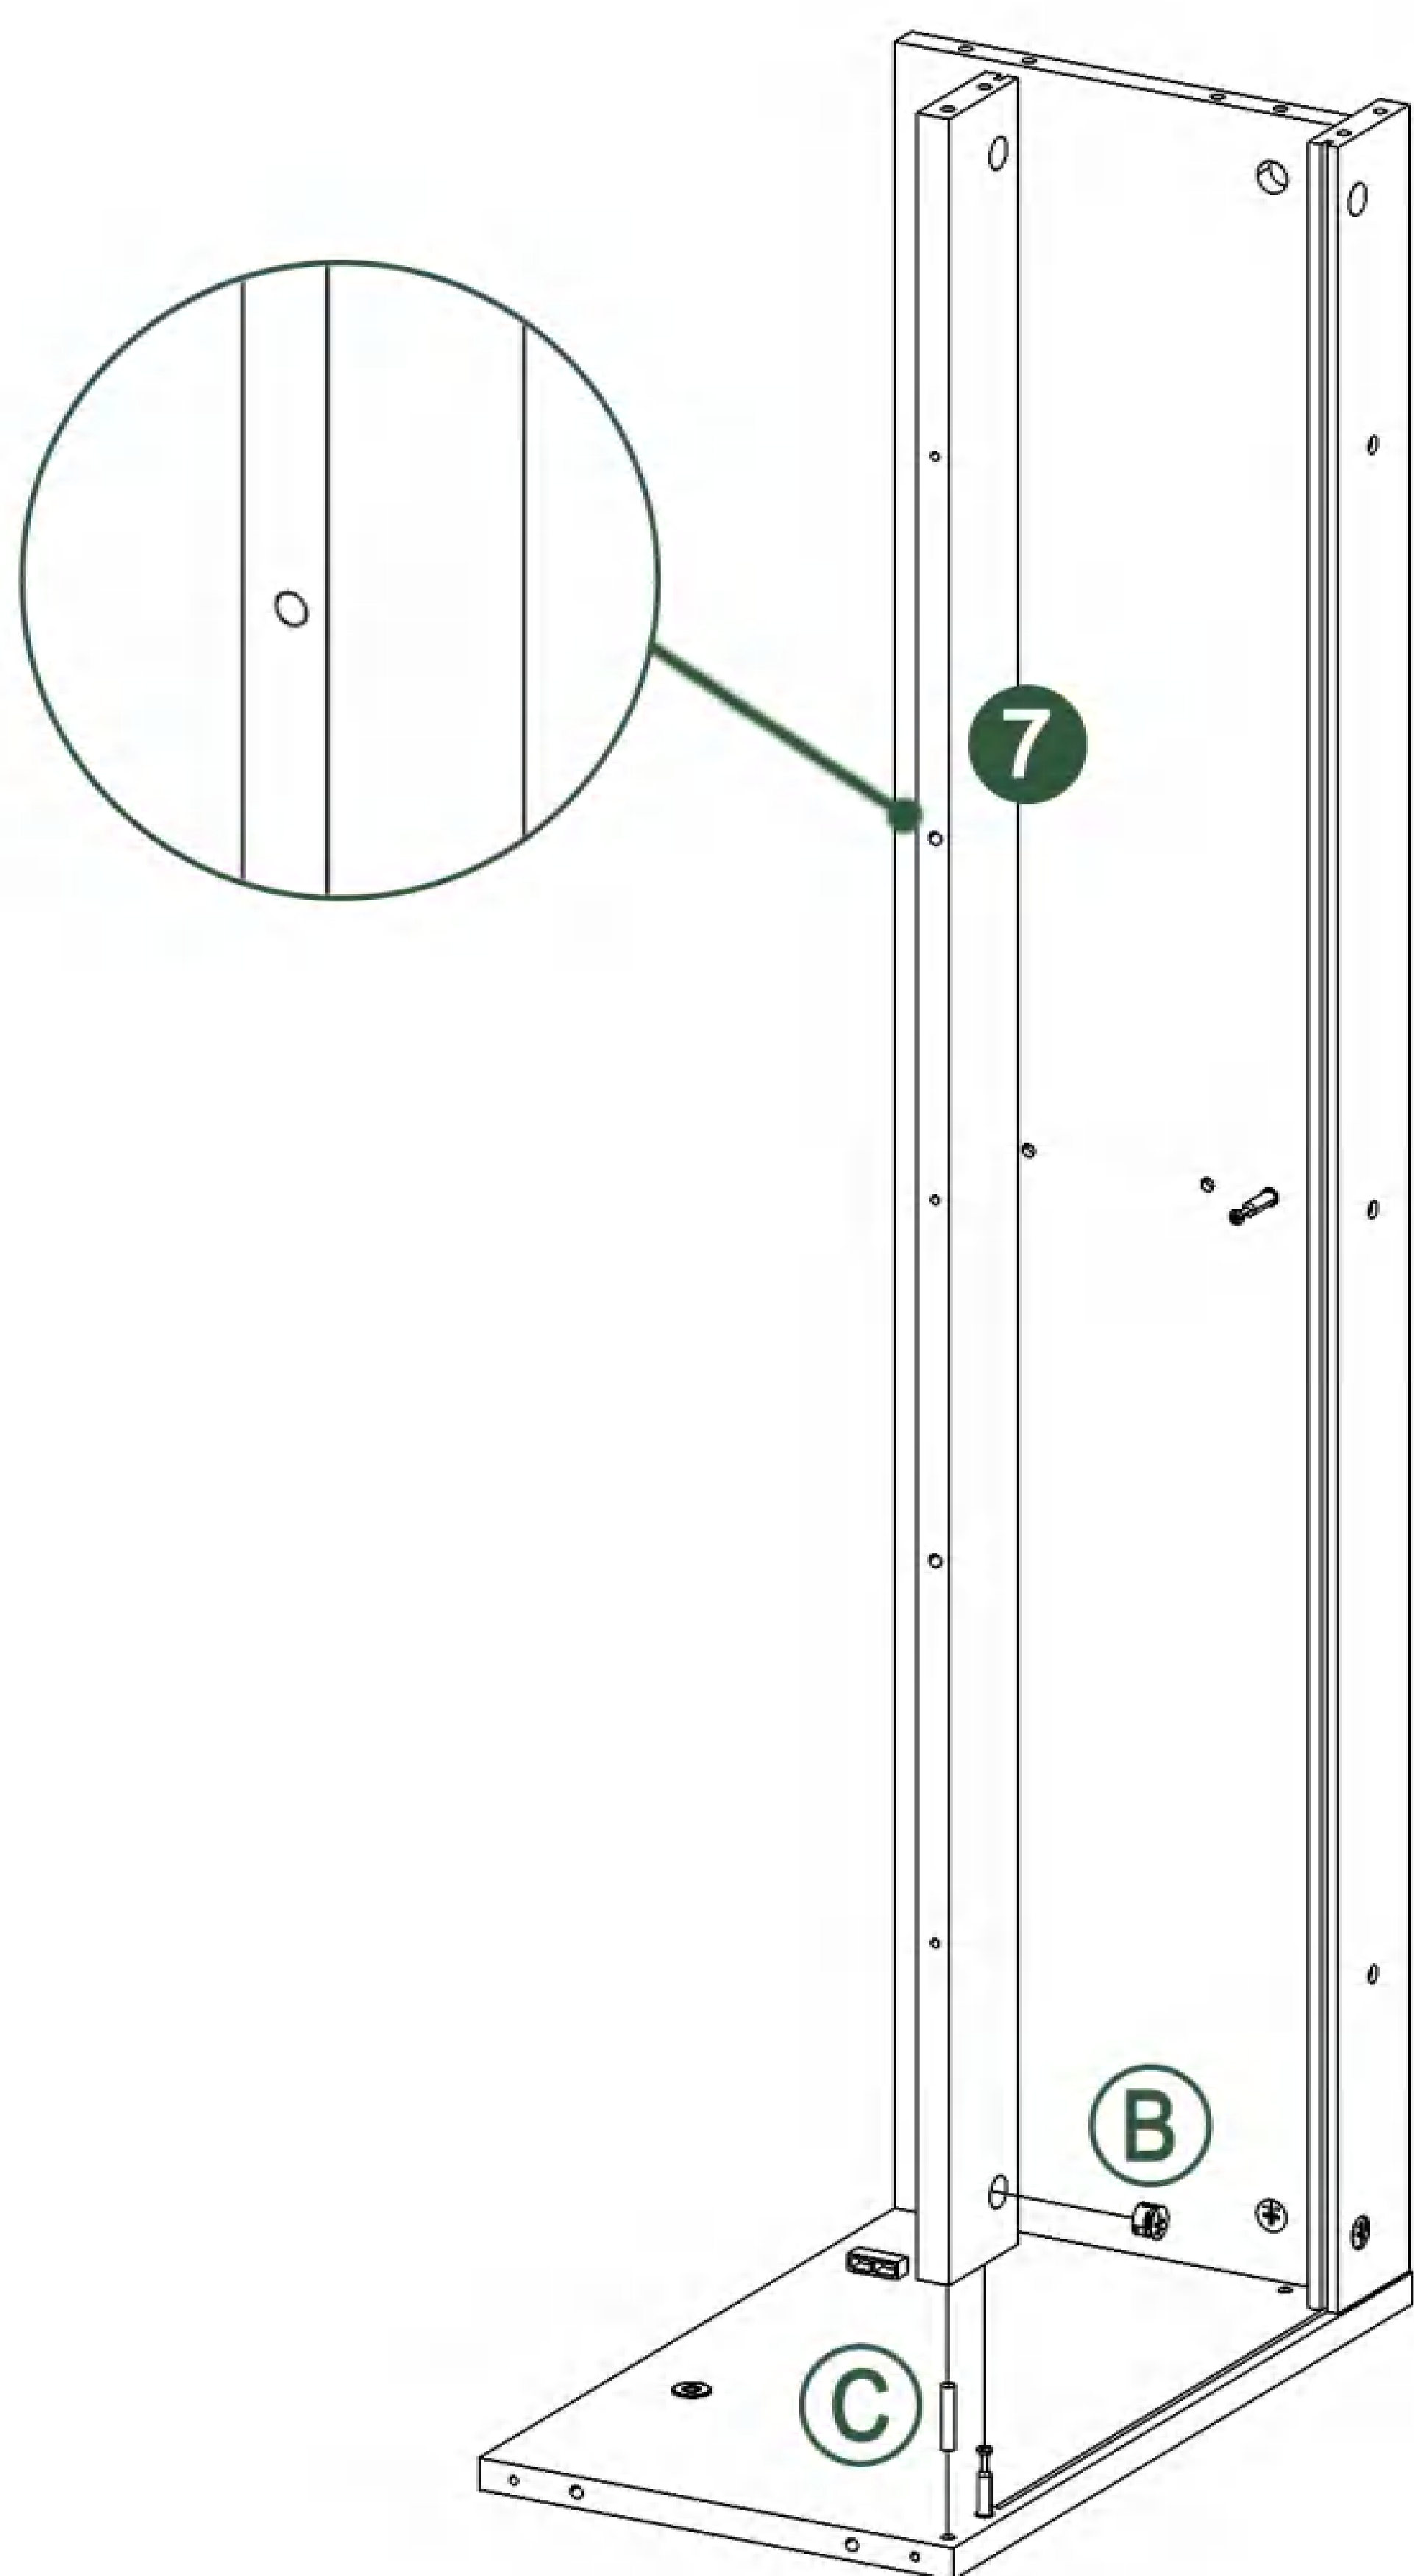


6.

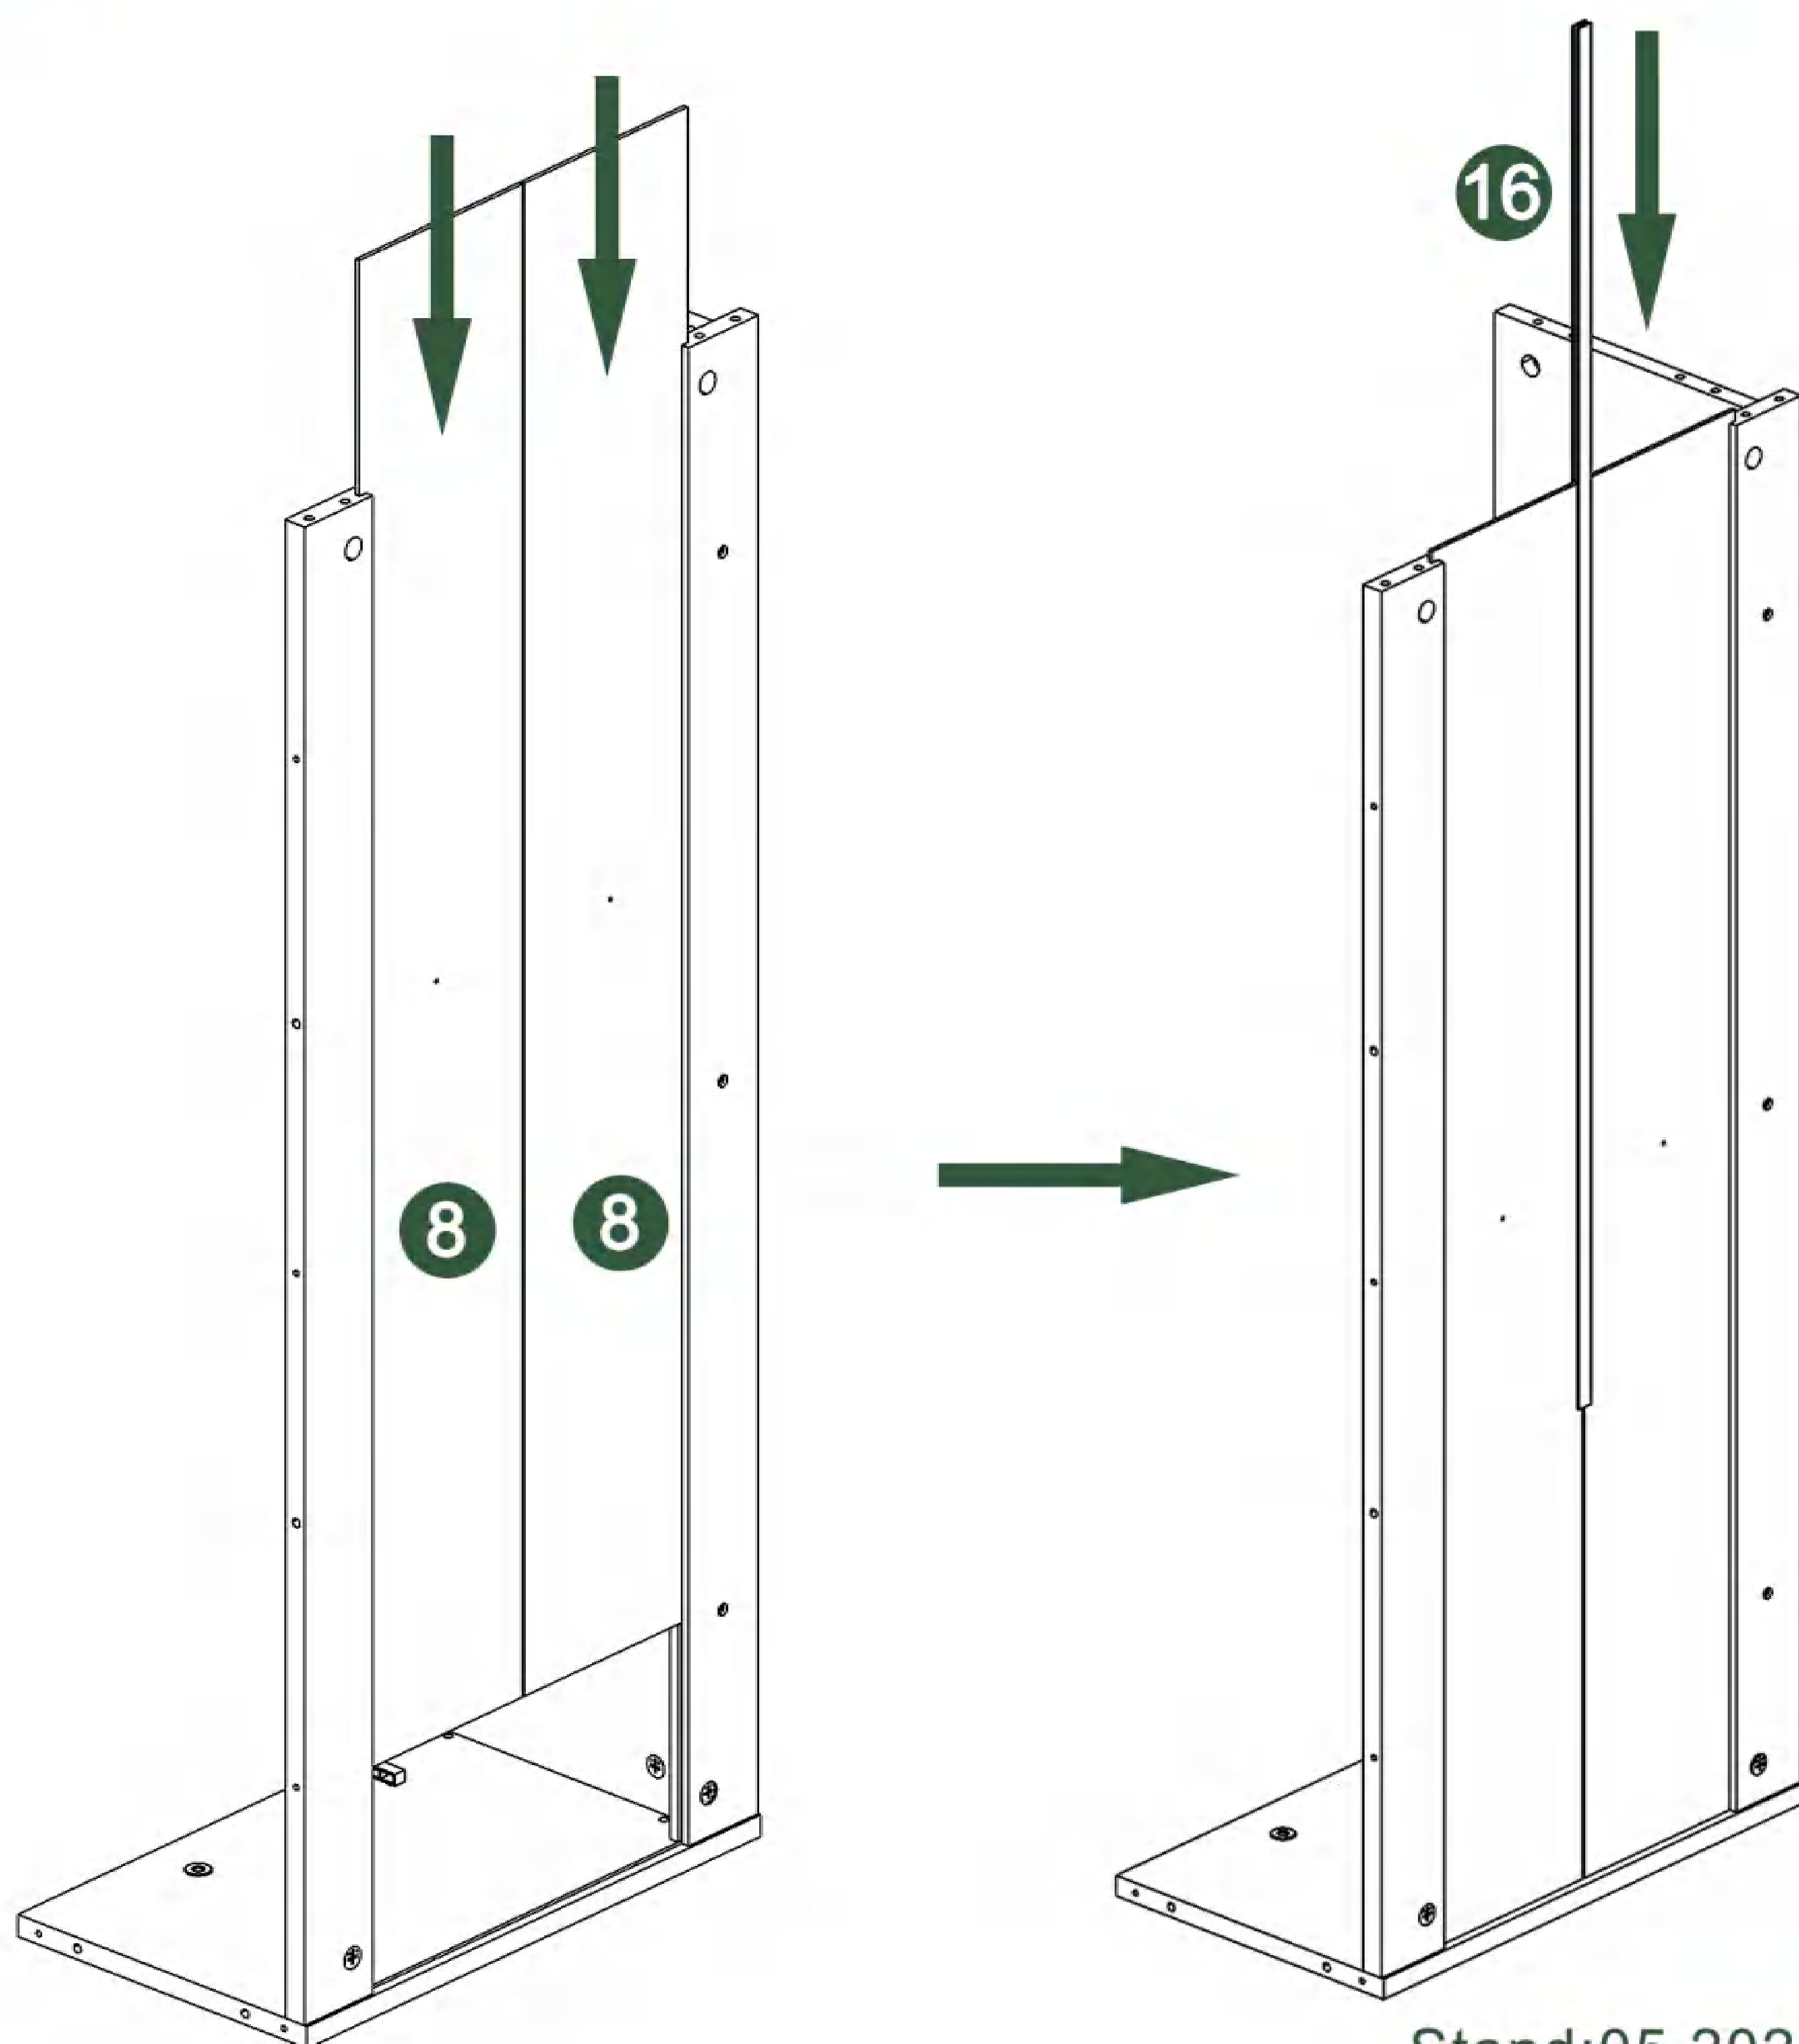


7.

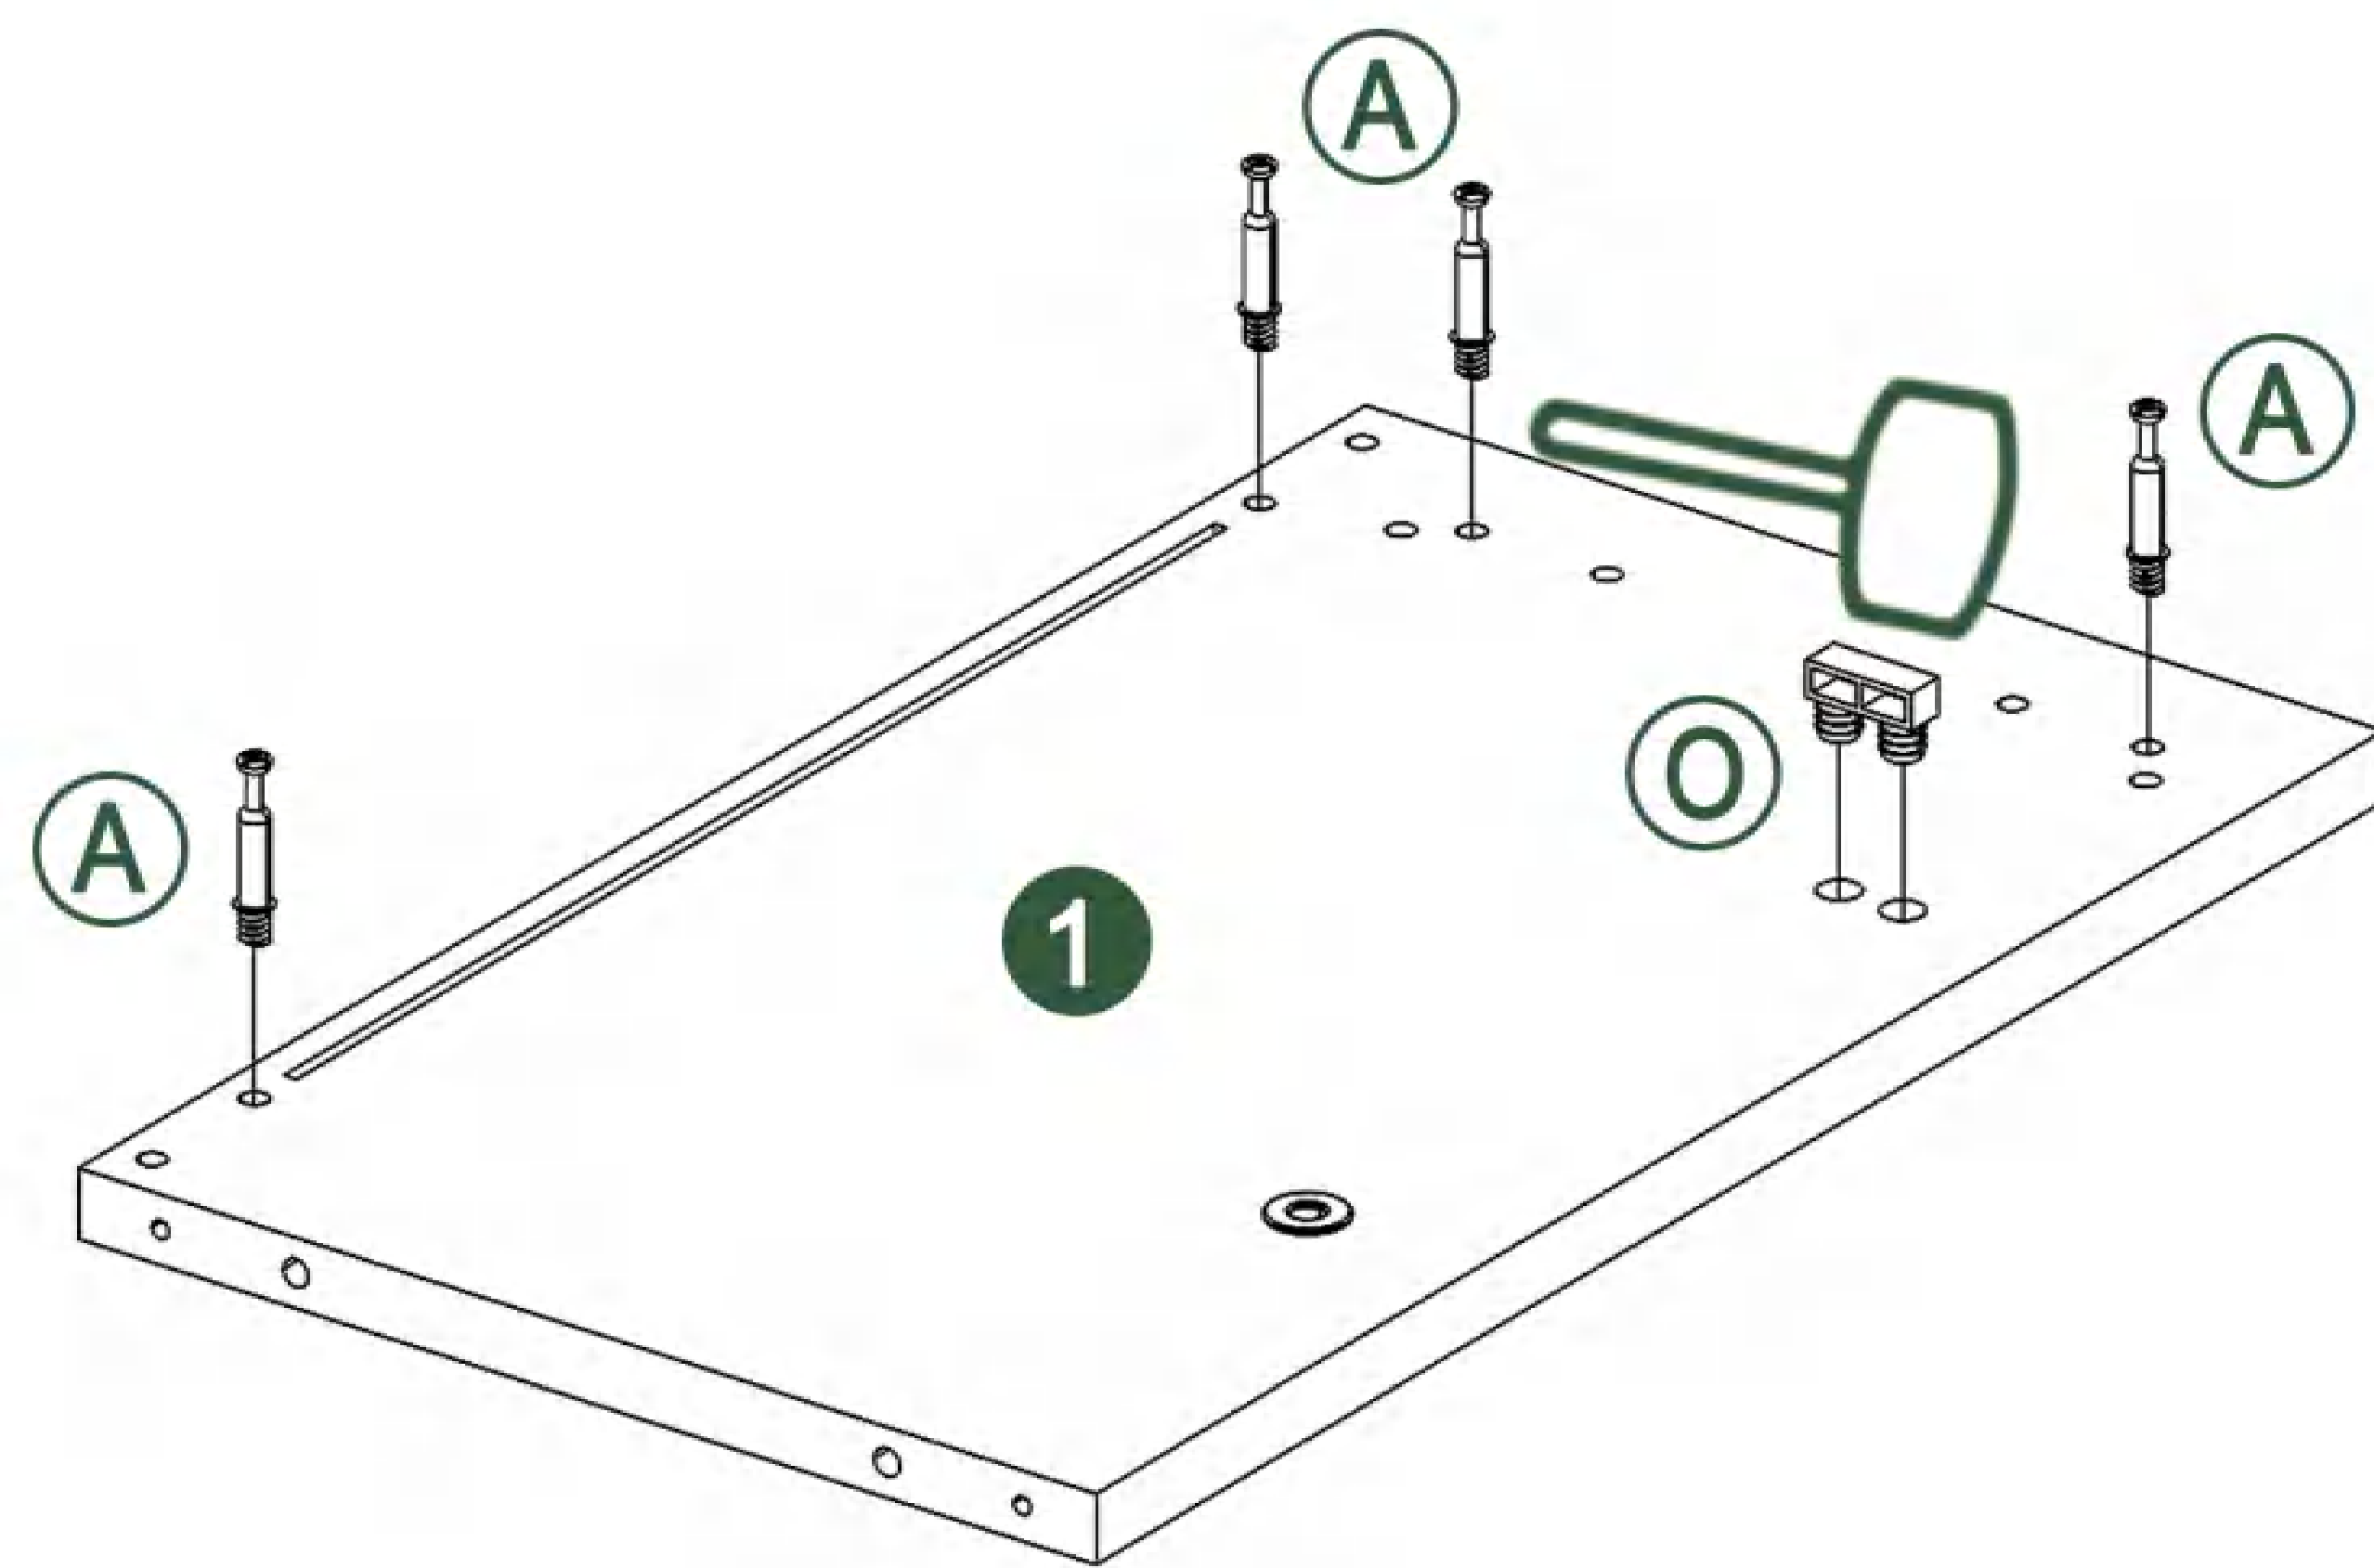


8.

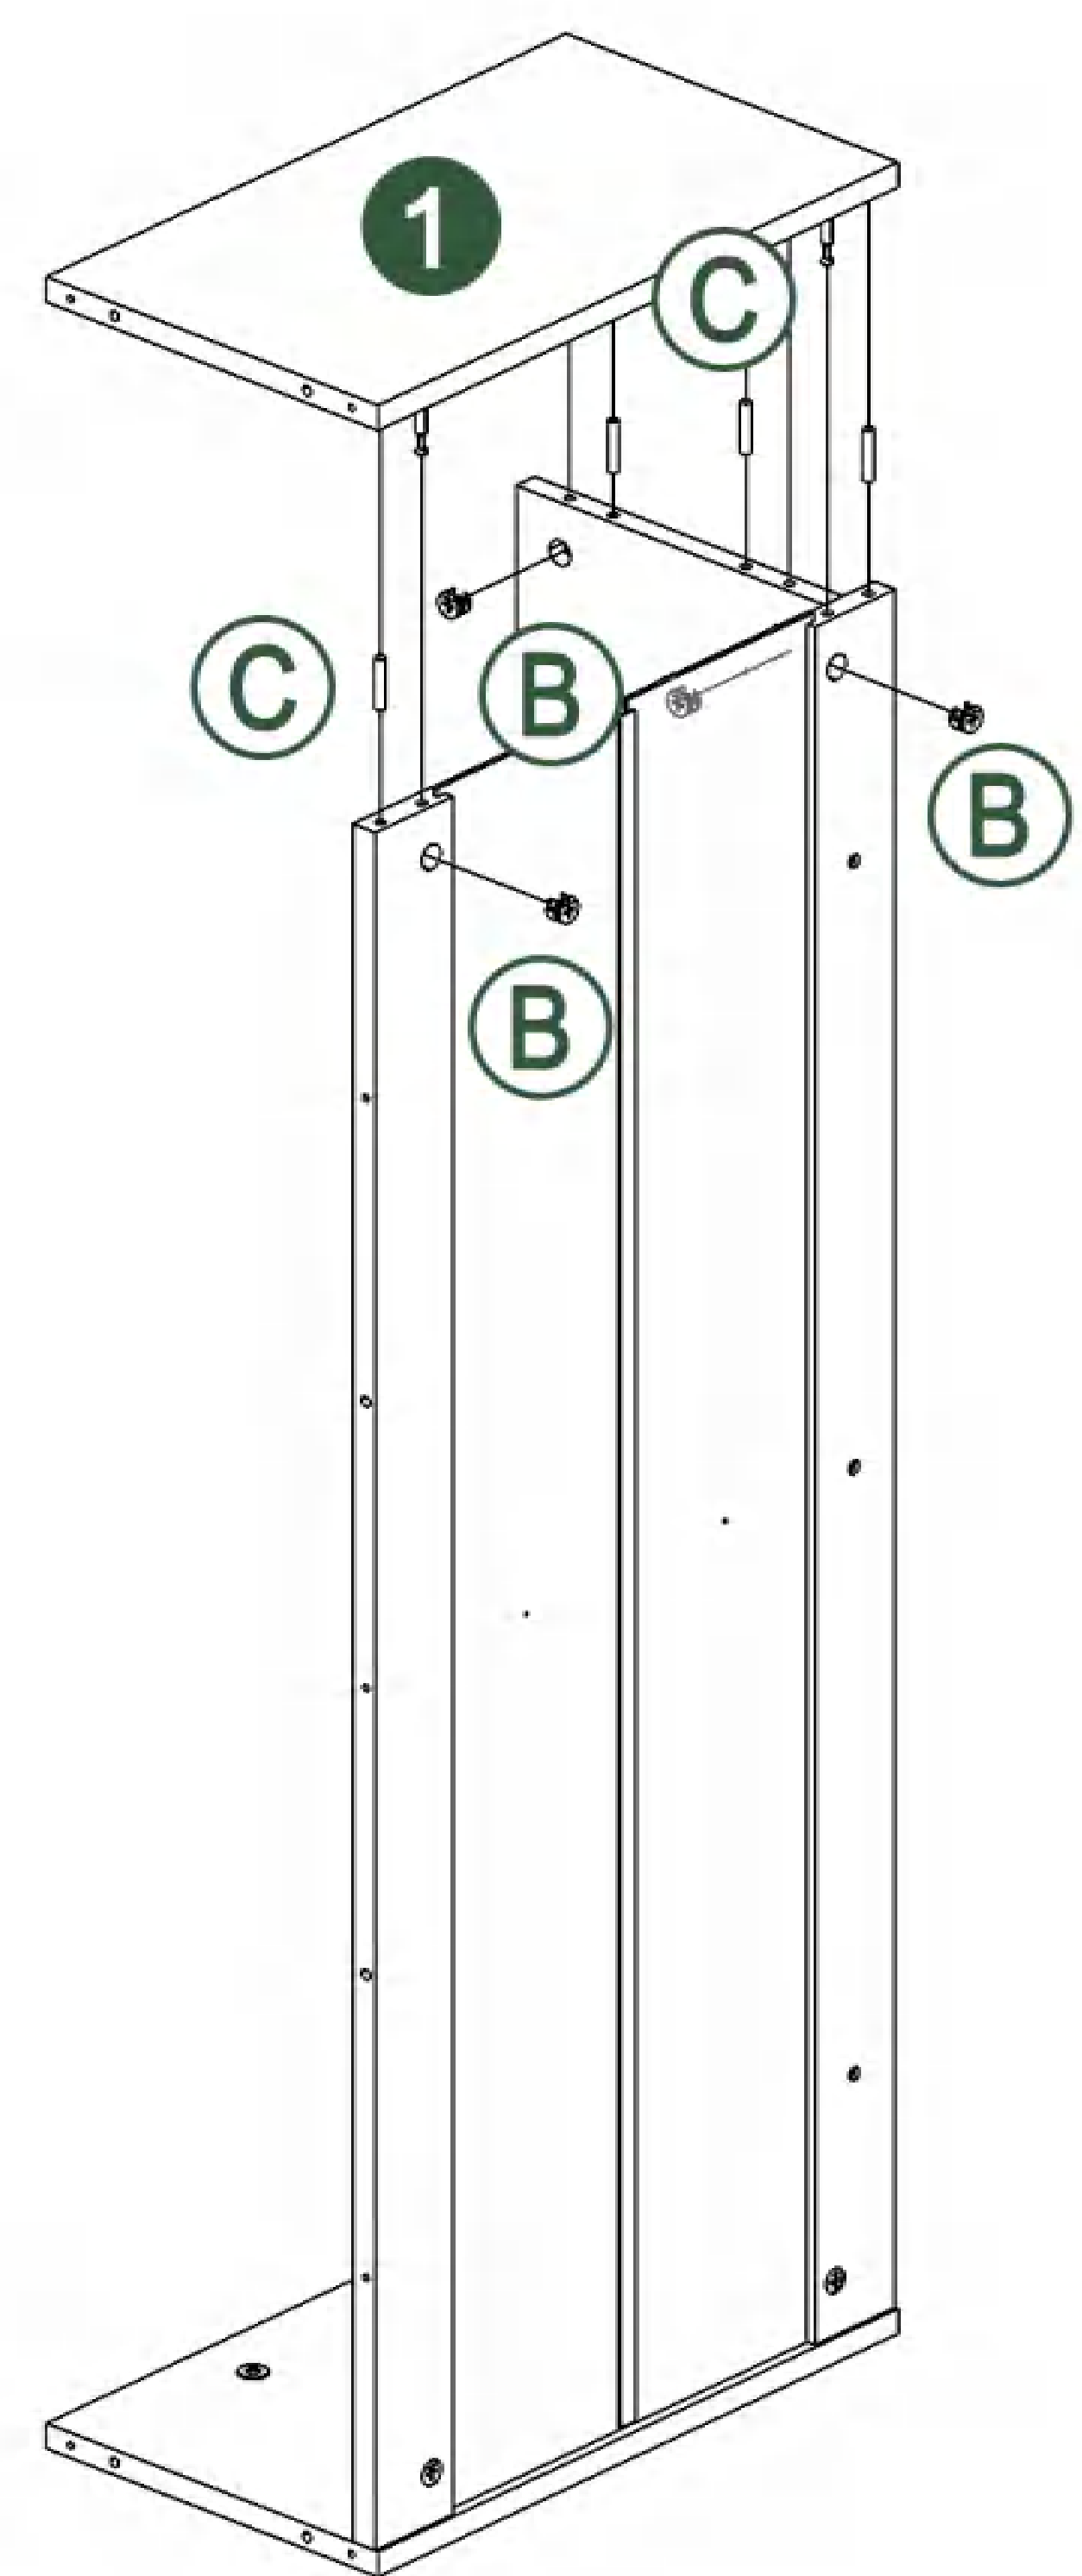


9.

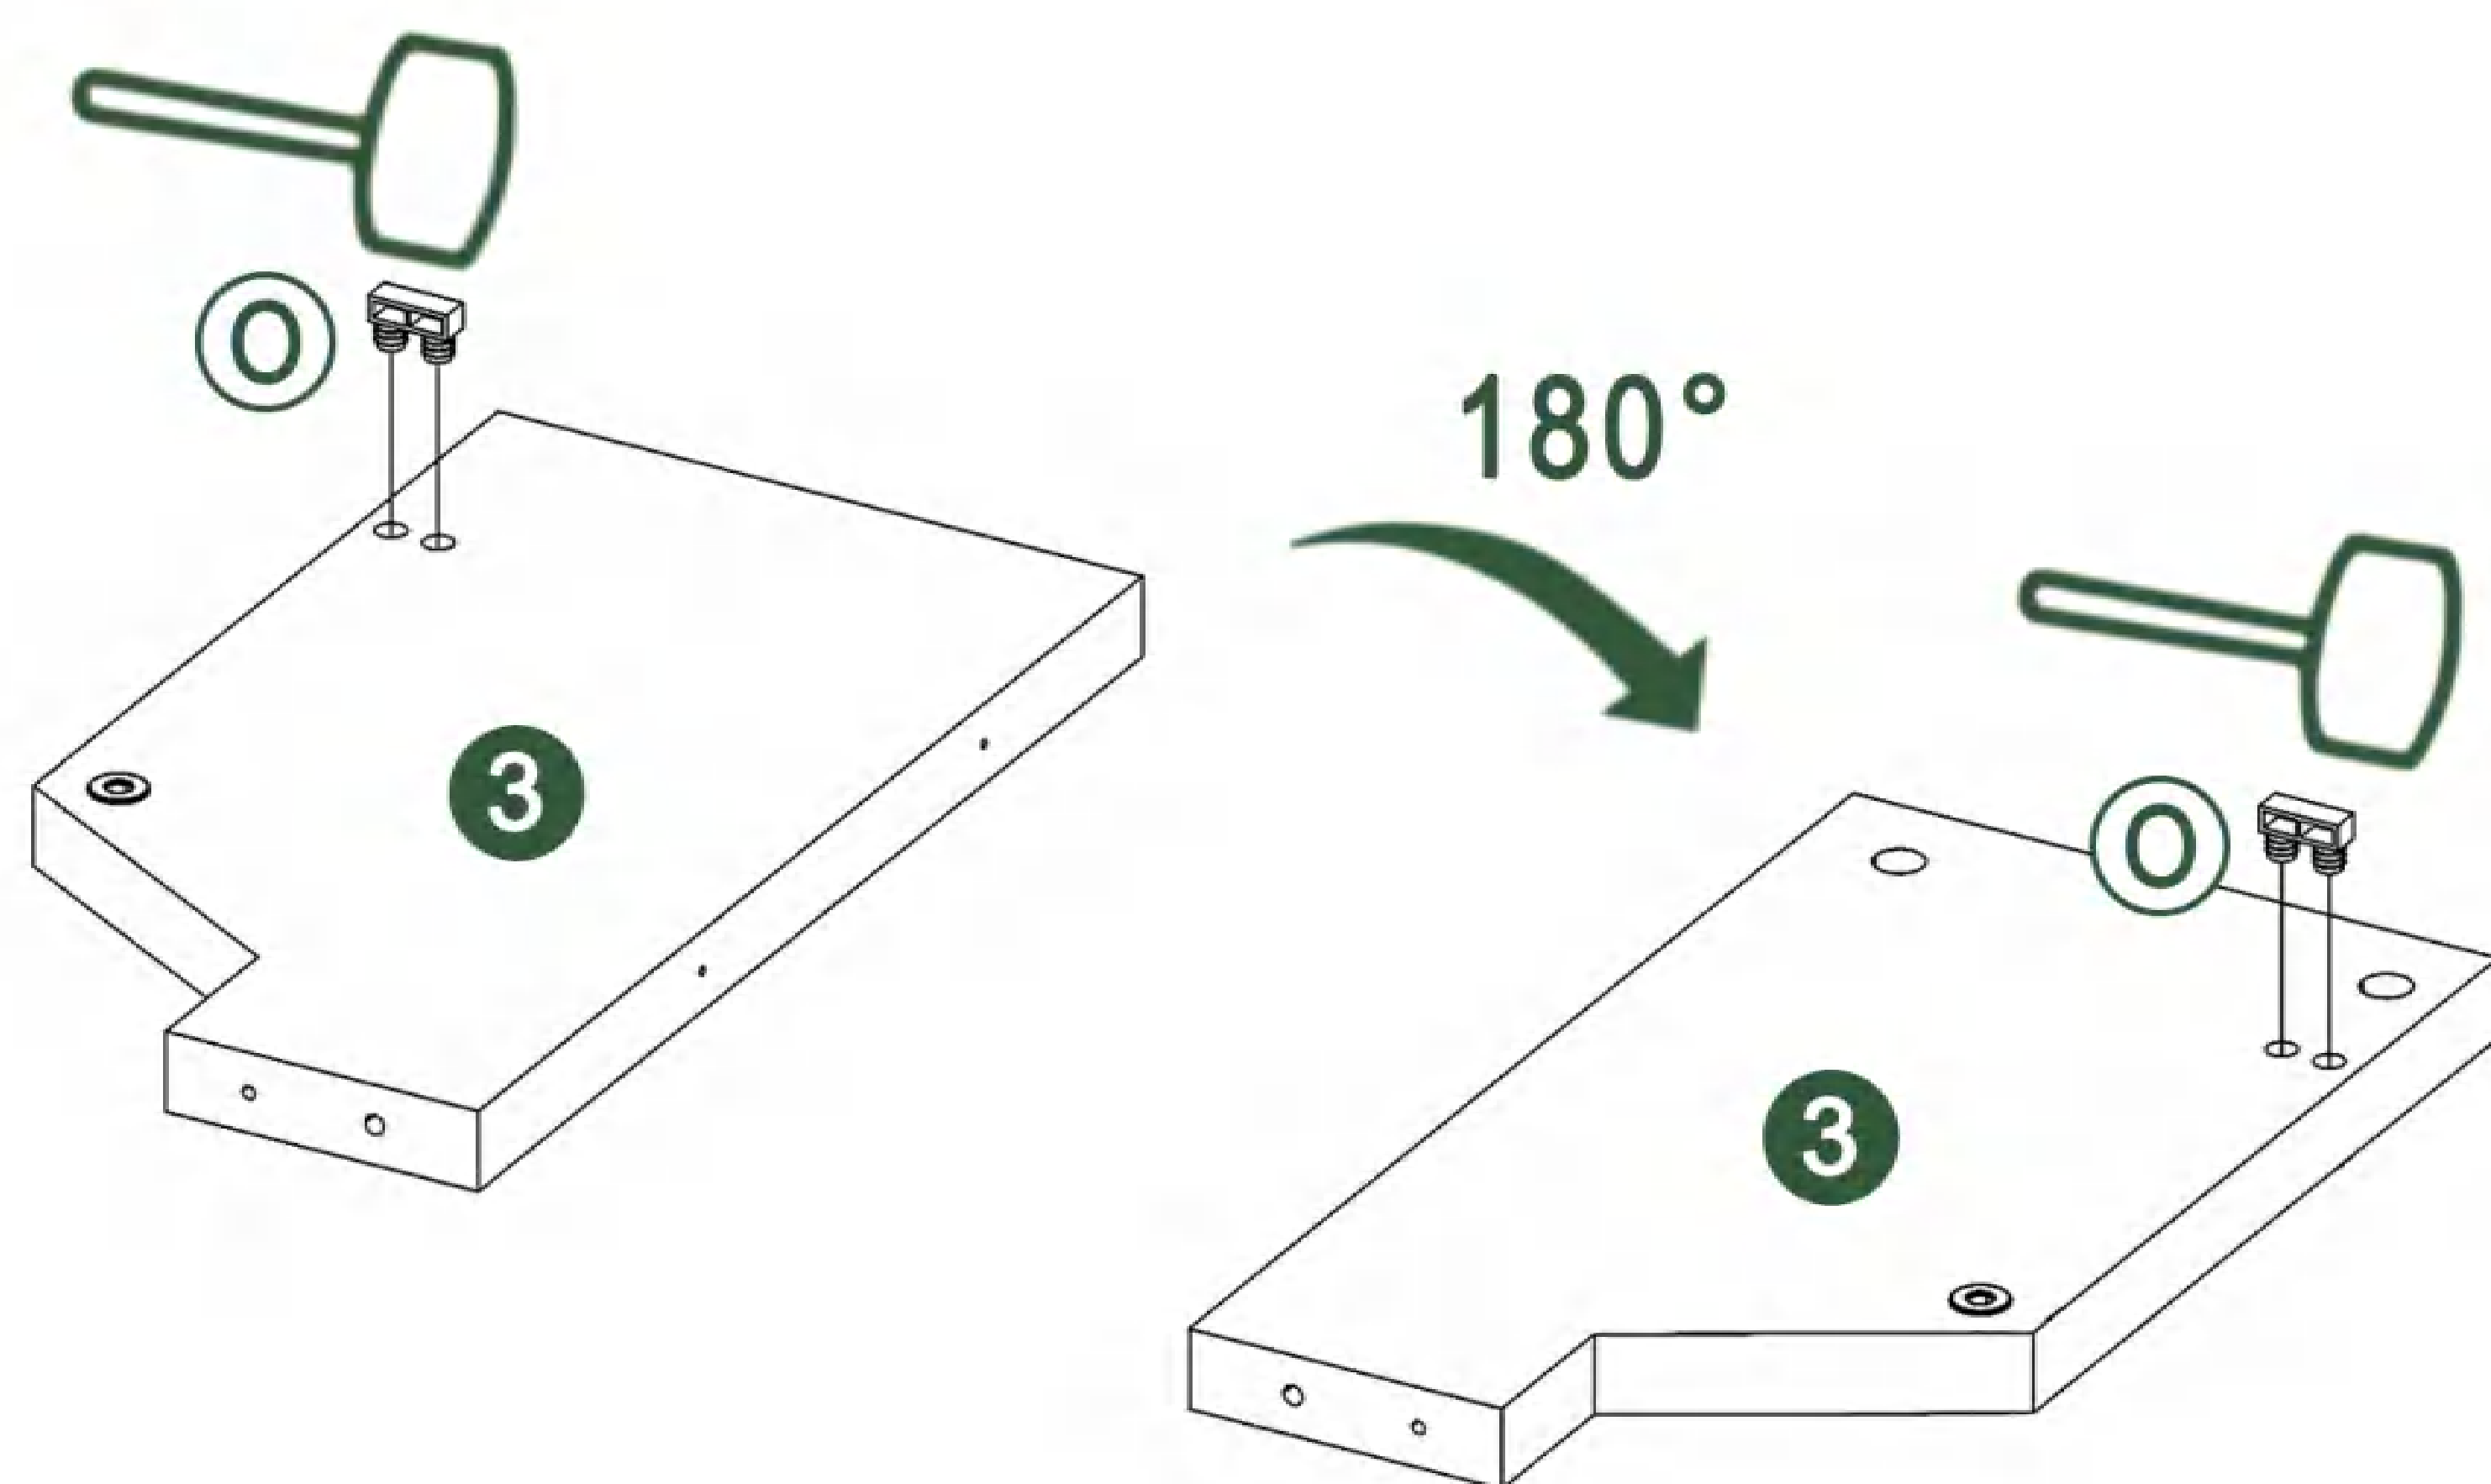


10.

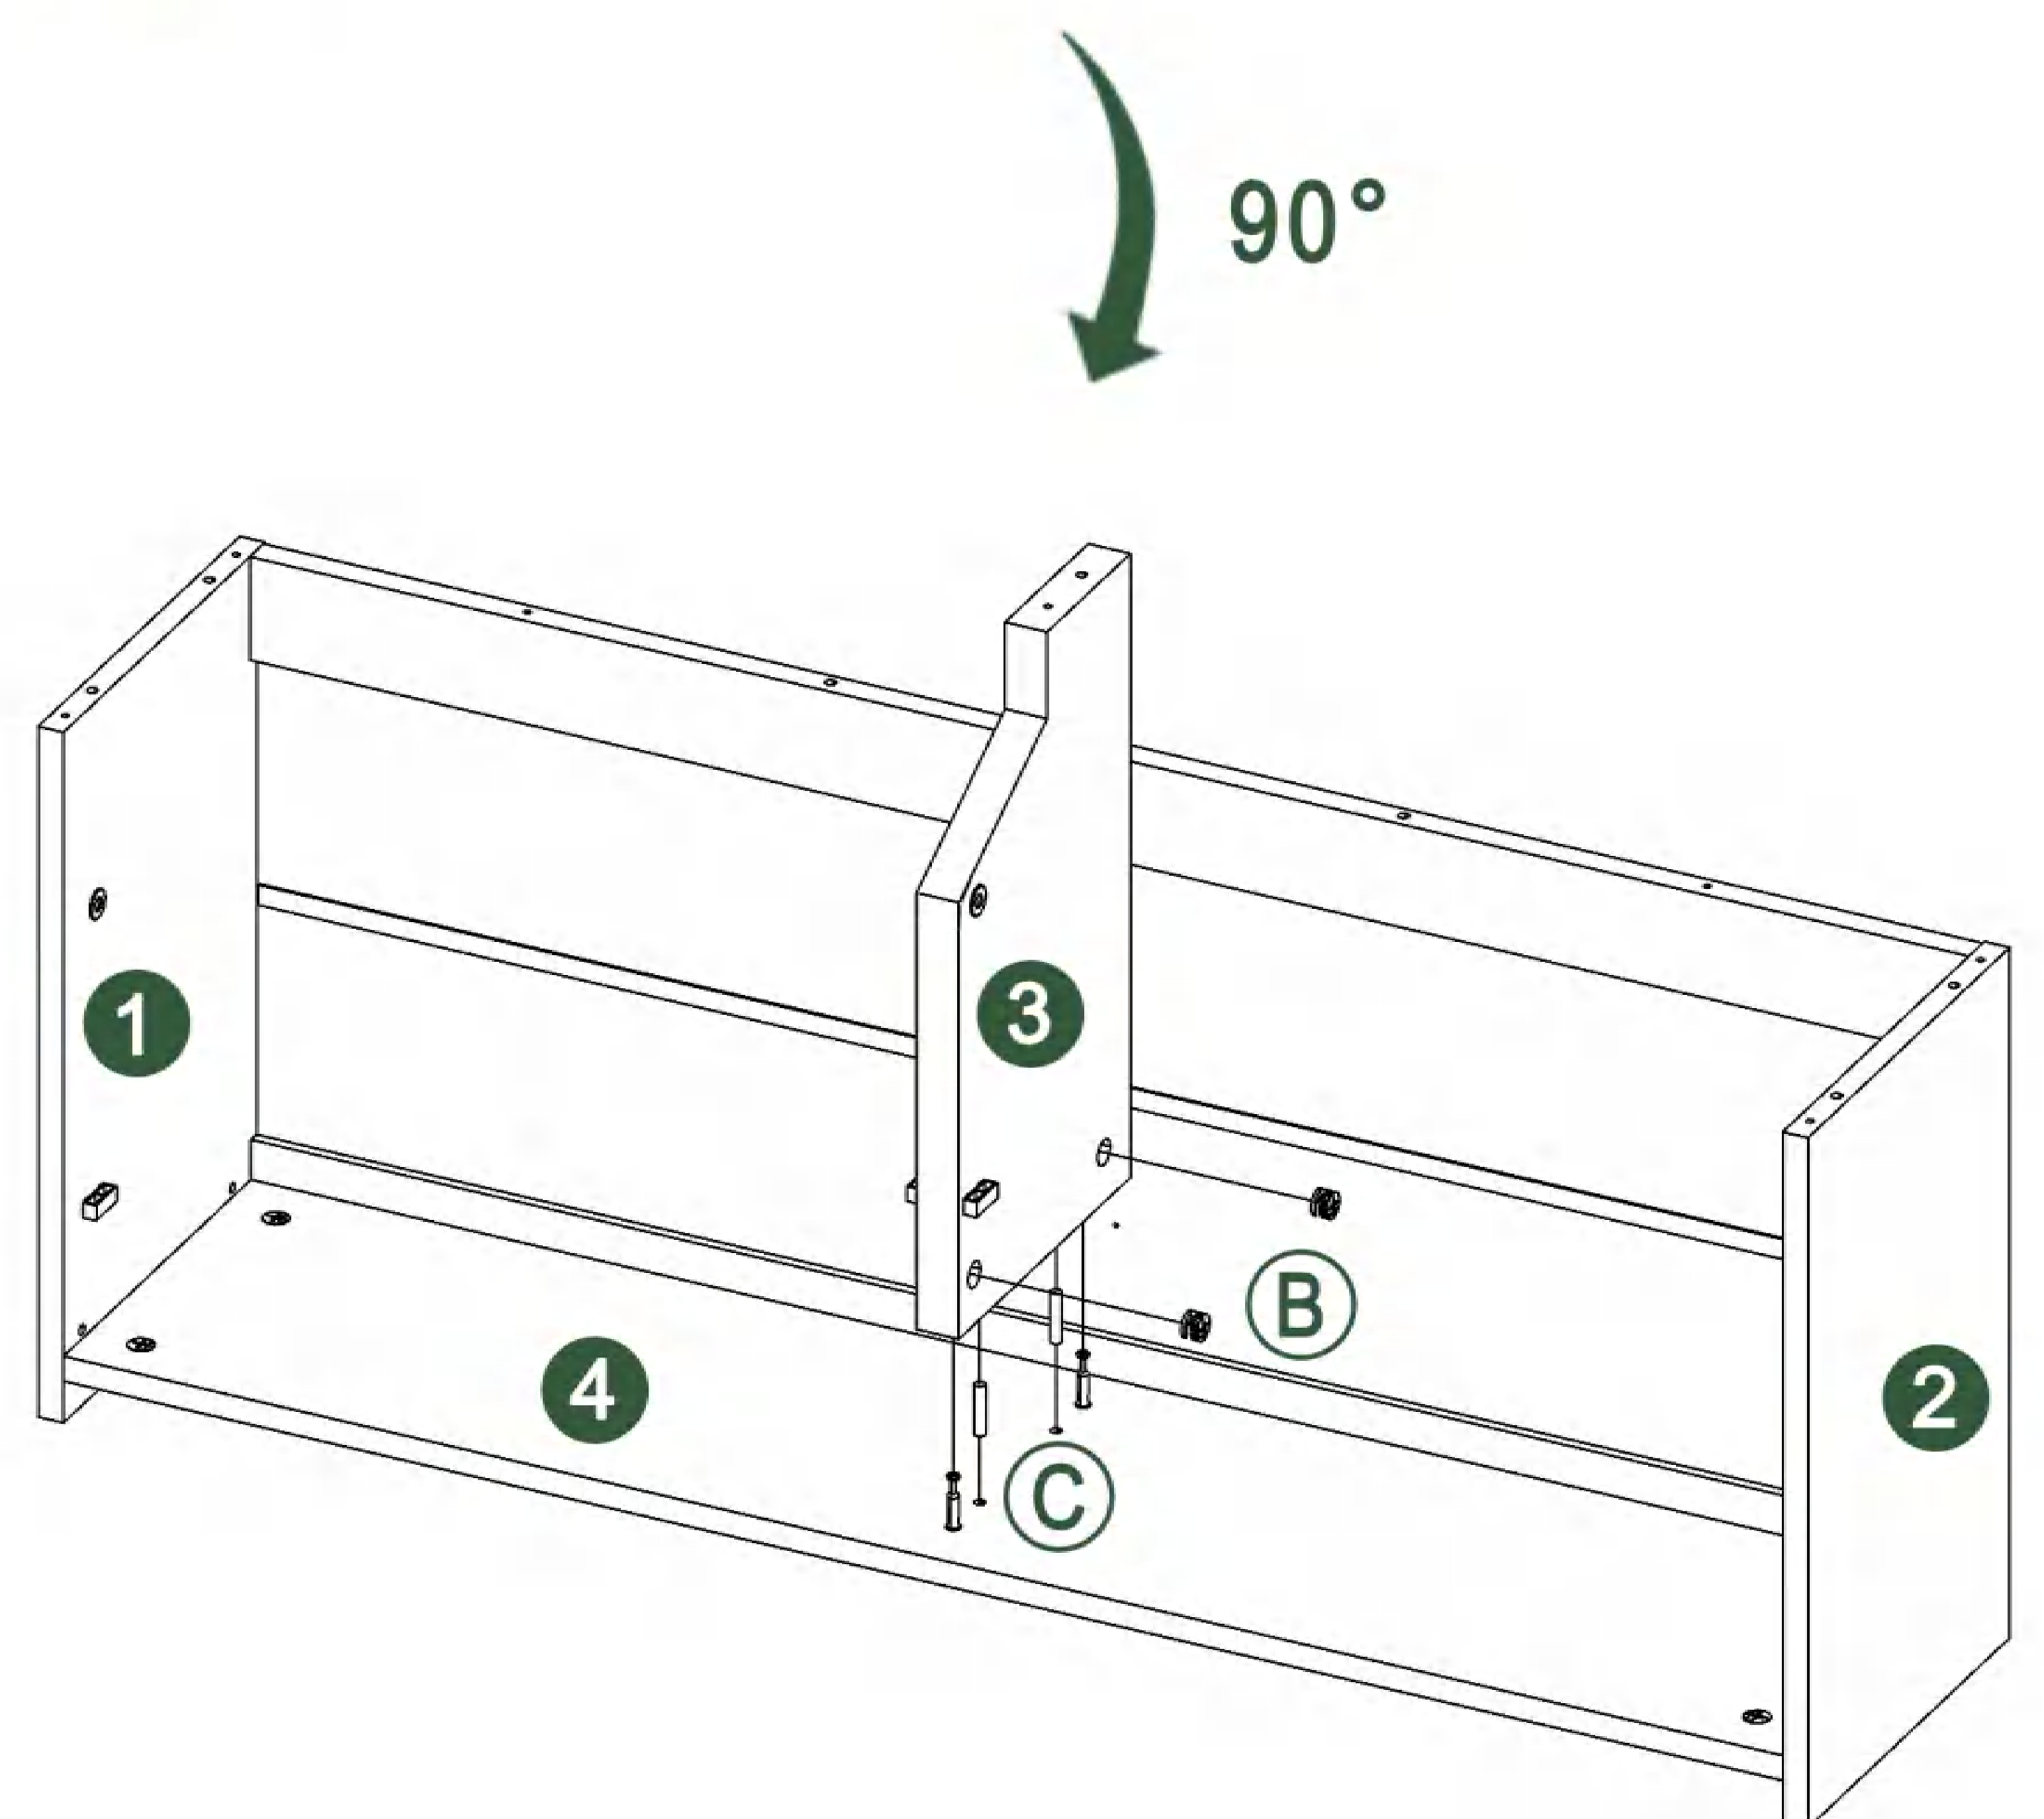


11.

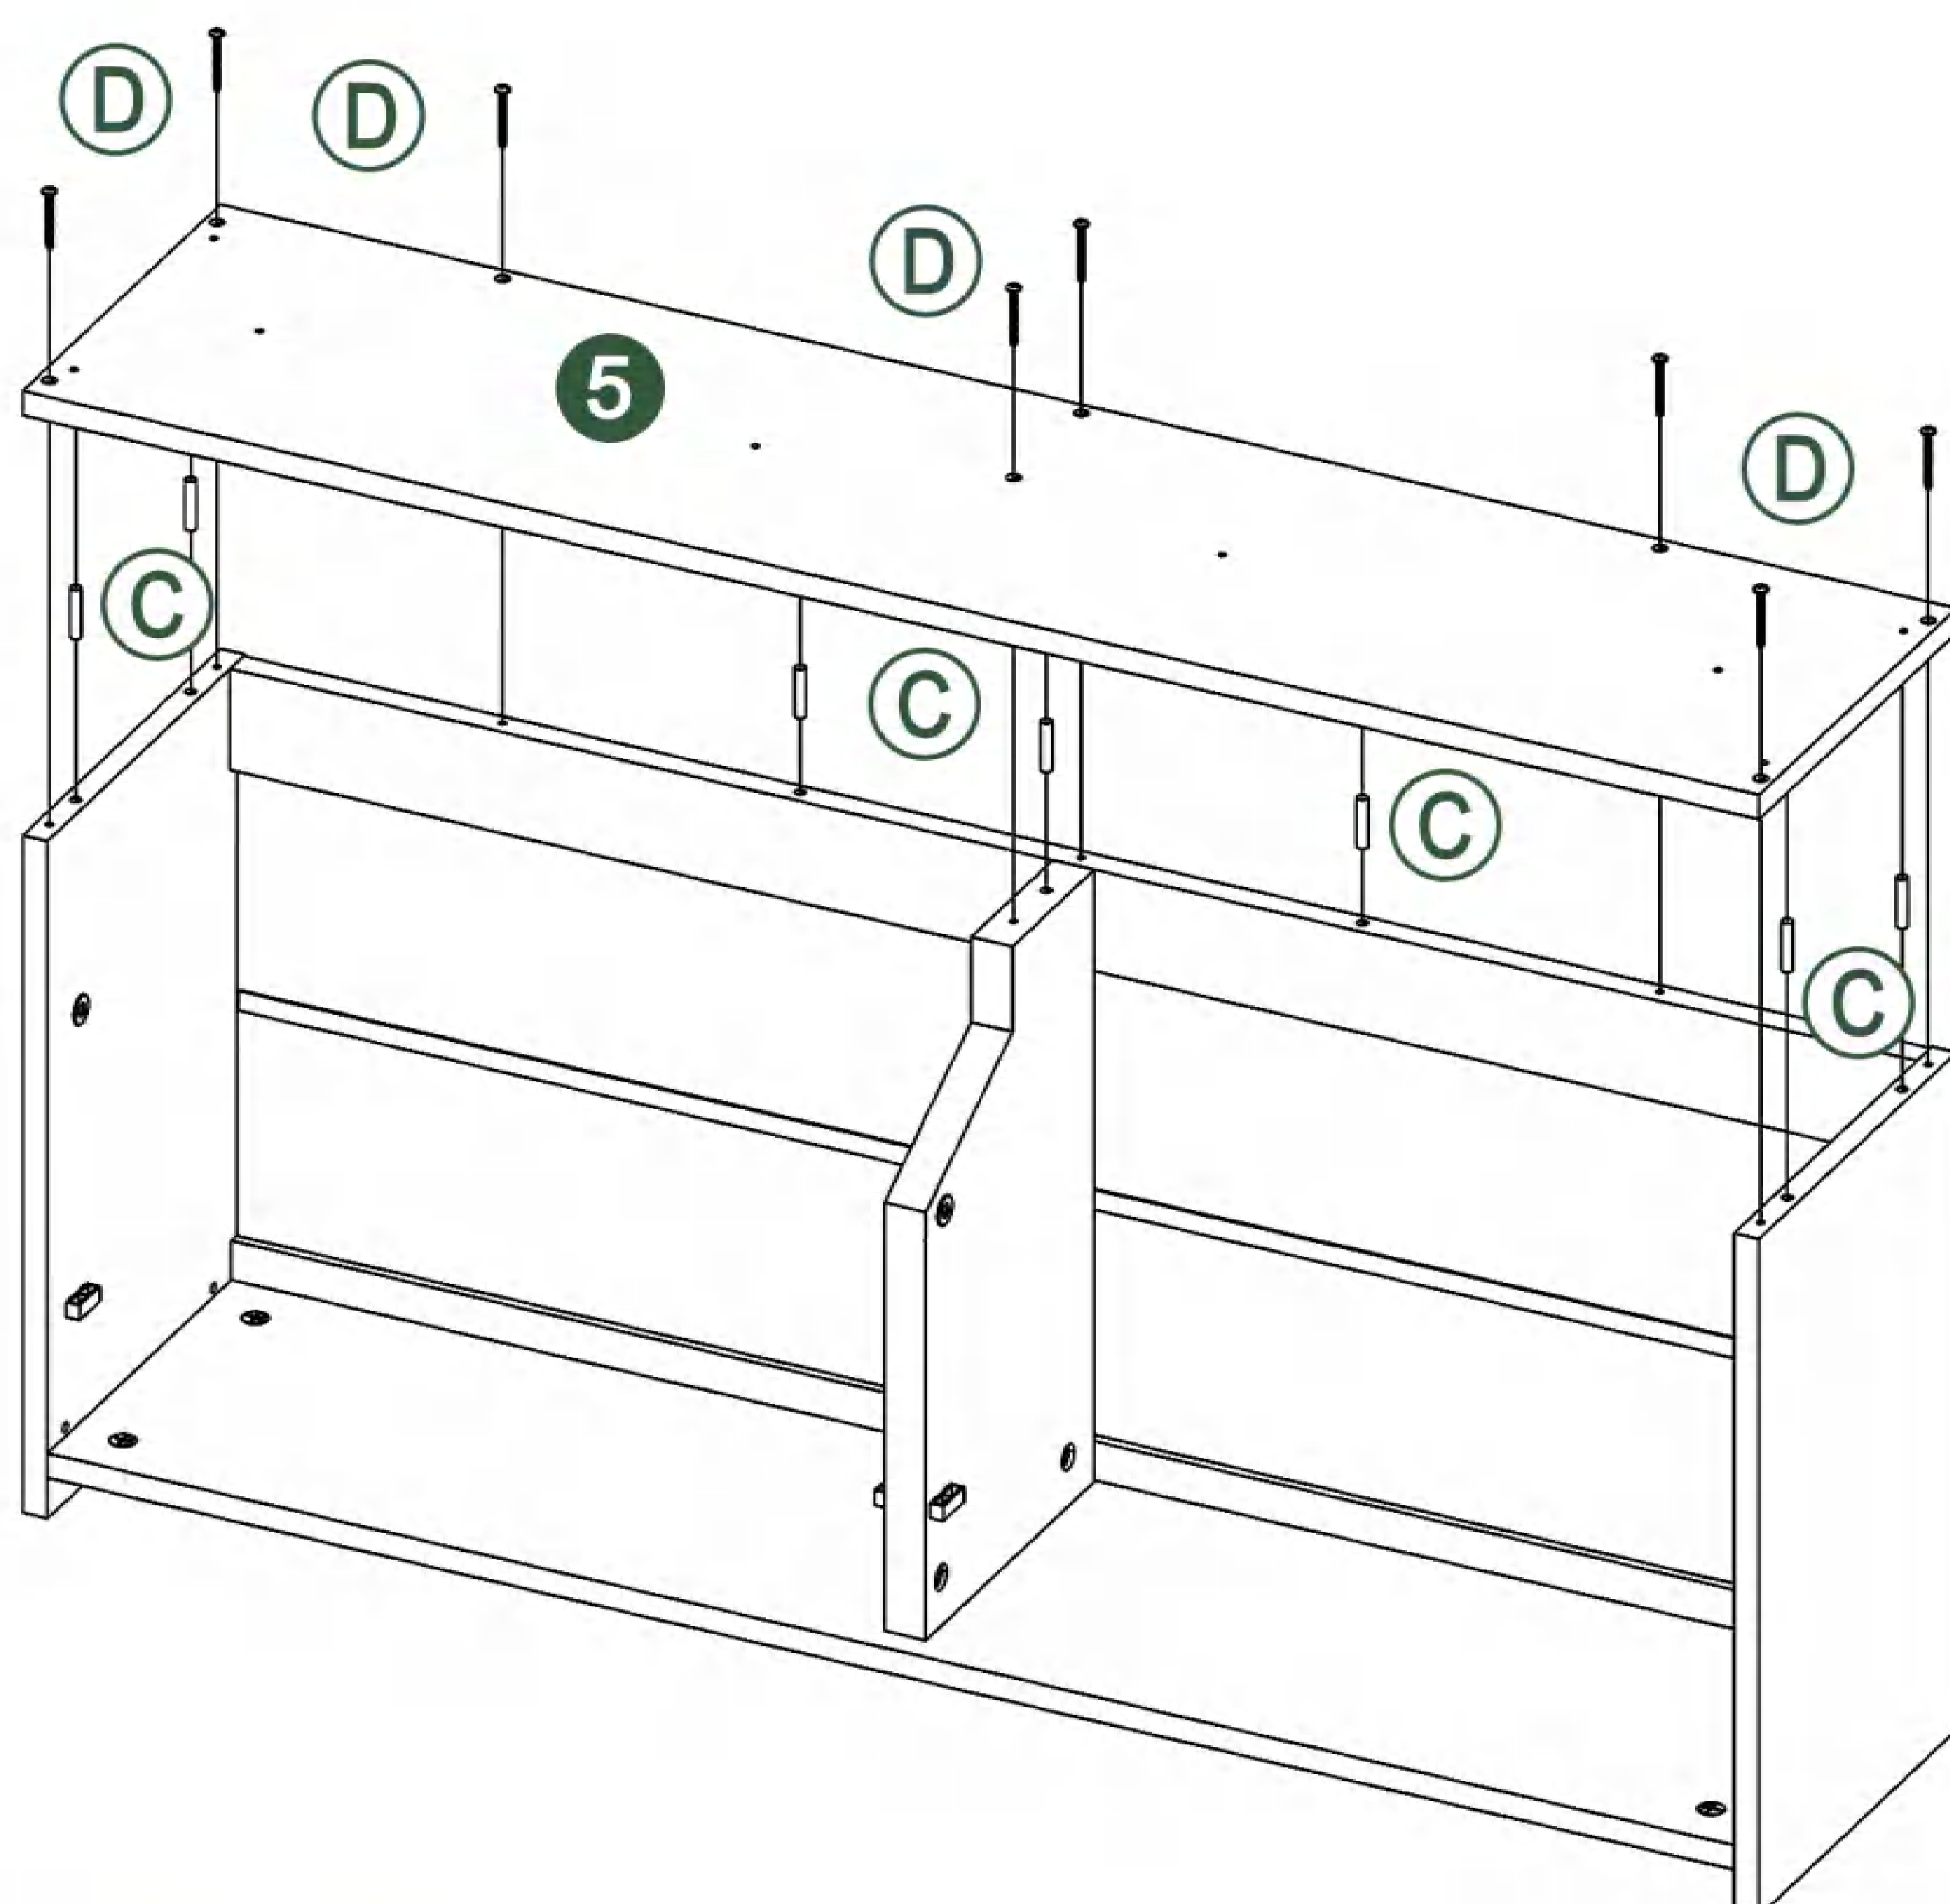


12.

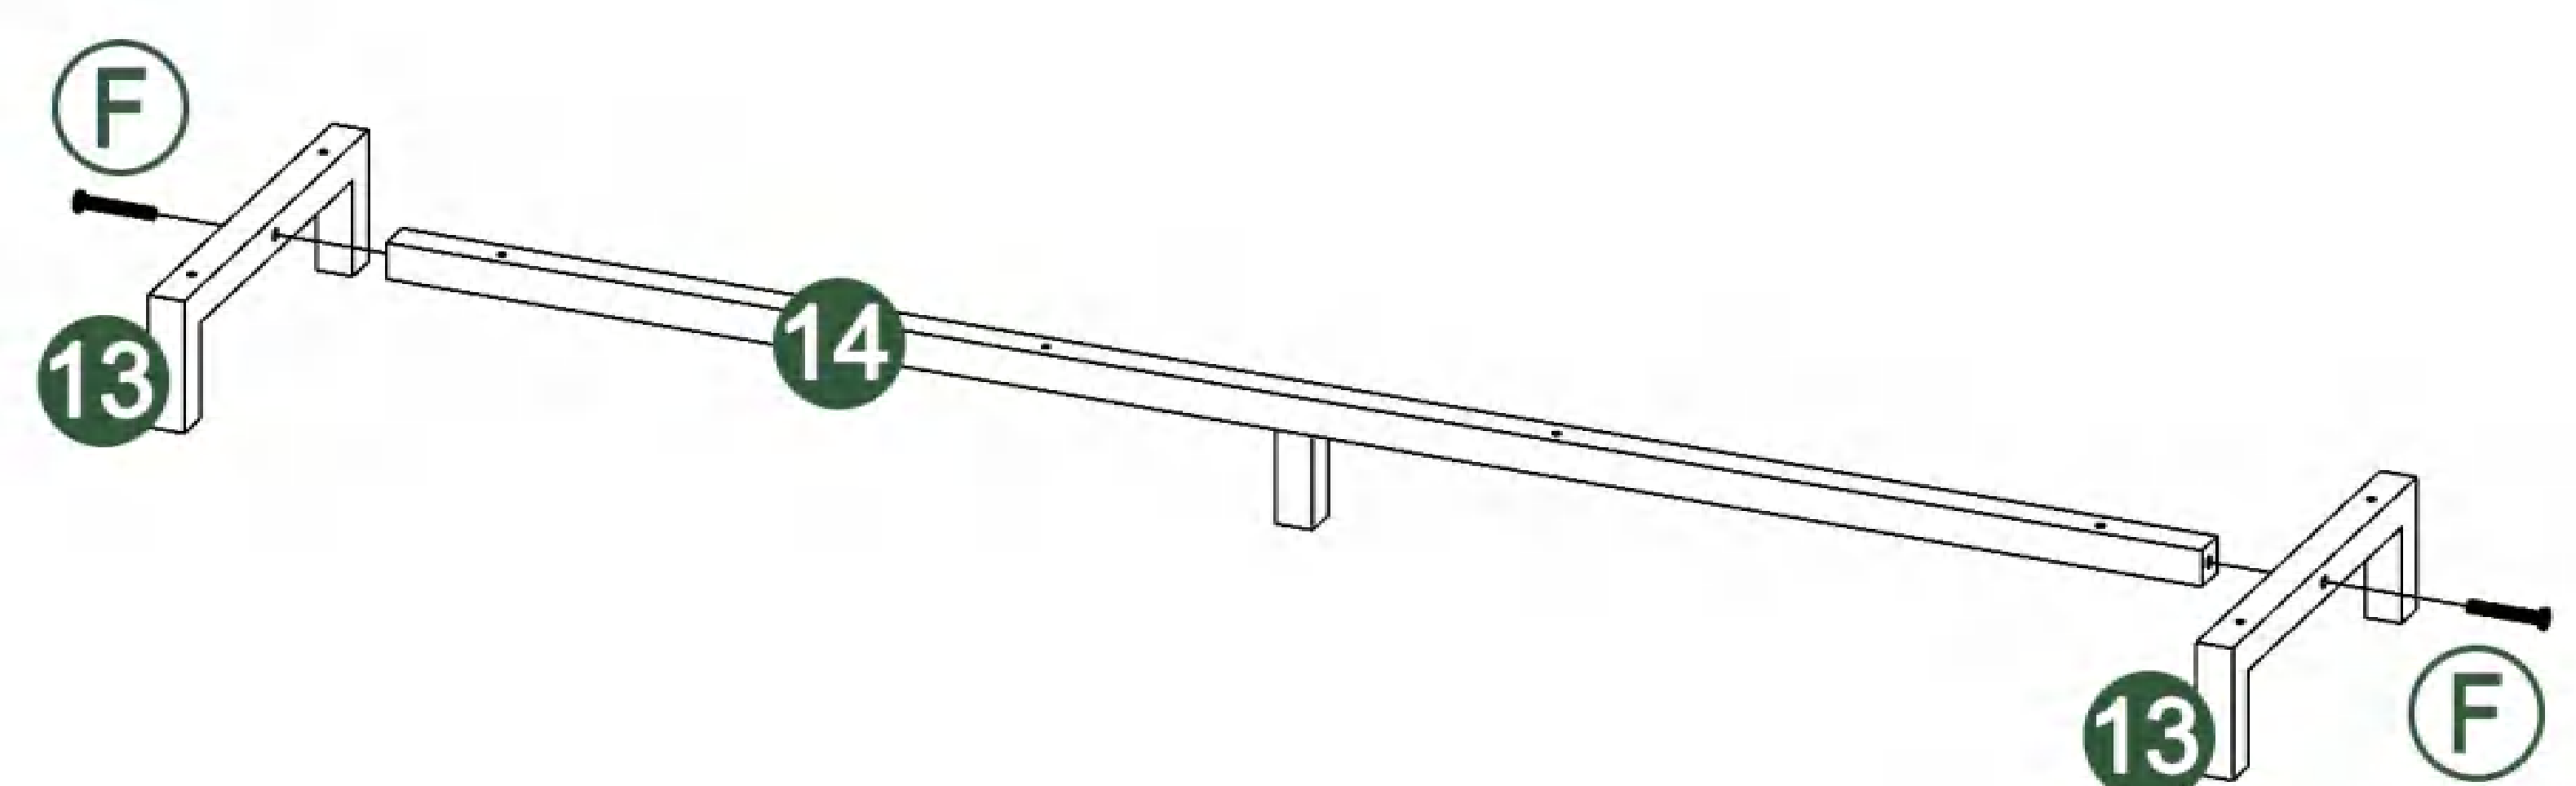


13

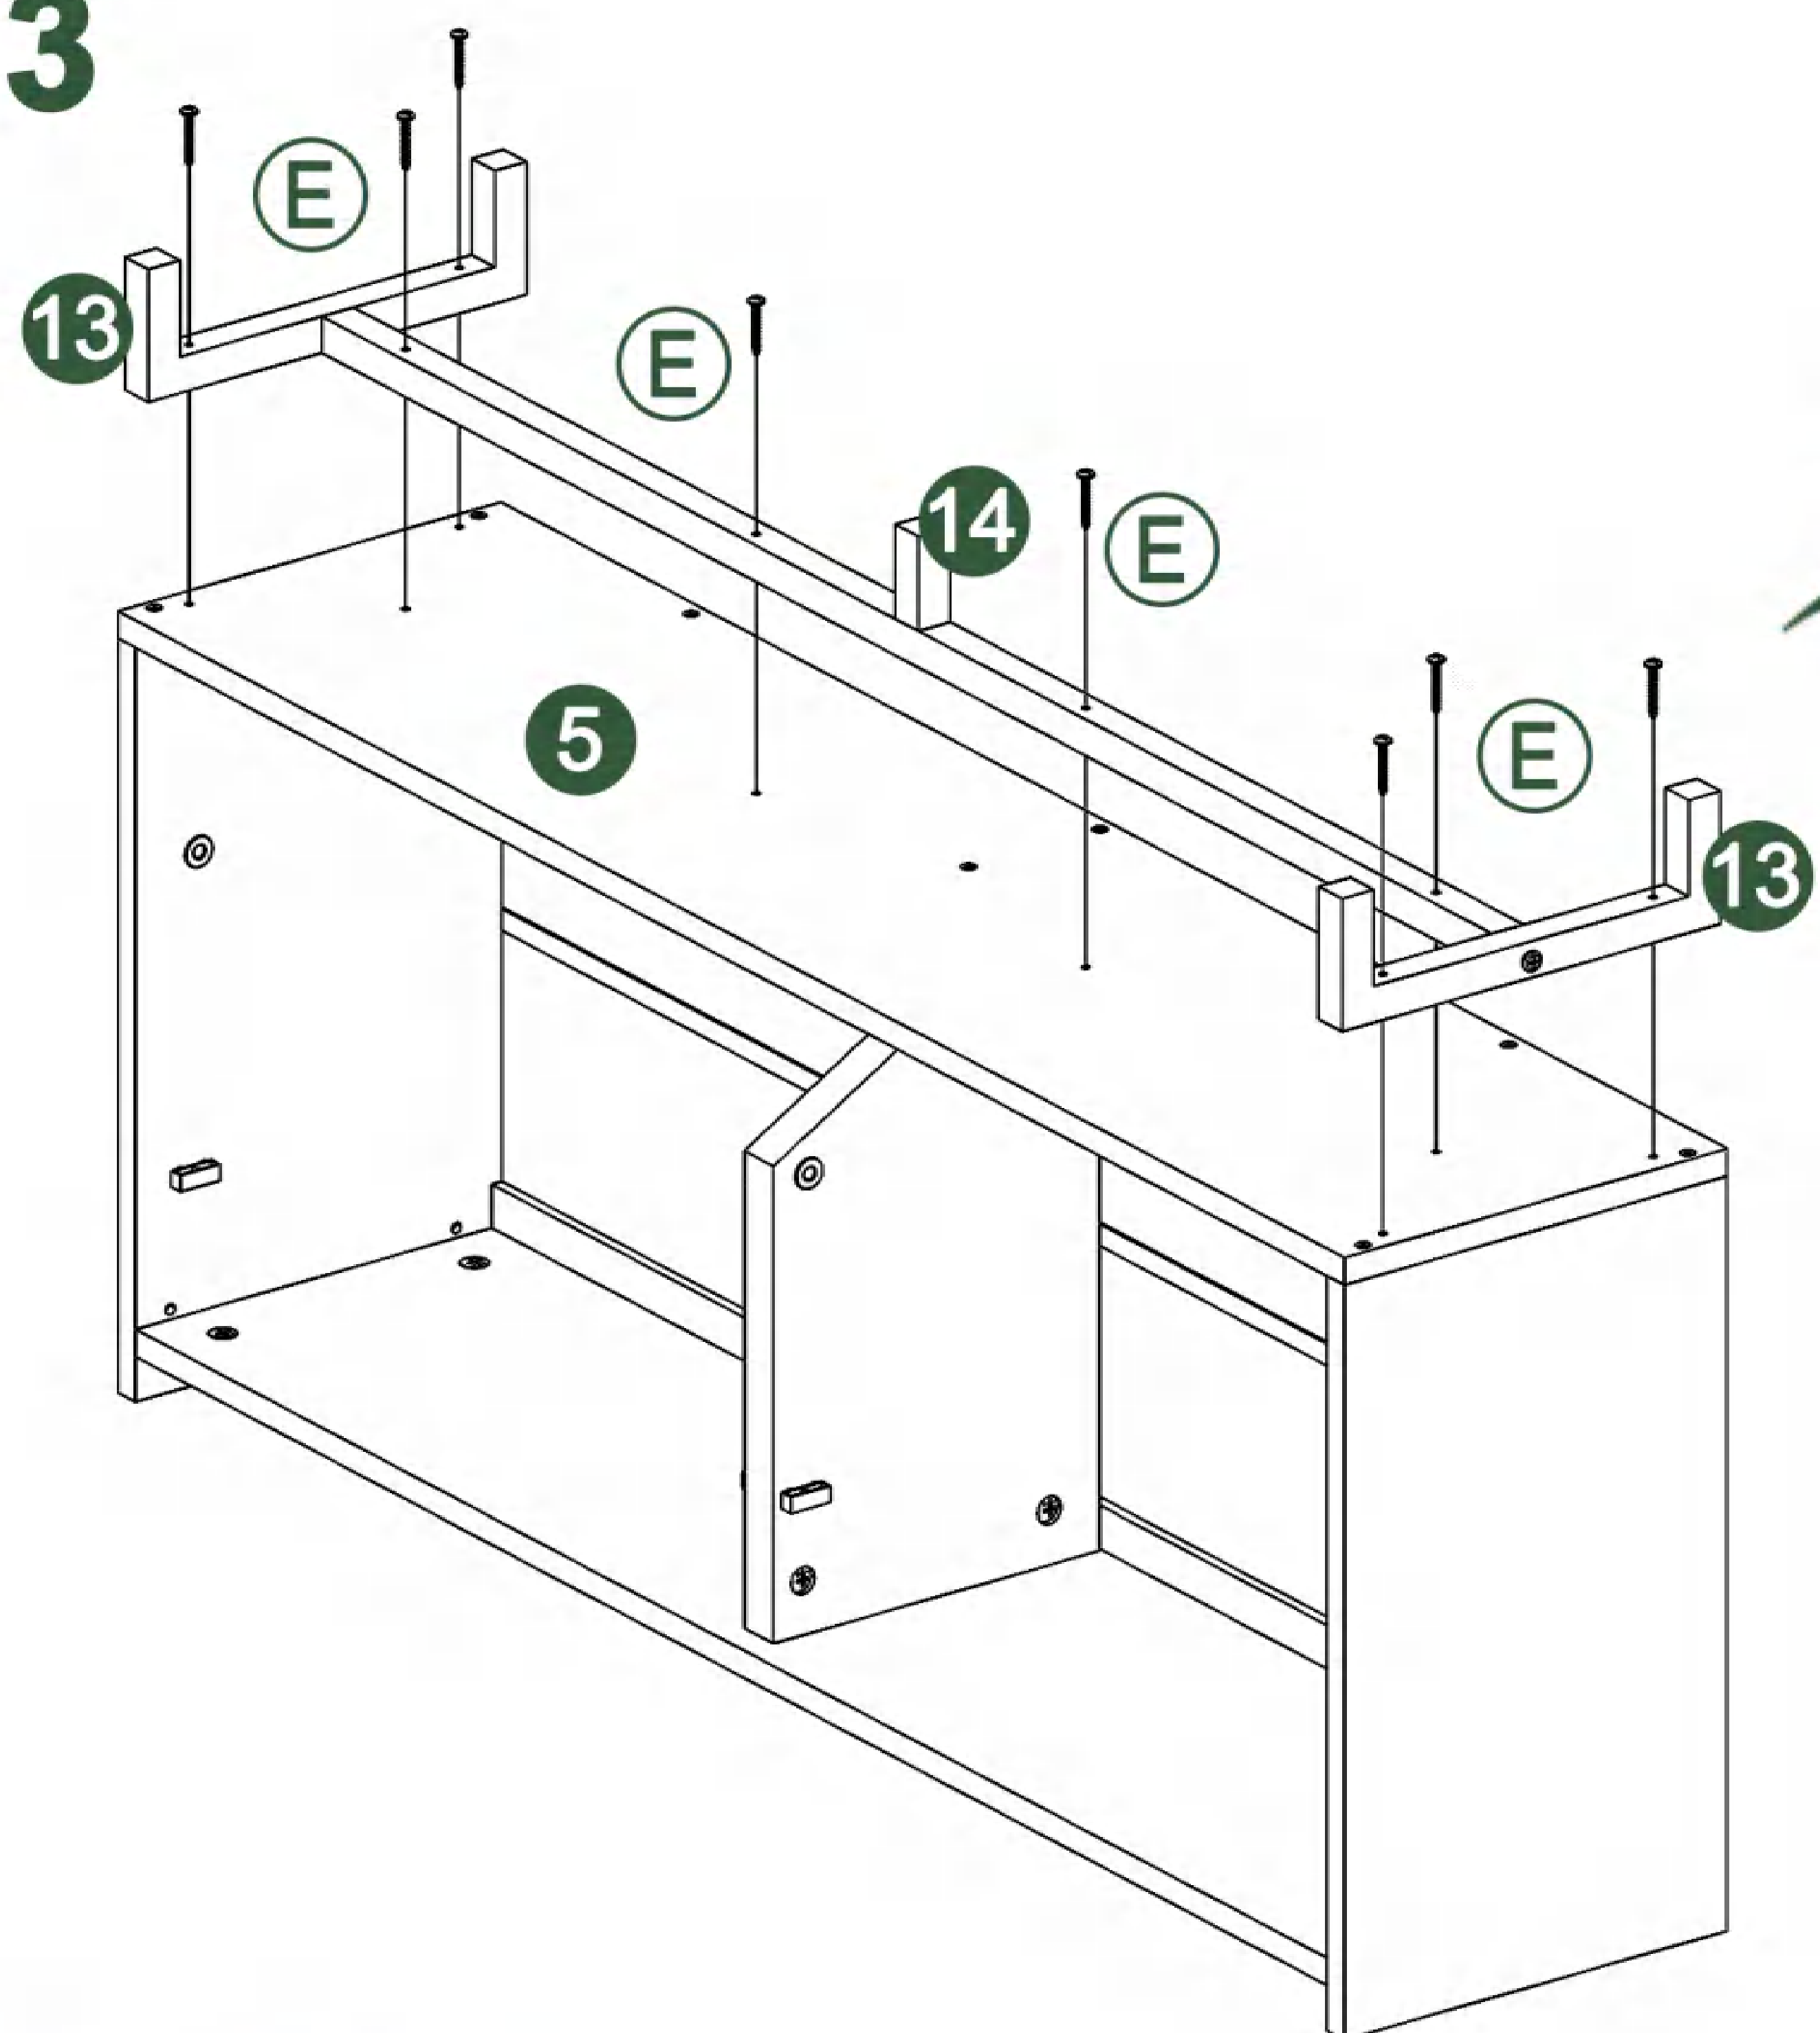


14.

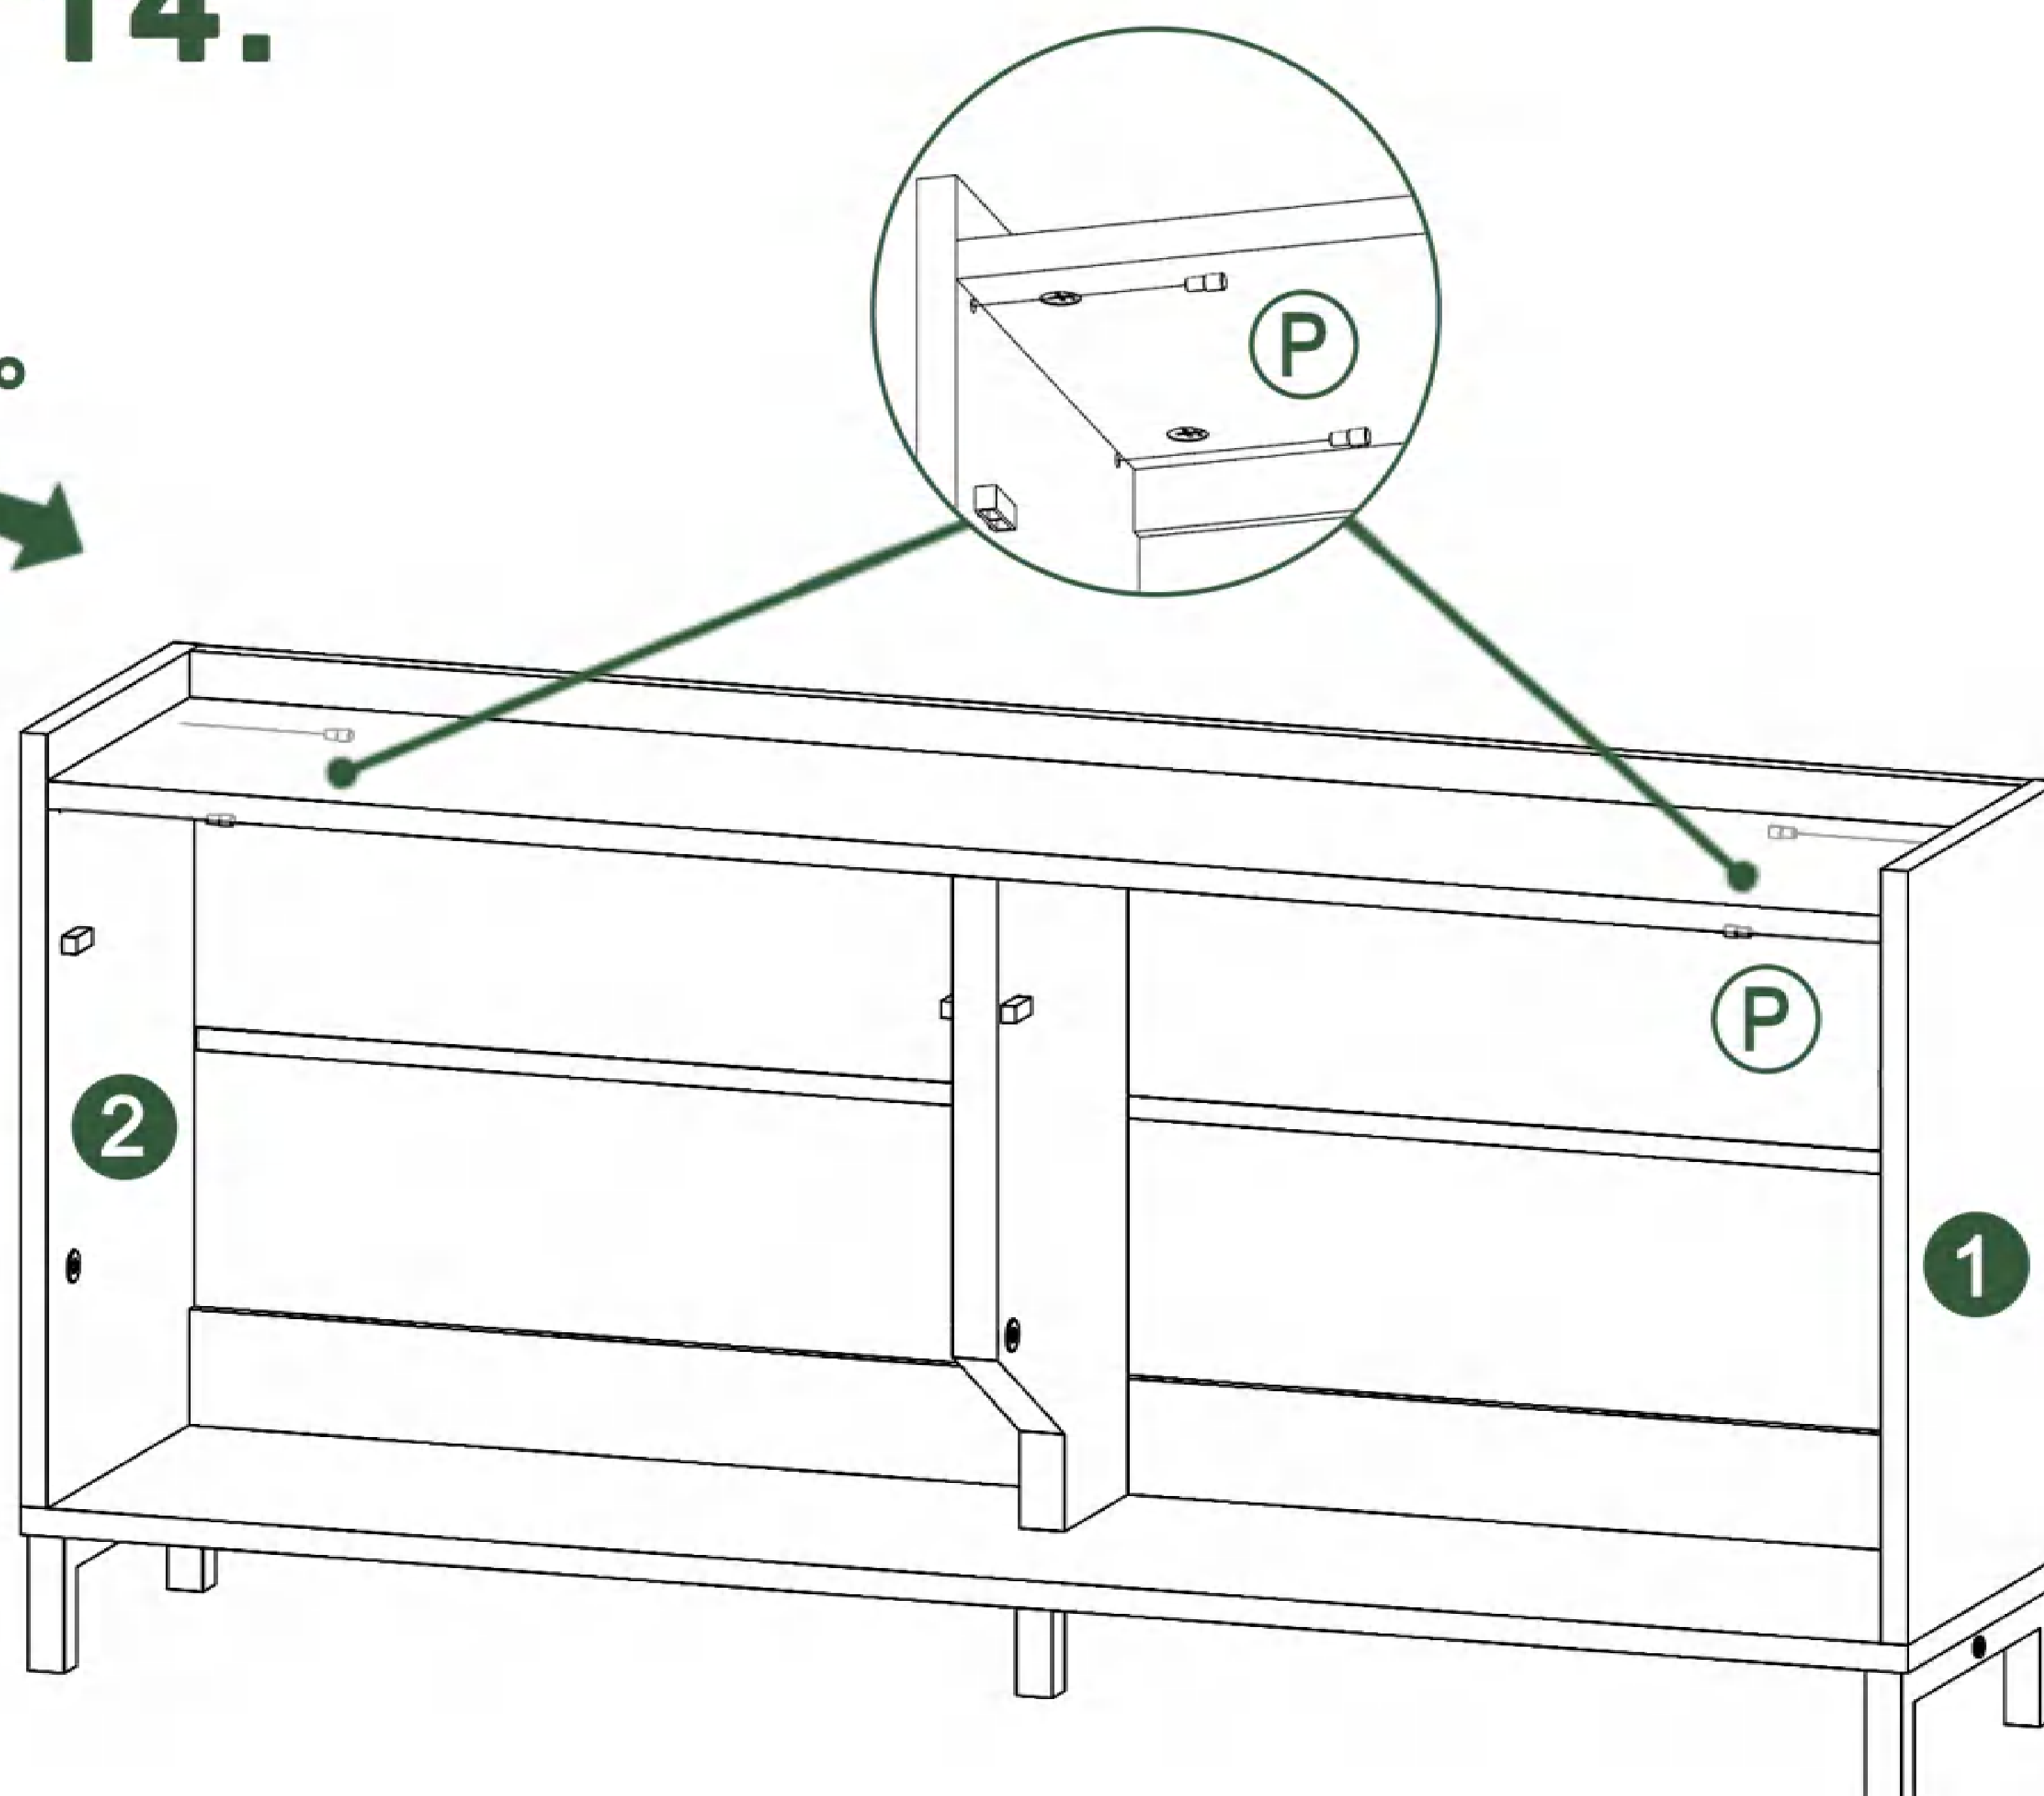


15(X2).

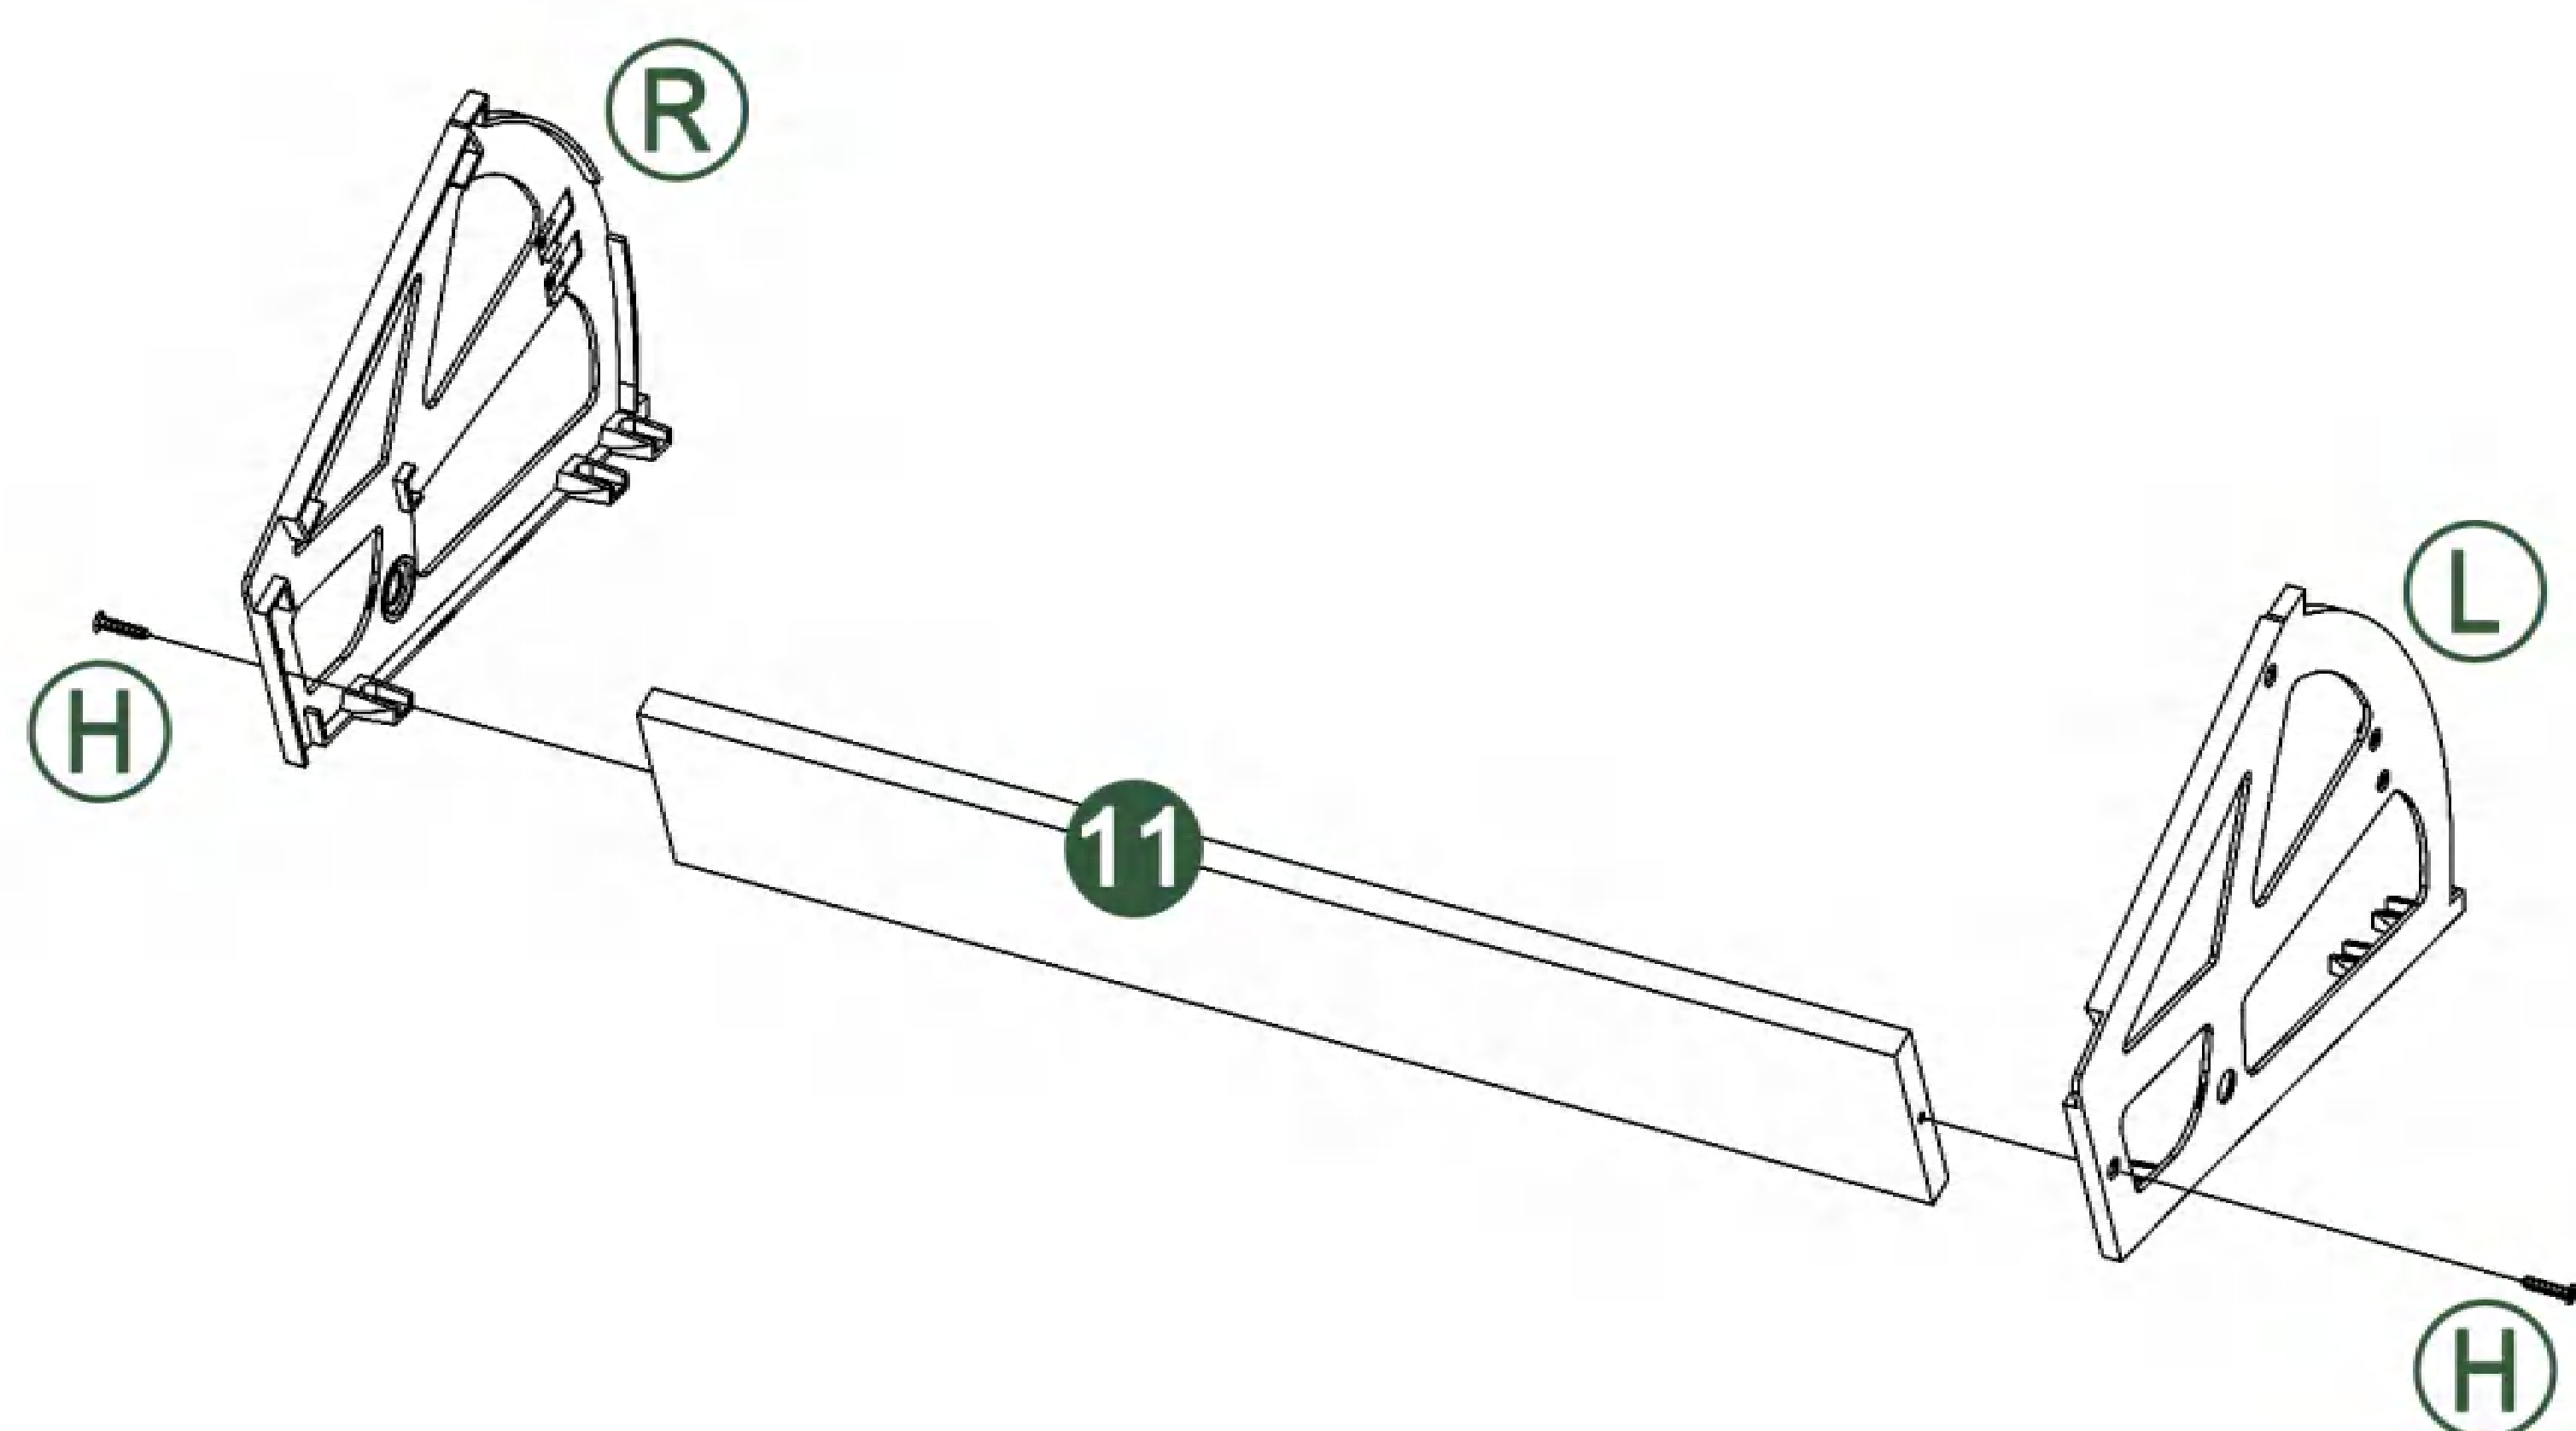


16.

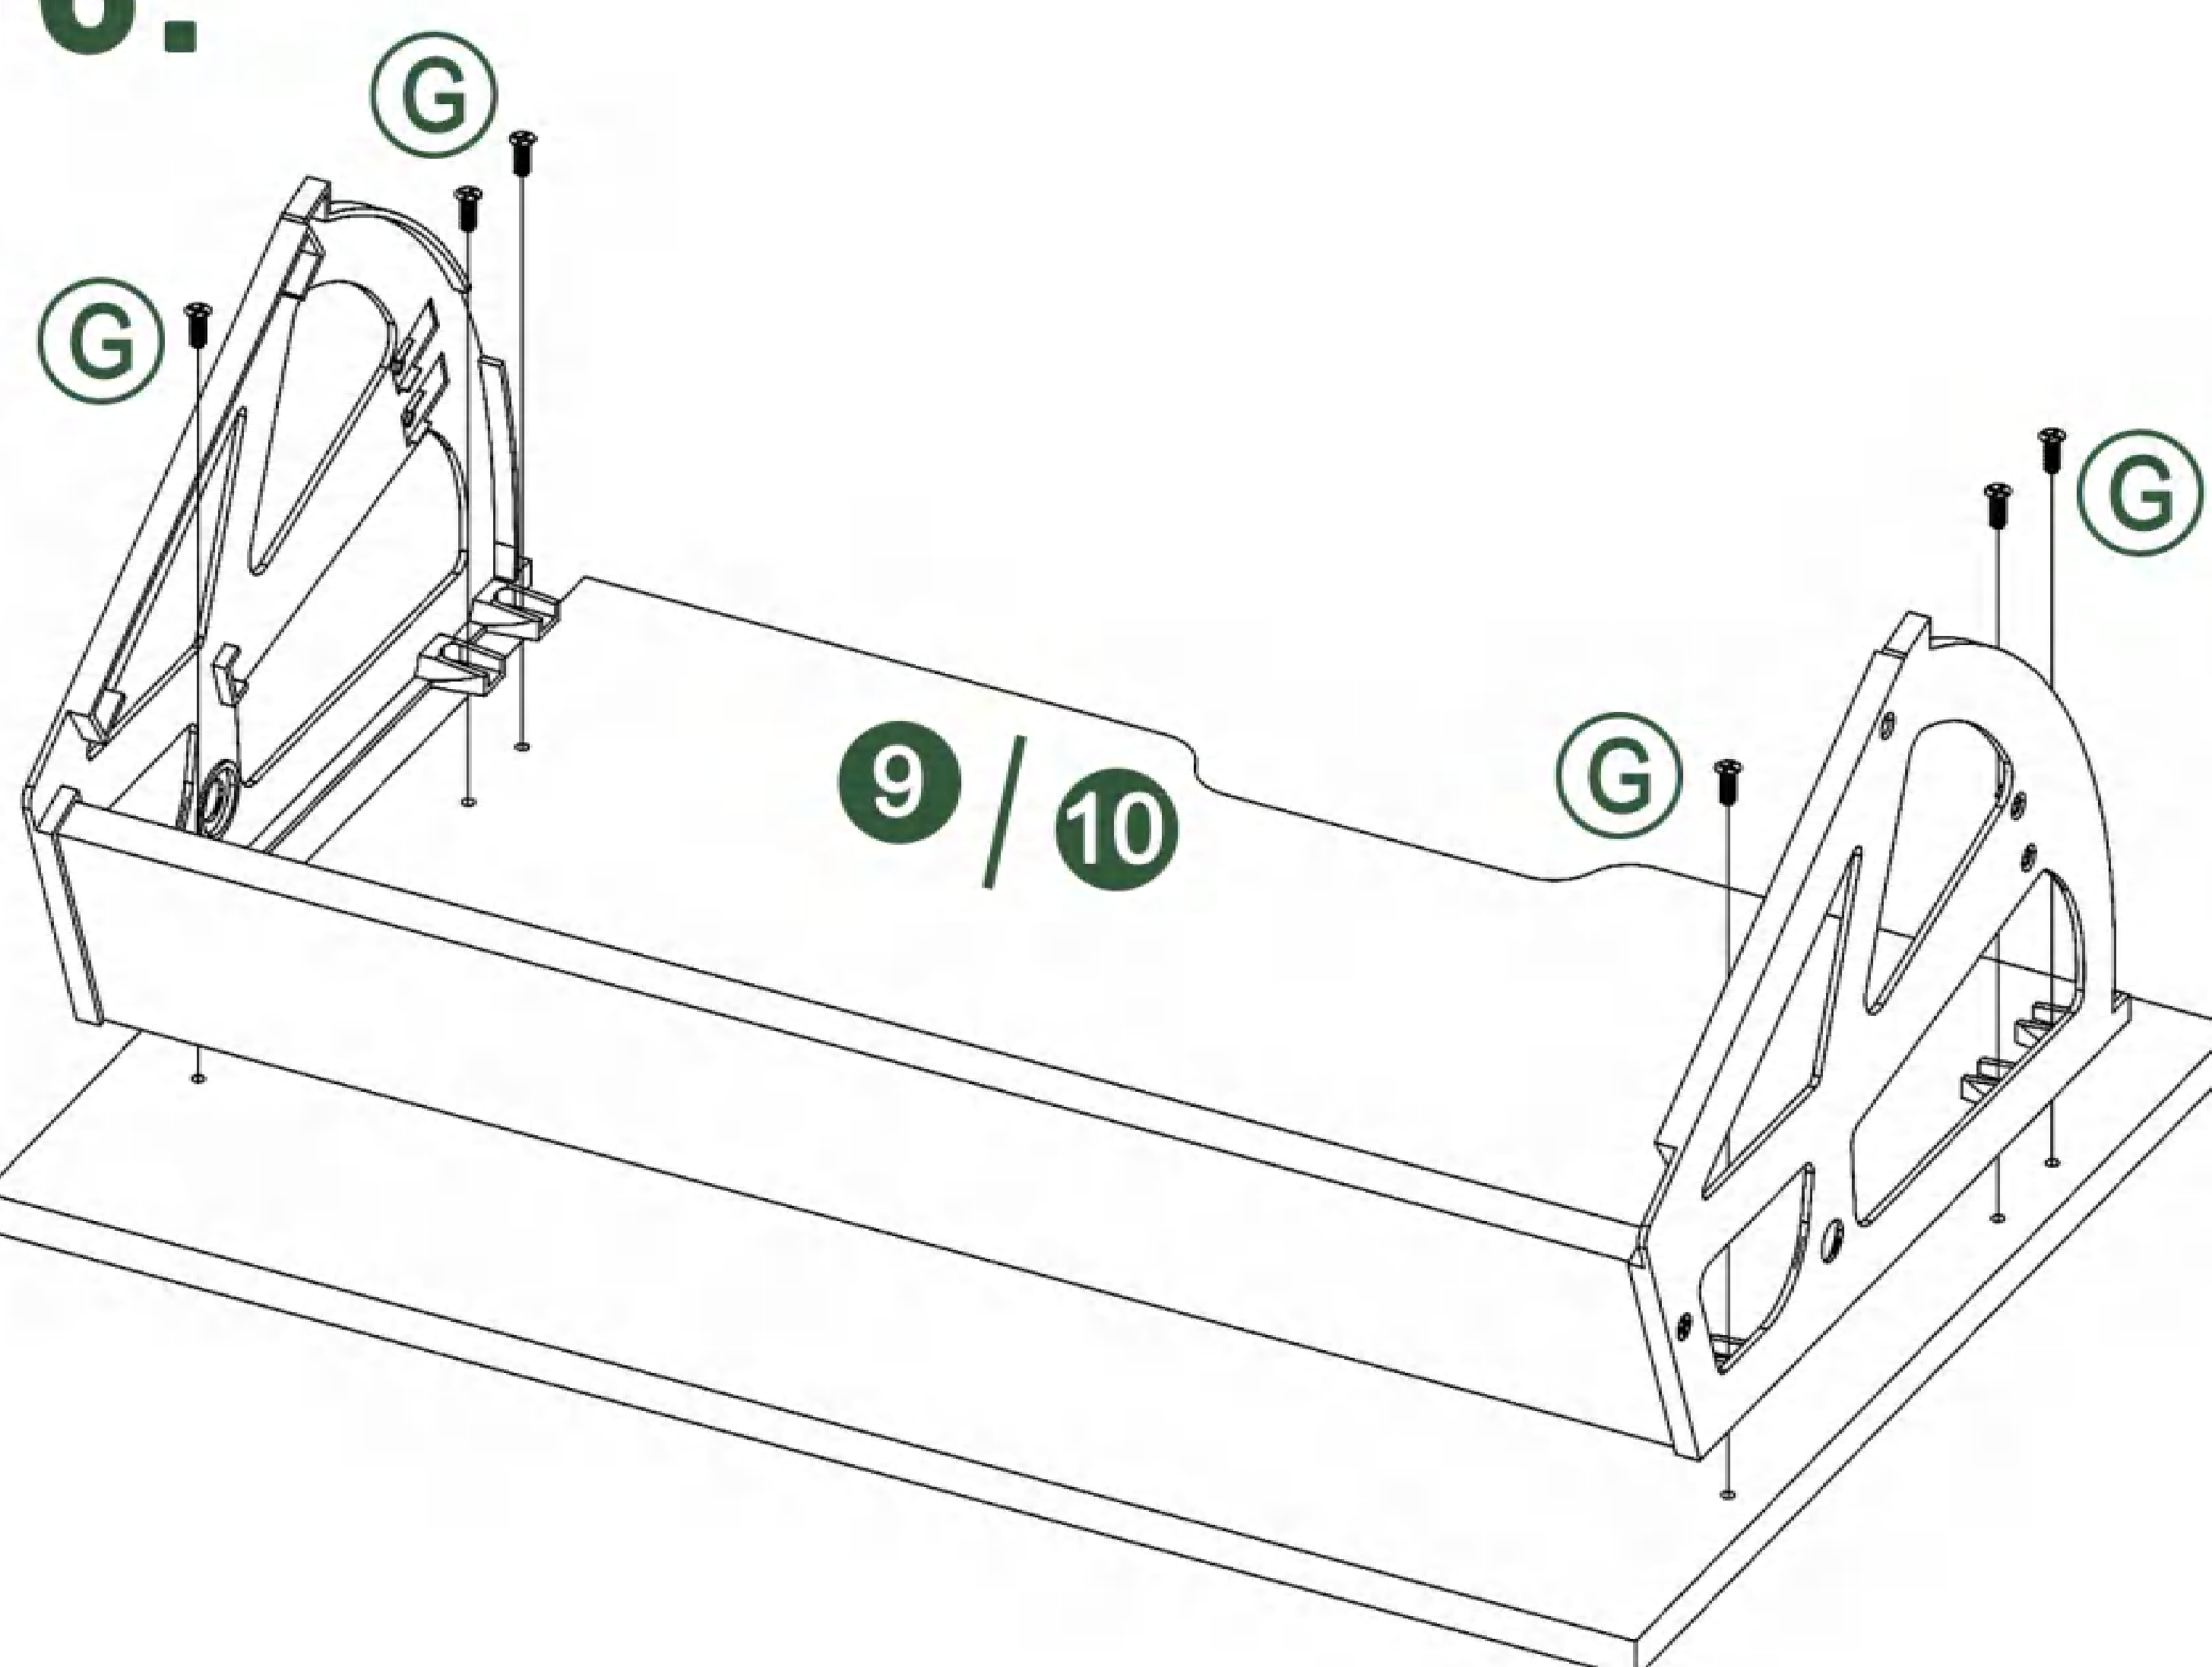

17(X2).

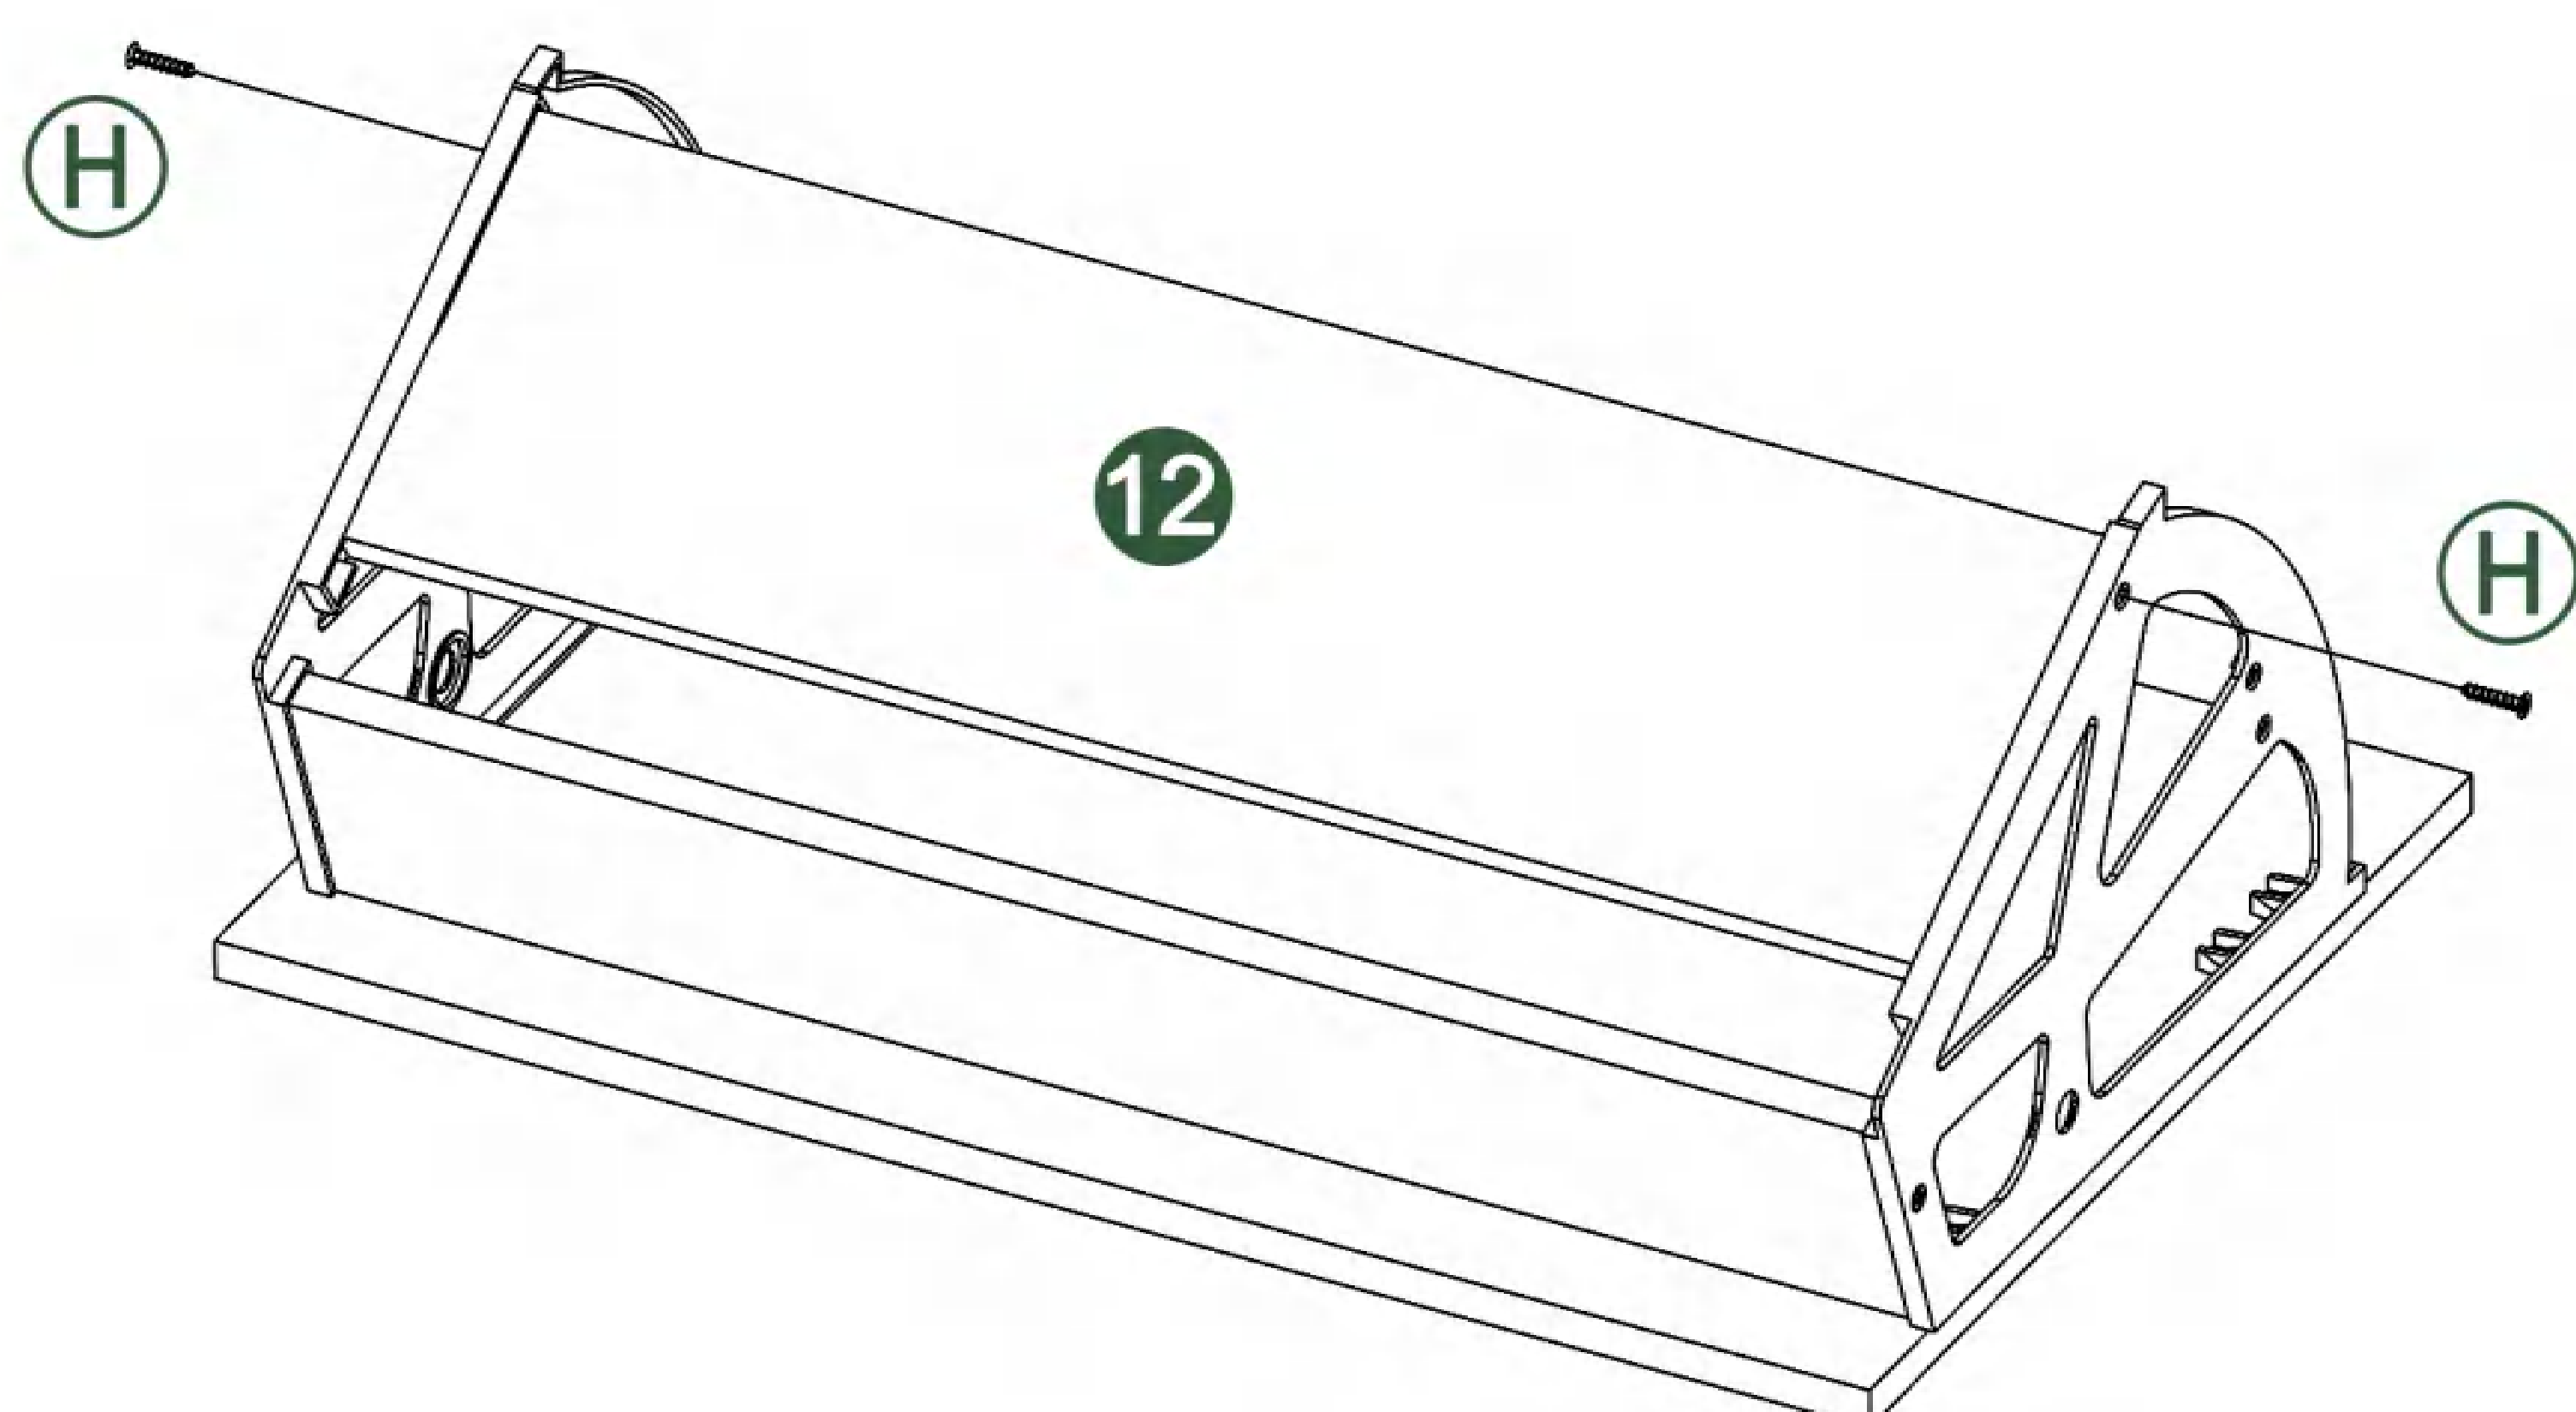


18.

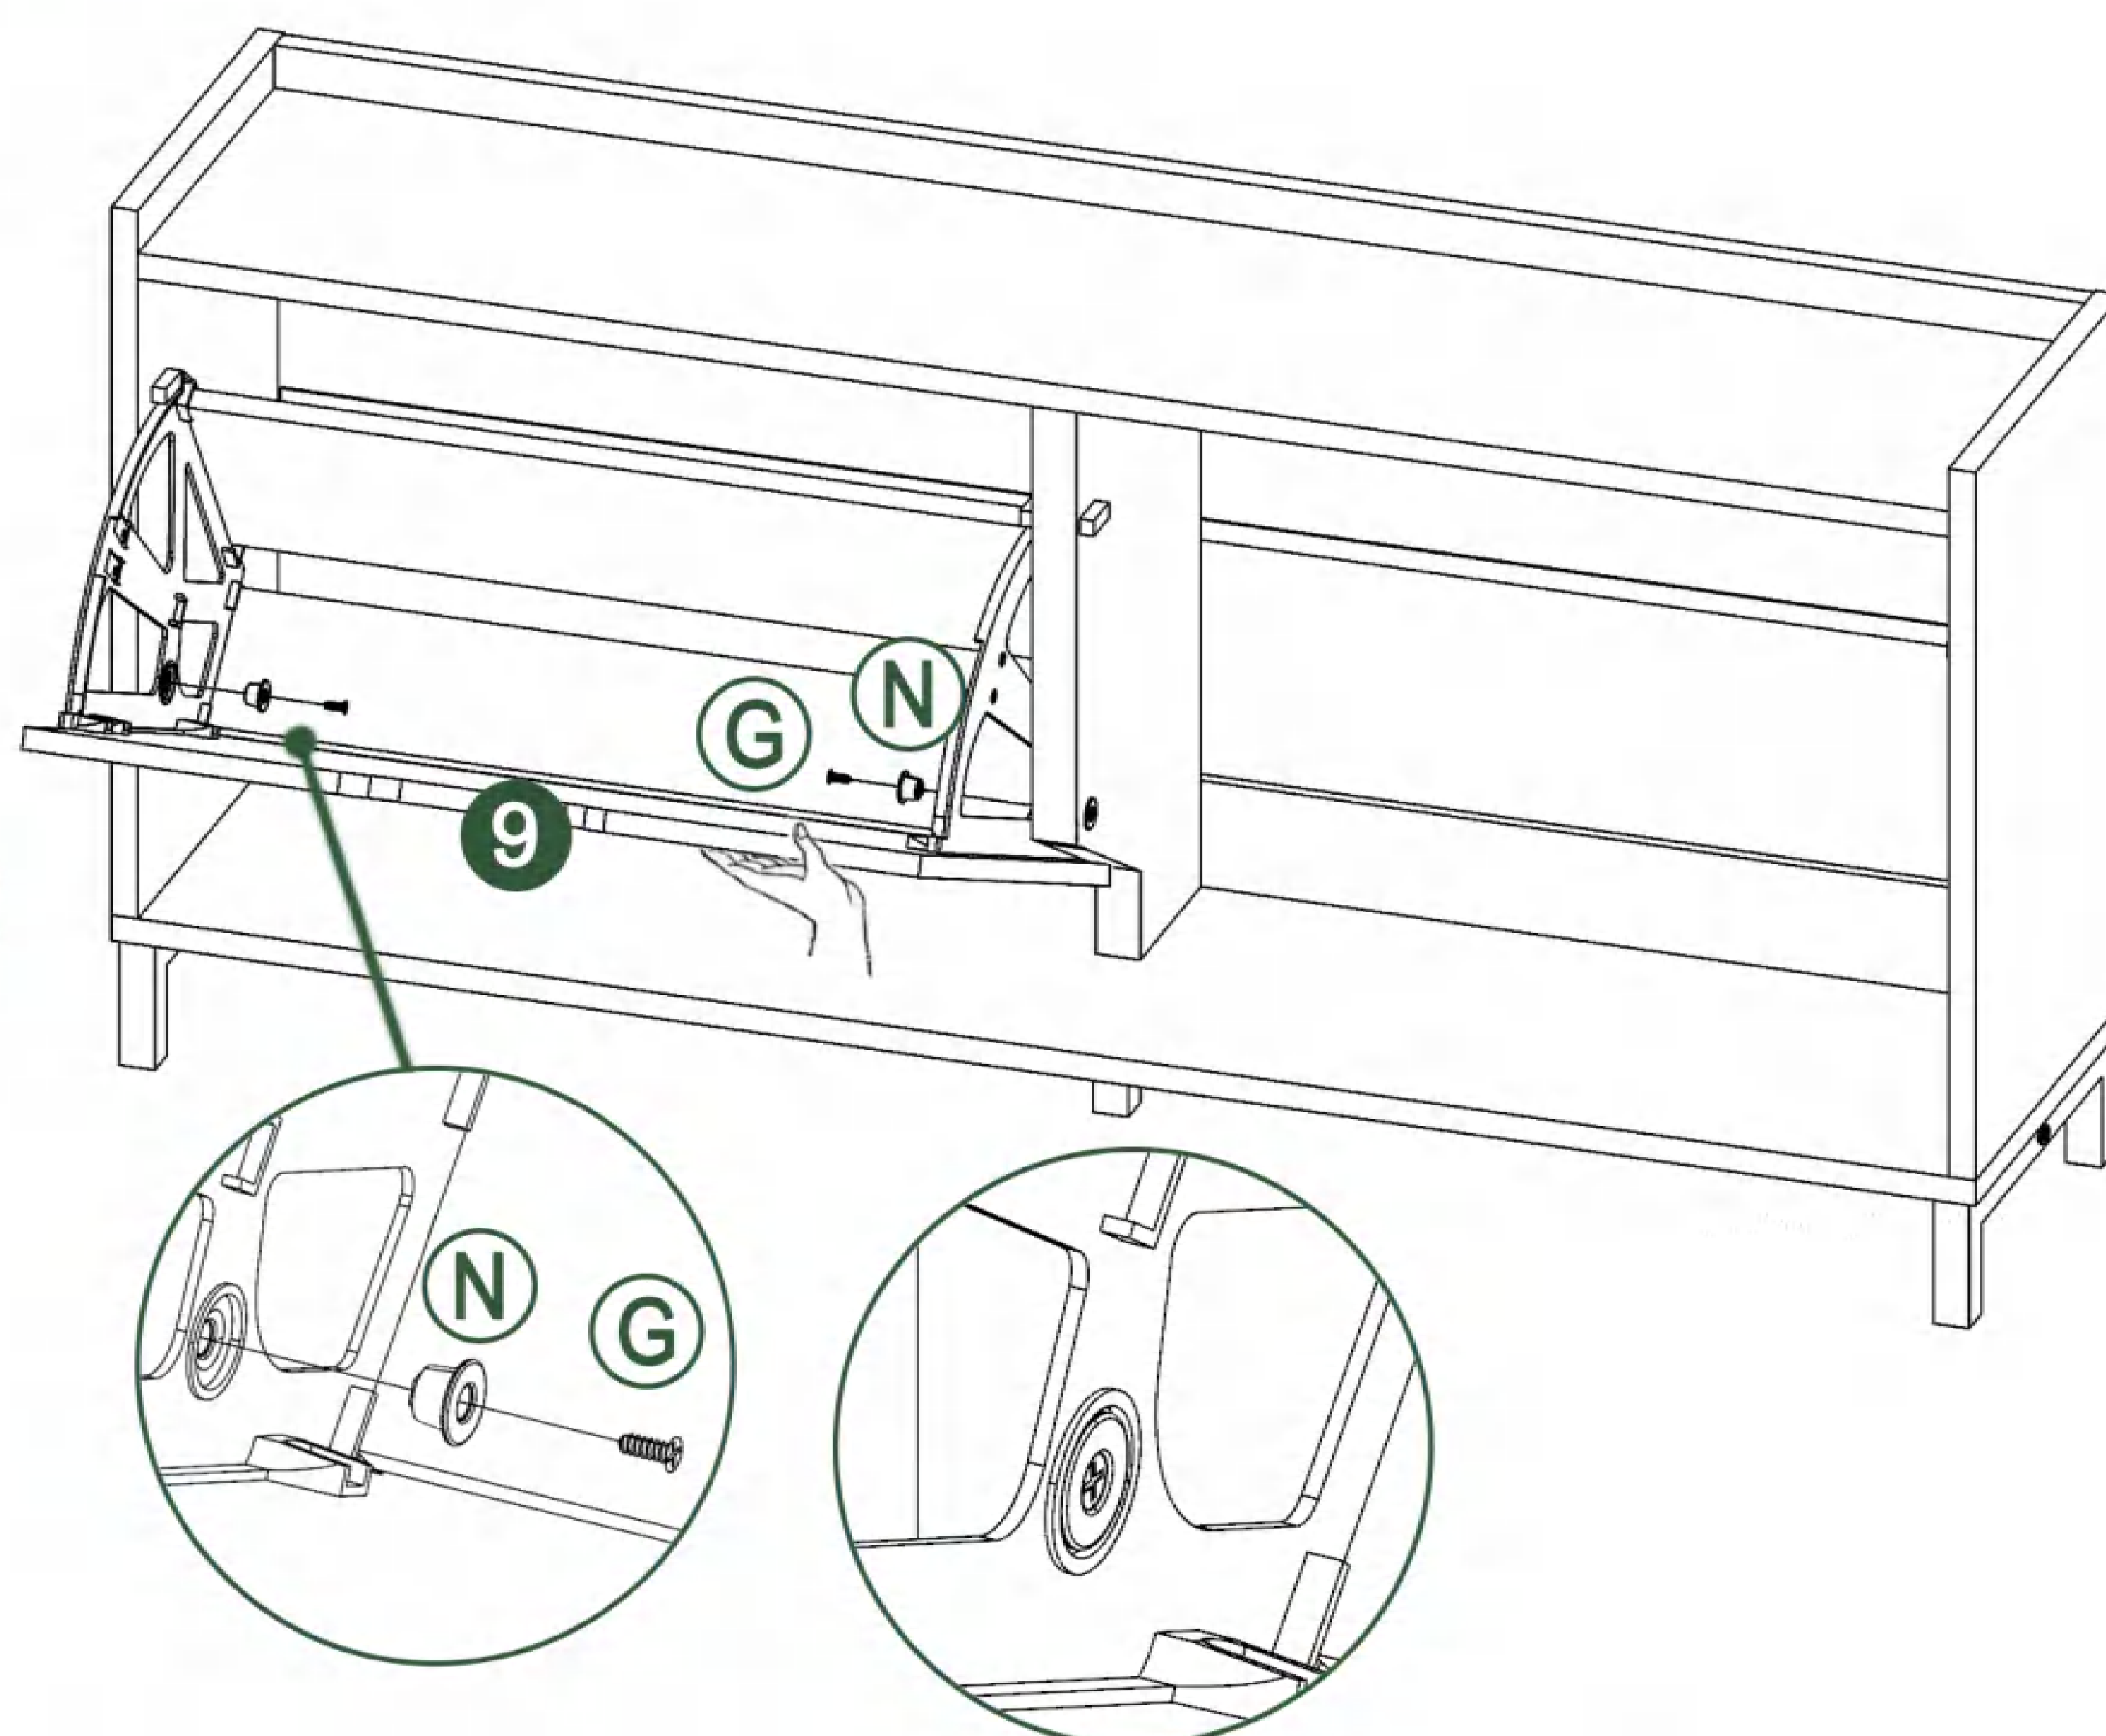


First, tighten half of the screws on the left and right axis of the tipping bucket to secure it in place. Then, tighten the screws on both sides to ensure even gaps on the left and right sides of the tipping bucket door


19.

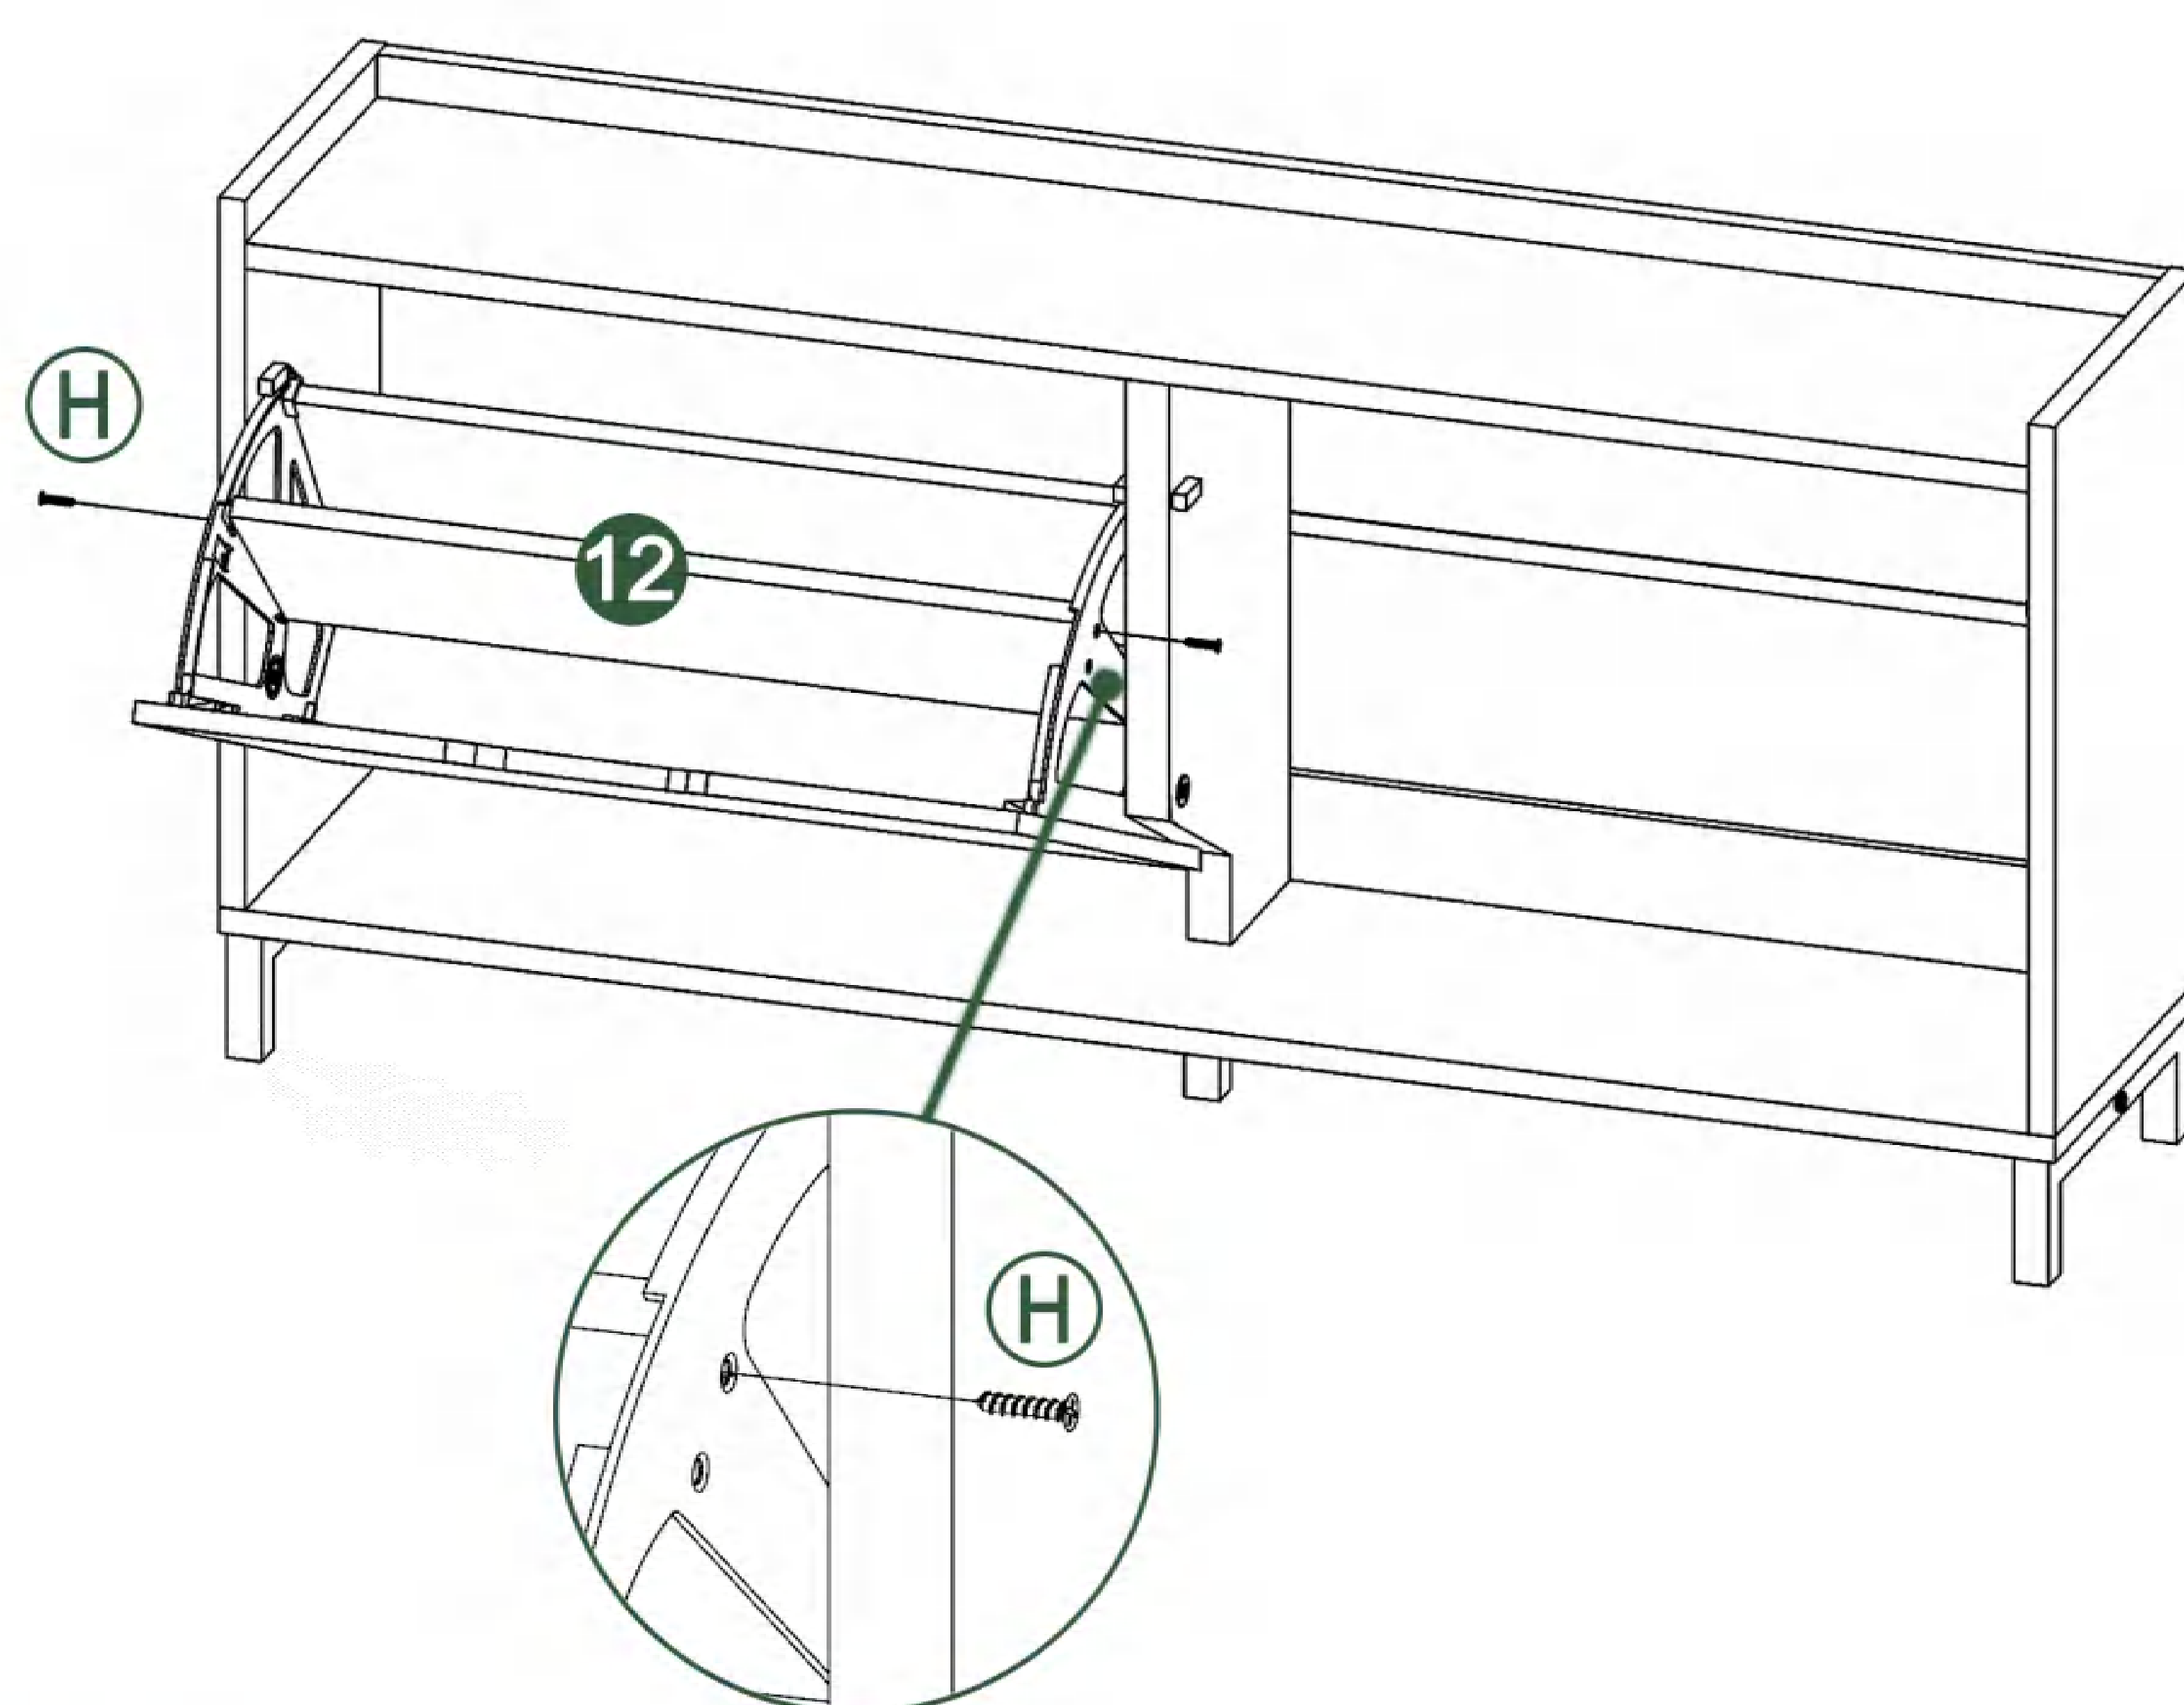


20.

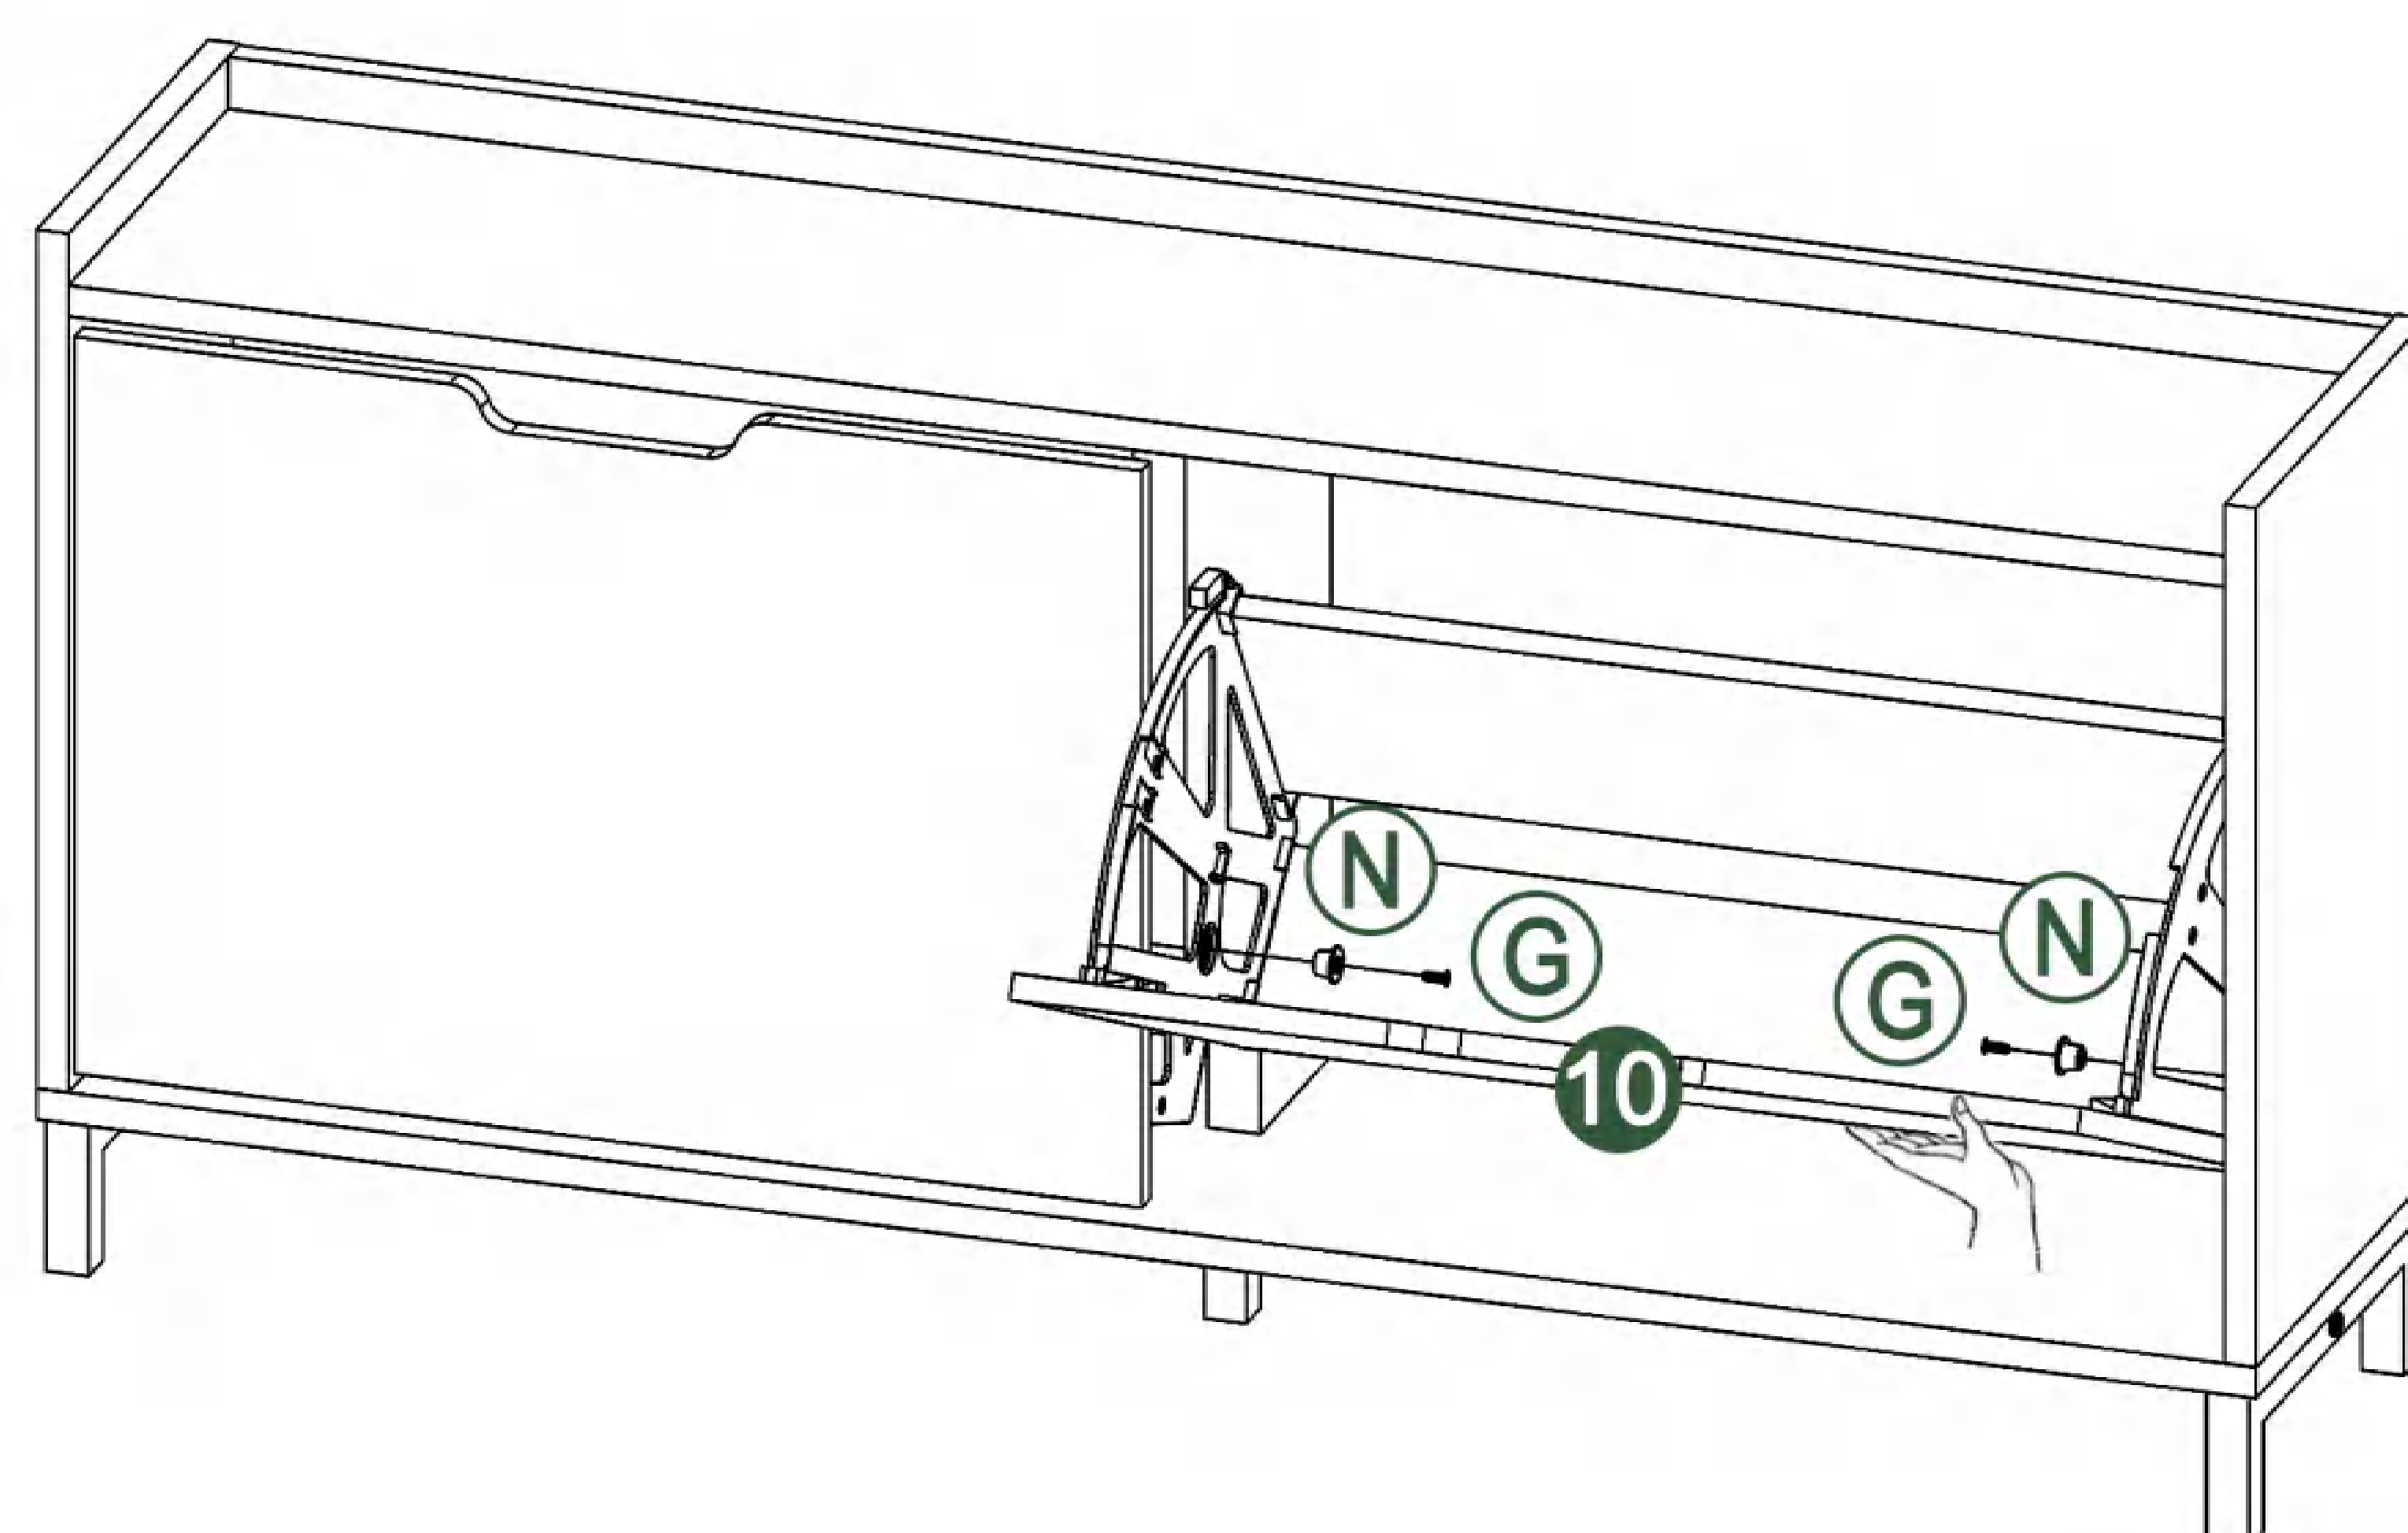


21.

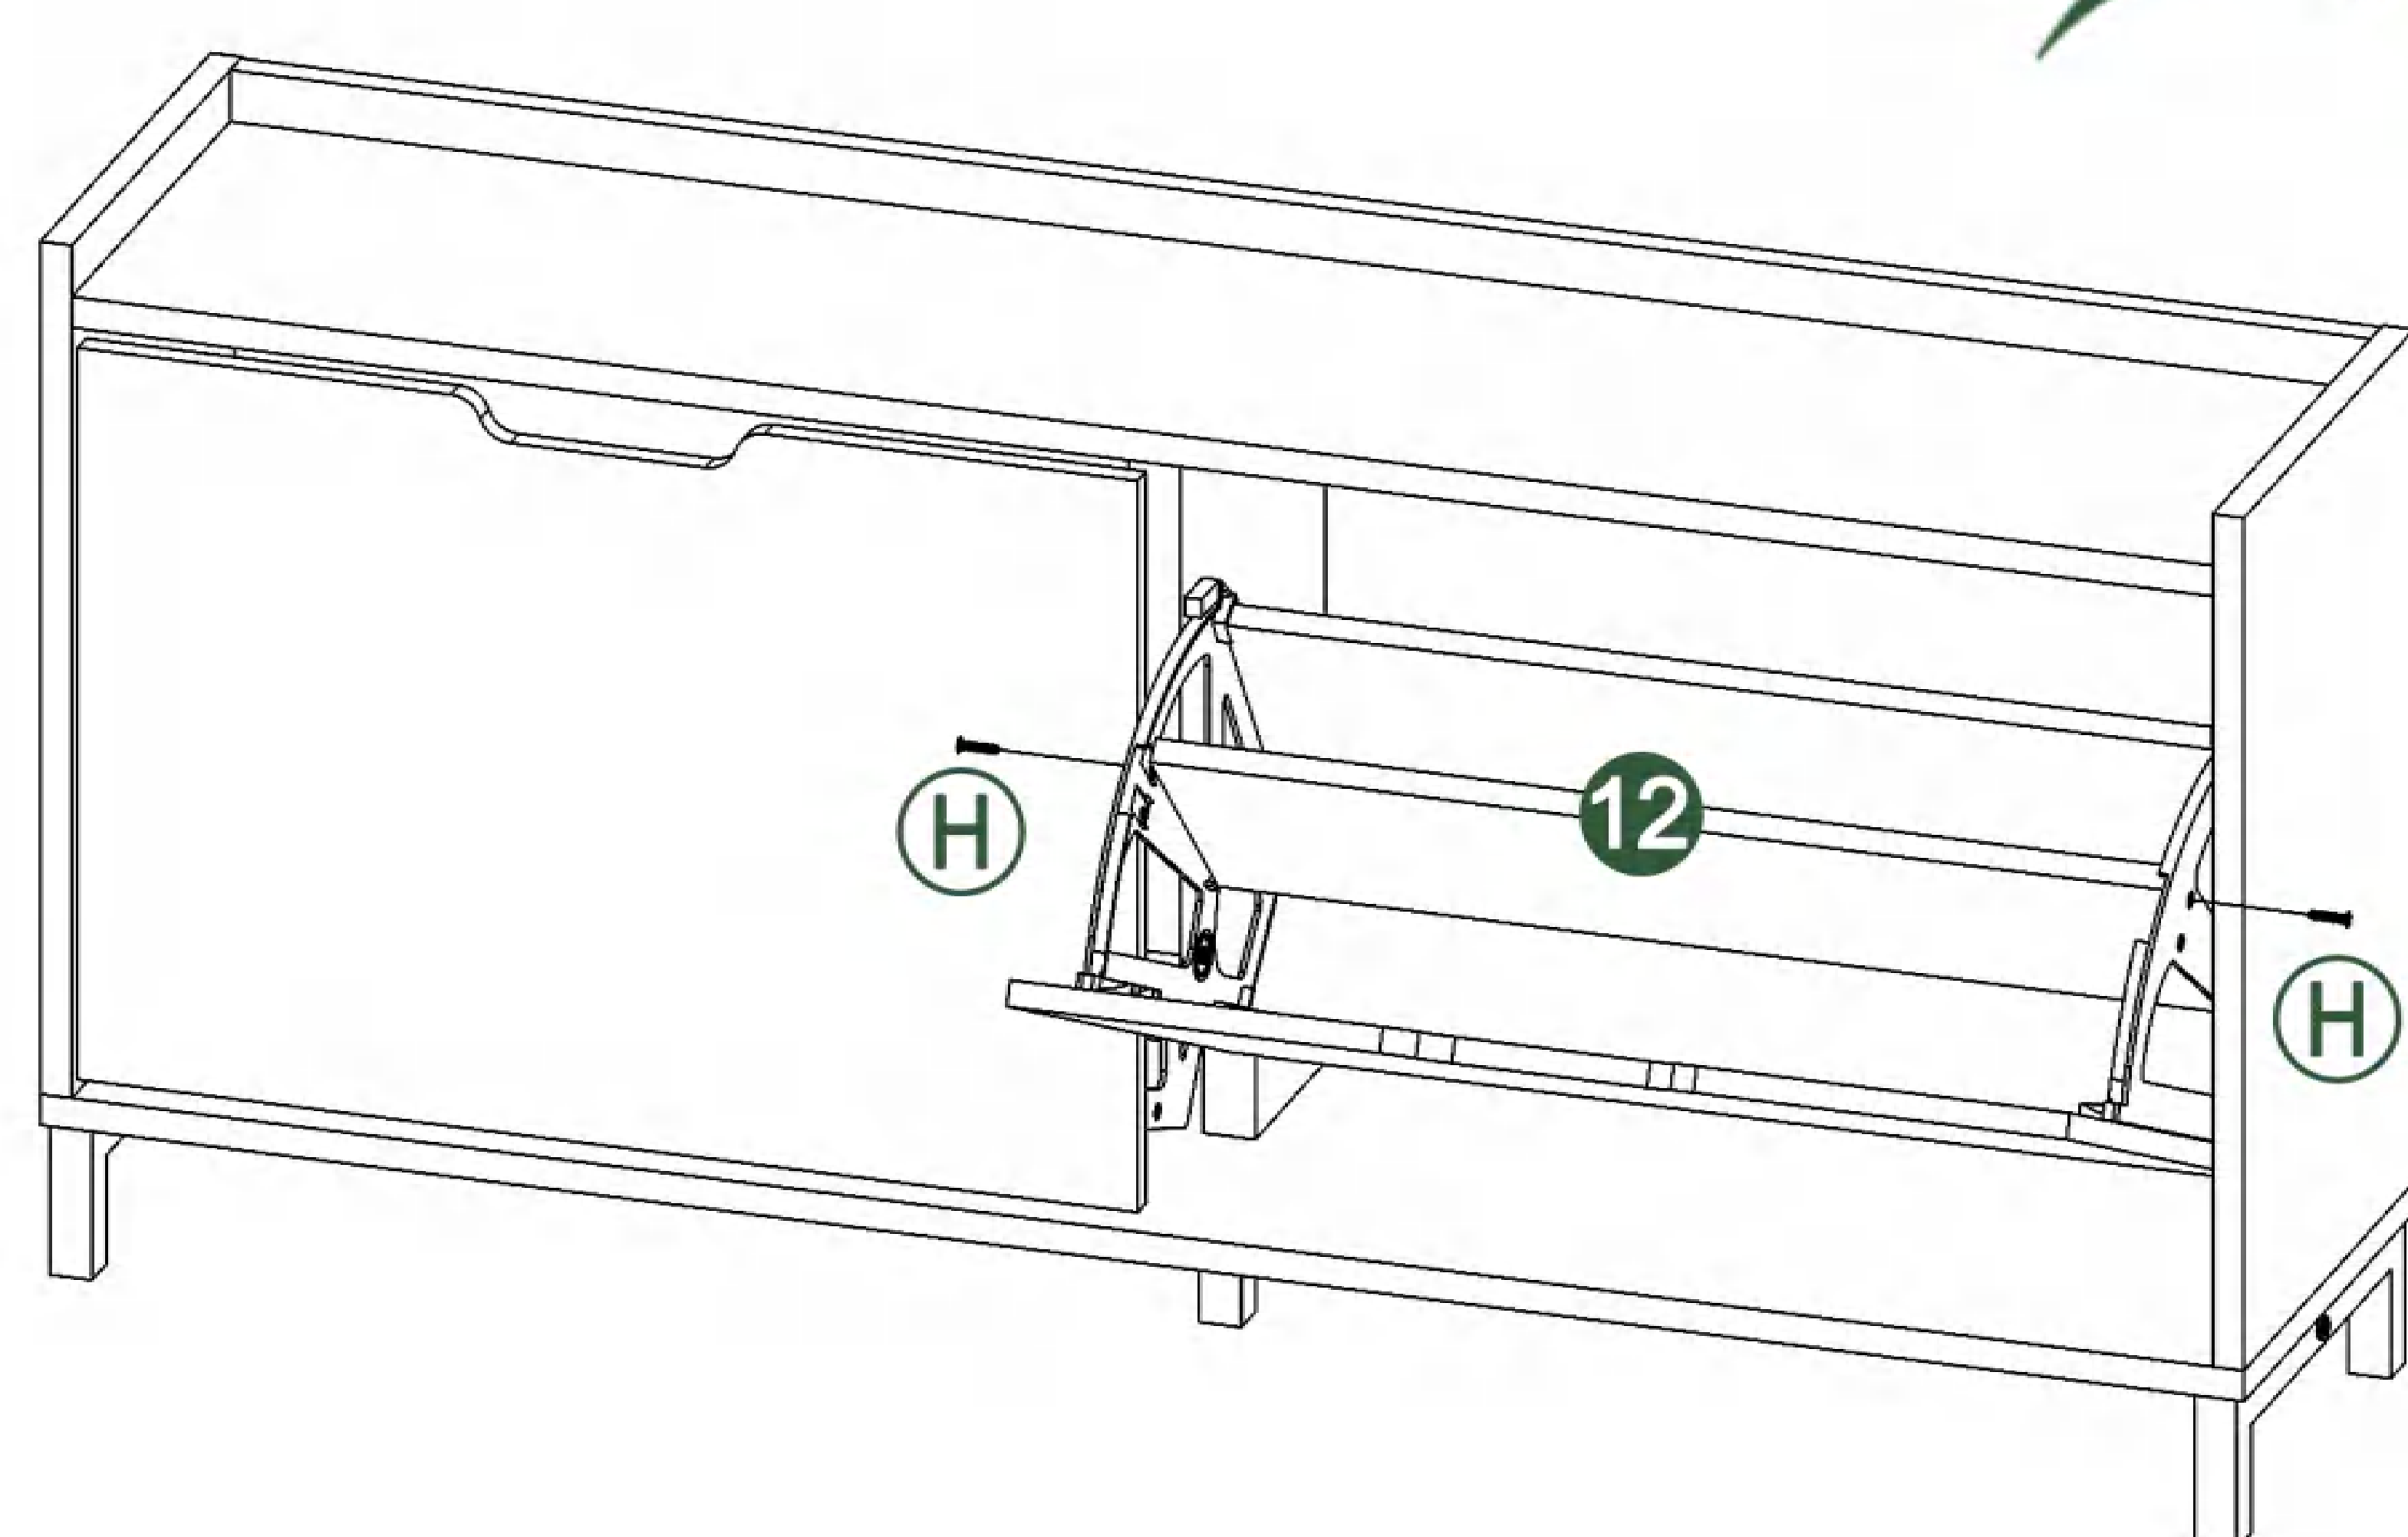

22.

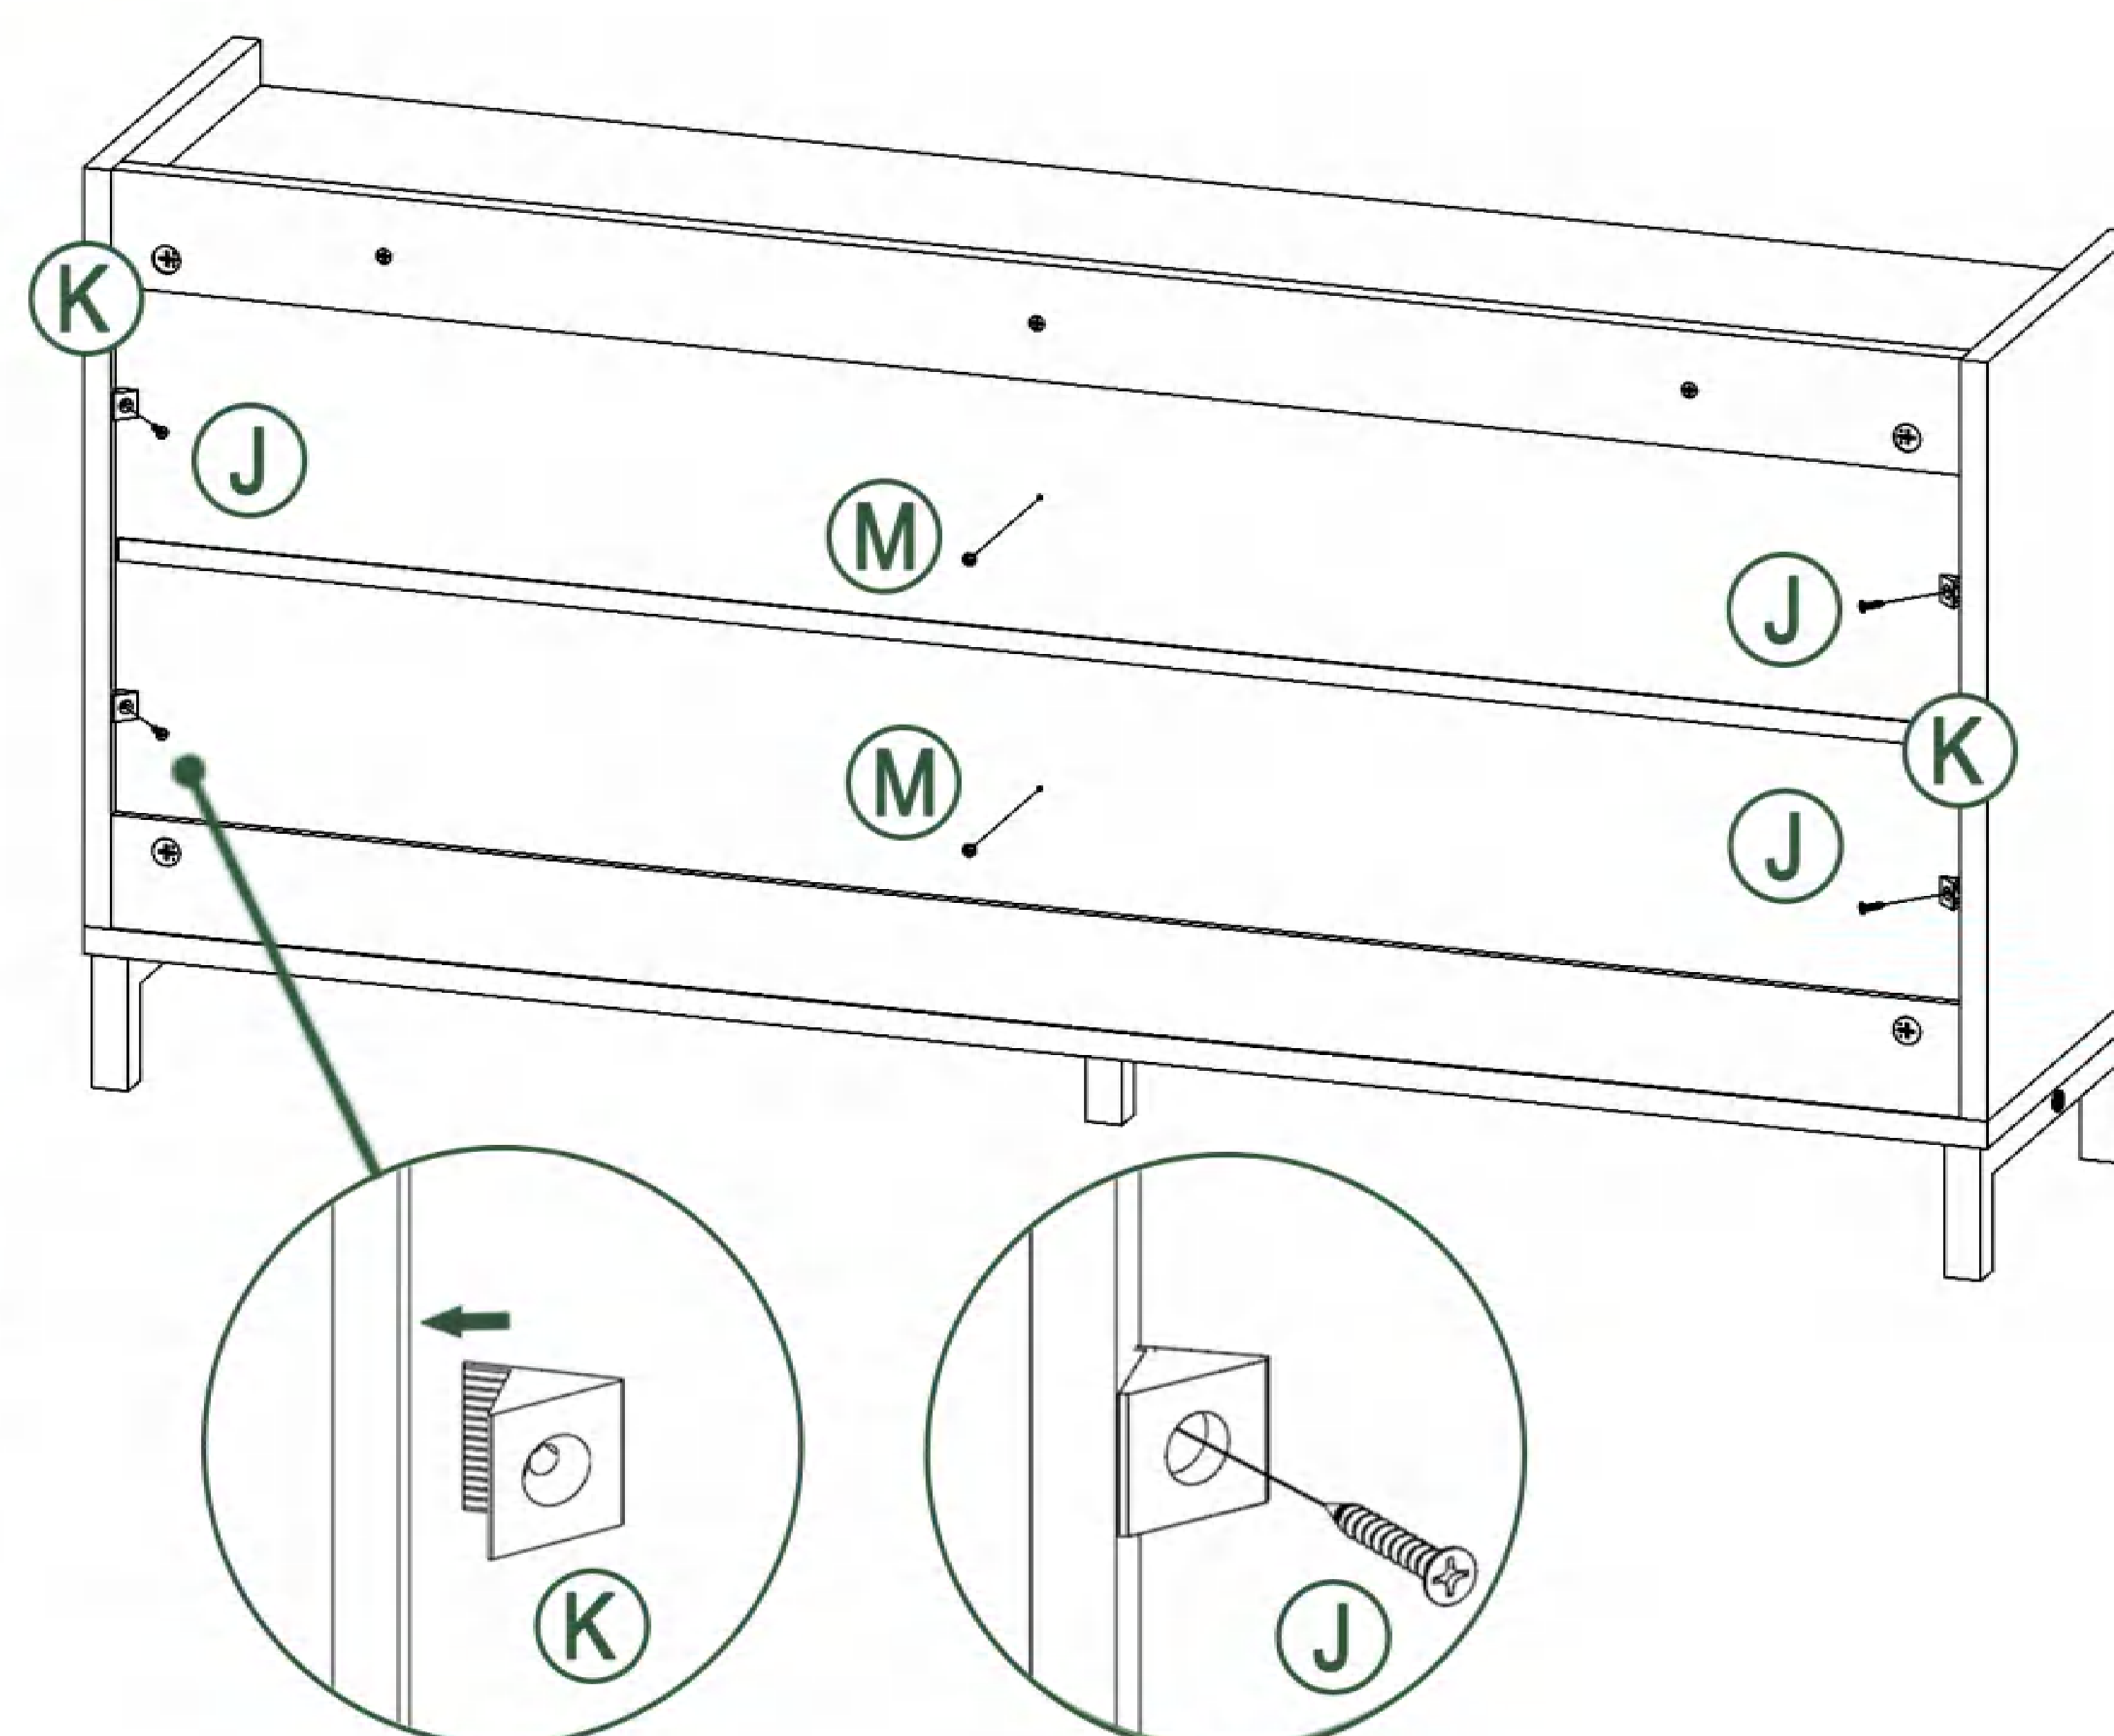

23.

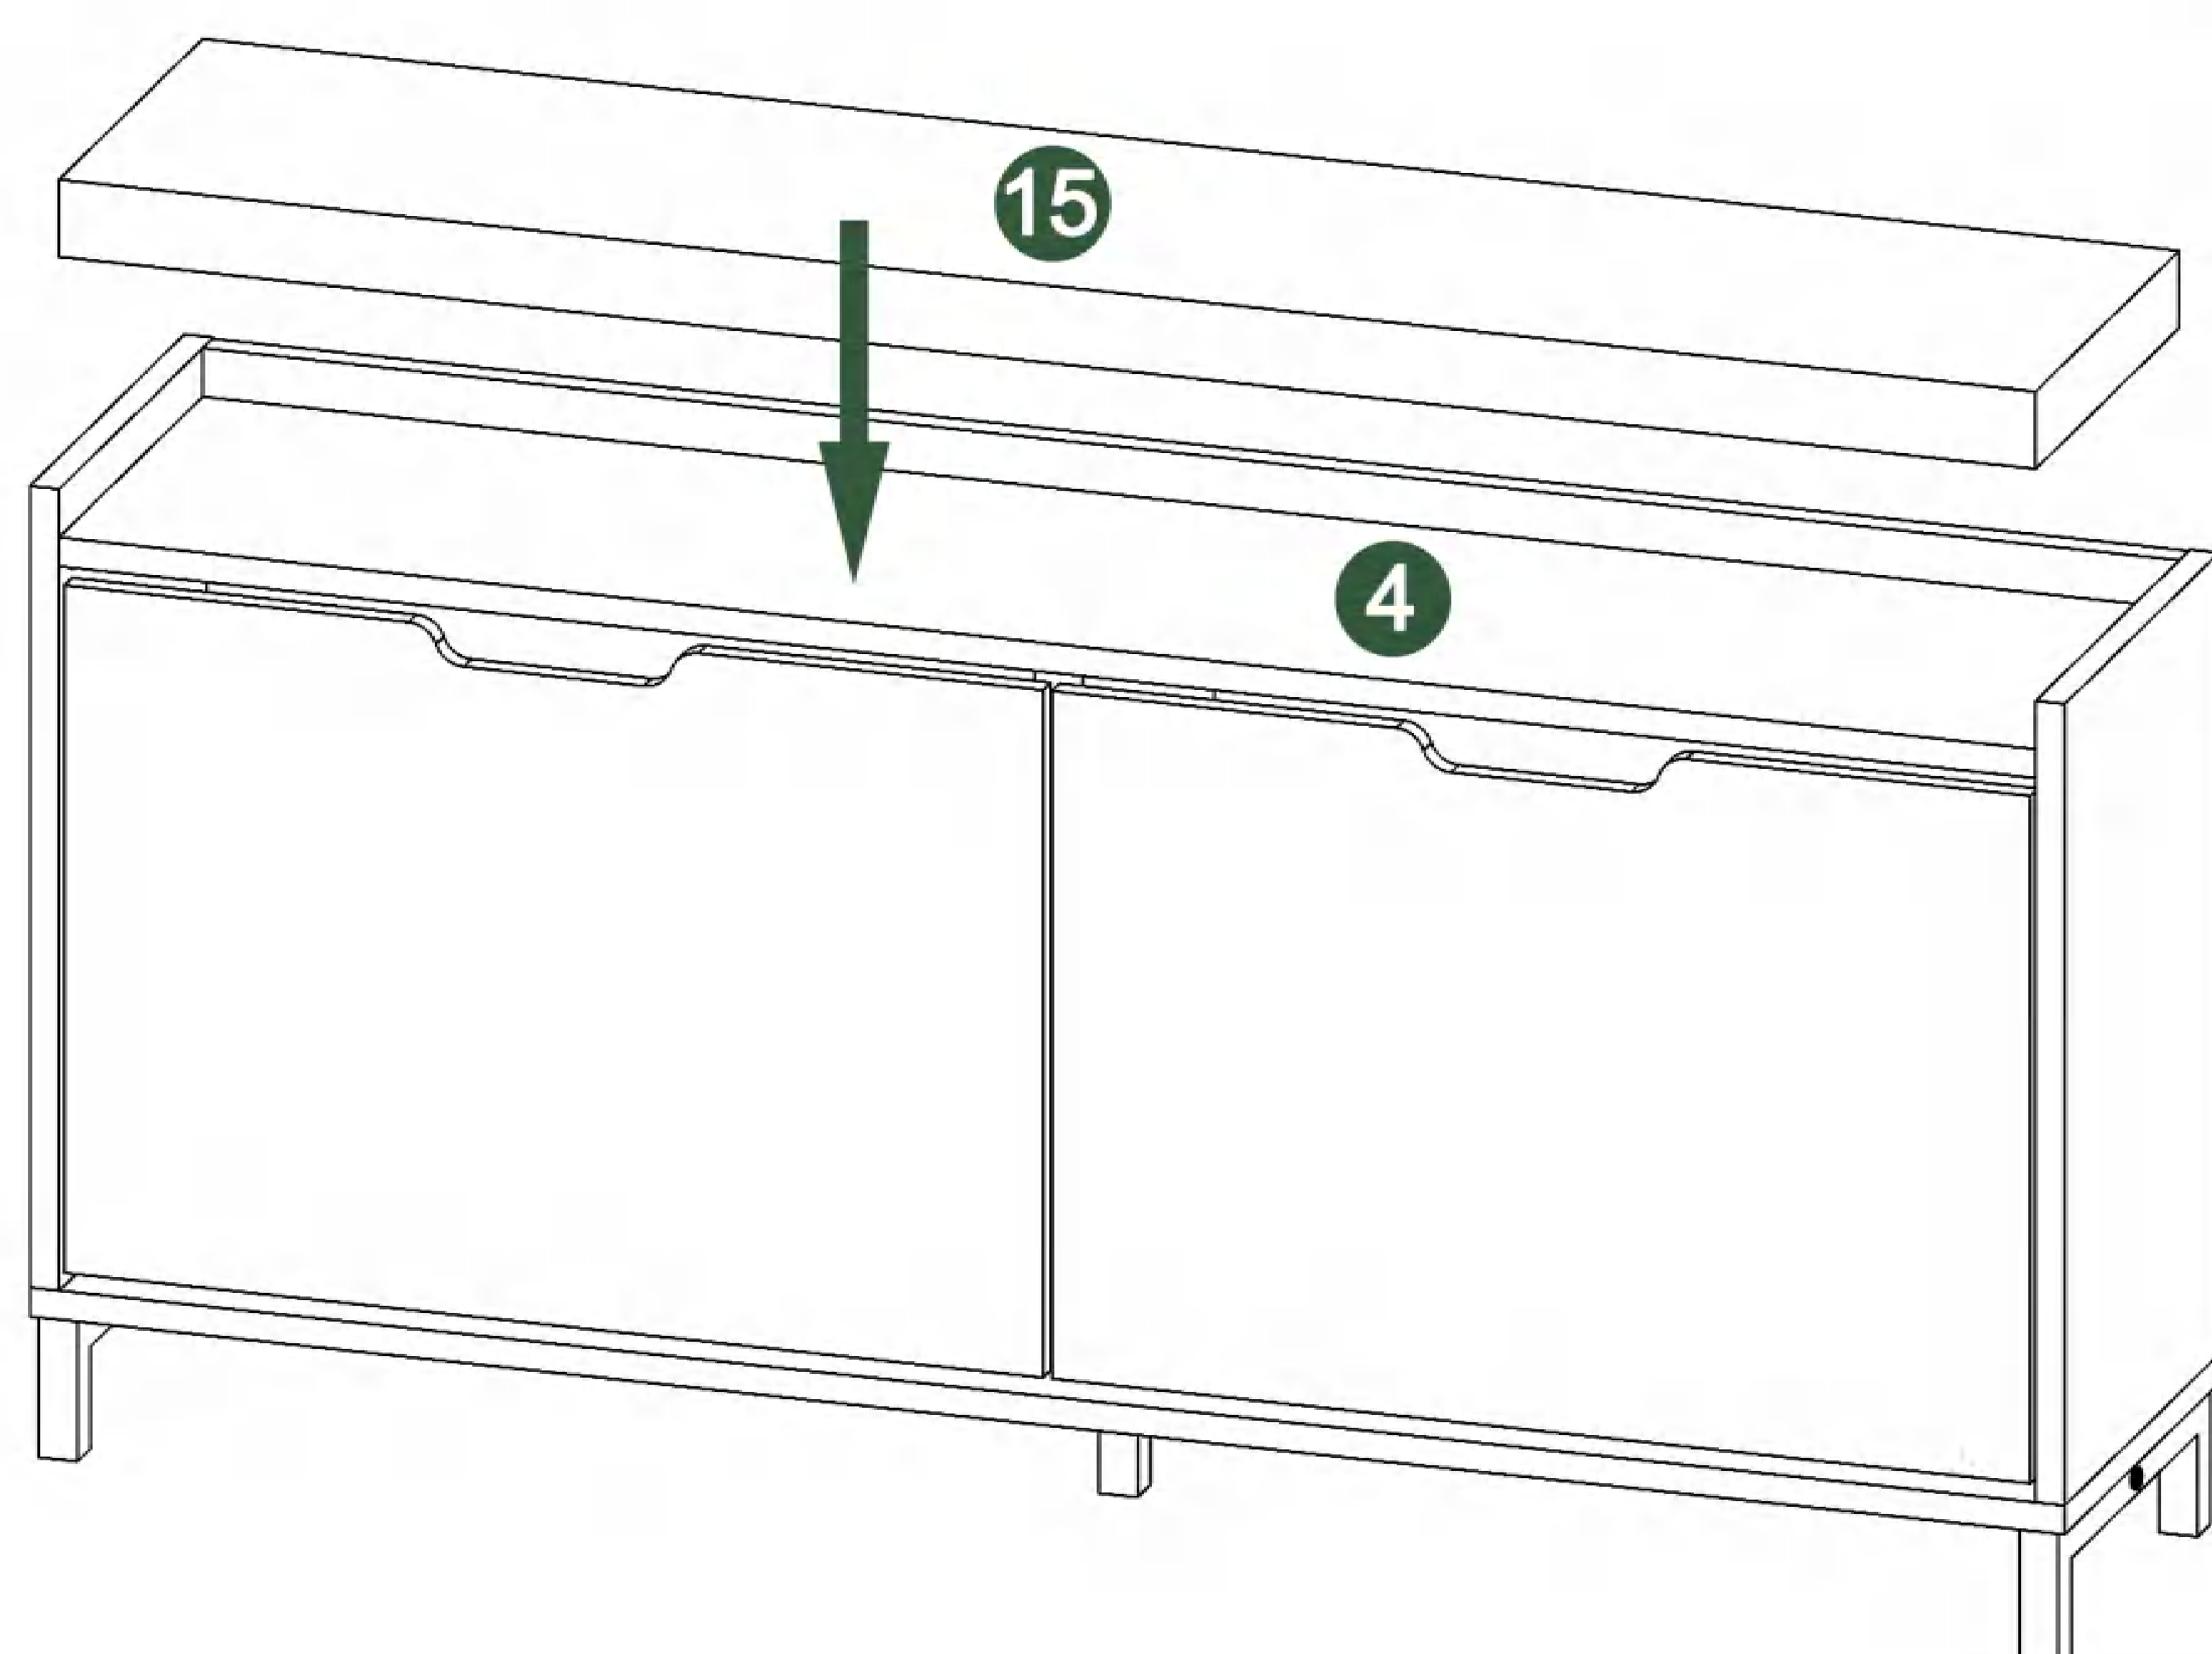



Scan the QR code to
answer a short survey



Scan the QR code to
share your review